



Manuals.plus /

› K&F CONCEPT /

› K&F CONCEPT Selfie Stick Tripod MS24 69-inch Extendable Light Stand User Manual

K&F CONCEPT MS24

K&F CONCEPT Selfie Stick Tripod MS24 User Manual

Model: MS24 (KF09.143)

1. INTRODUCTION

Thank you for choosing the K&F CONCEPT Selfie Stick Tripod MS24. This versatile accessory functions as both an extendable selfie stick and a stable tripod, designed to enhance your photography and videography experience. It features a 1/4-inch screw for broad compatibility, an integrated phone holder, an action camera adapter, and a detachable Bluetooth remote control. This manual provides essential information for proper setup, operation, and maintenance of your device.



Image 1.1: The K&F CONCEPT Selfie Stick Tripod MS24 in various usage modes.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Selfie Stick Tripod x 1
- Phone Clip x 1
- Action Cameras Adapter x 1
- Bluetooth Remote Controller x 1

3. PRODUCT OVERVIEW

The K&F CONCEPT Selfie Stick Tripod MS24 is designed for versatility and stability. Key components include the extendable pole, integrated tripod legs, a universal 1/4-inch screw mount, and a detachable Bluetooth remote.

Wide Compatibility

1/4"-20 Screw & Action Camera Adapter Compatible



Compatible with
DJI Pocket 3



Compatible with
Insta360 X5



Compatible with
Insta360 X4

Action Camera Adapter



Compatible with
DJI Action 5 Pro



Compatible with
GoPro Max2




Compatible with
GoPro 13




Image 3.1: Compatibility with various devices using the 1/4-inch-20 screw and action camera adapter. The tripod features a standard 1/4-inch screw thread at the top, allowing direct attachment of cameras, projectors, or other compatible devices. The included phone clip and action camera adapter expand its compatibility to smartphones and action cameras.

Wider and More Stable

Say goodbye to subtle shakes, lock in the perfect shot

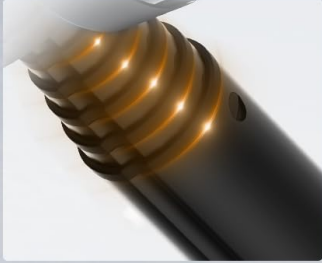

Damping rubber rings for firmer, more rigid extension tubes

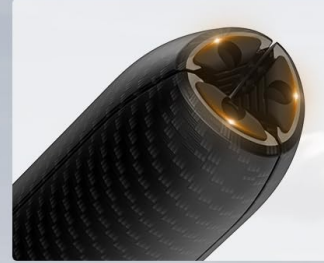

Non-slip silicone pads for a secure, wobble-free base



Image 3.2: Details of the damping rubber rings for tube stability and non-slip silicone pads on the tripod base. For enhanced stability, the extension tubes incorporate damping rubber rings, and the tripod legs are equipped with non-slip silicone pads. The base of the tripod, when fully extended, measures approximately 15.3 inches for a secure stance.

4. SETUP INSTRUCTIONS

- 1. Unfolding the Tripod Legs:** Hold the handle firmly and gently pull the three legs outwards until they lock into position, forming a stable base. Ensure the legs are fully spread for maximum stability.
- 2. Extending the Pole:** To extend the selfie stick, pull the top section upwards. The pole consists of 8 sections that can be extended to your desired height, up to a maximum of 69 inches (175 cm). To retract, push the sections back down.
- 3. Attaching Your Device:**
 - **For Smartphones:** Attach the phone clip to the 1/4-inch screw at the top of the pole. Secure your smartphone within the clip, ensuring it is held firmly.
 - **For Action Cameras:** Attach the action camera adapter to the 1/4-inch screw. Then, mount your action camera onto the adapter.

- **For Cameras/Projectors:** Directly screw your device onto the 1/4-inch screw mount. Ensure it is tightened securely.

4. Pairing the Bluetooth Remote Control:

- Turn on the Bluetooth remote control by pressing and holding the button until the indicator light flashes.
- On your smartphone, go to Bluetooth settings and search for available devices.
- Select "AB Shutter3" (or similar name) from the list to pair. The indicator light will stop flashing once paired.
- The remote is now ready to use for capturing photos or starting/stopping video recording.



Image 4.1: Pairing and using the Bluetooth remote control.

5. OPERATING INSTRUCTIONS

5.1. Using as a Selfie Stick

With the tripod legs folded, hold the handle and extend the pole to your desired length. Use the Bluetooth remote to capture photos or videos from a distance. The compact design allows for easy

portability.

5.2. Using as a Tripod

Unfold the tripod legs completely and place the unit on a flat, stable surface. Extend the pole to the required height. This mode is ideal for stable shots, group photos, or time-lapse videos.

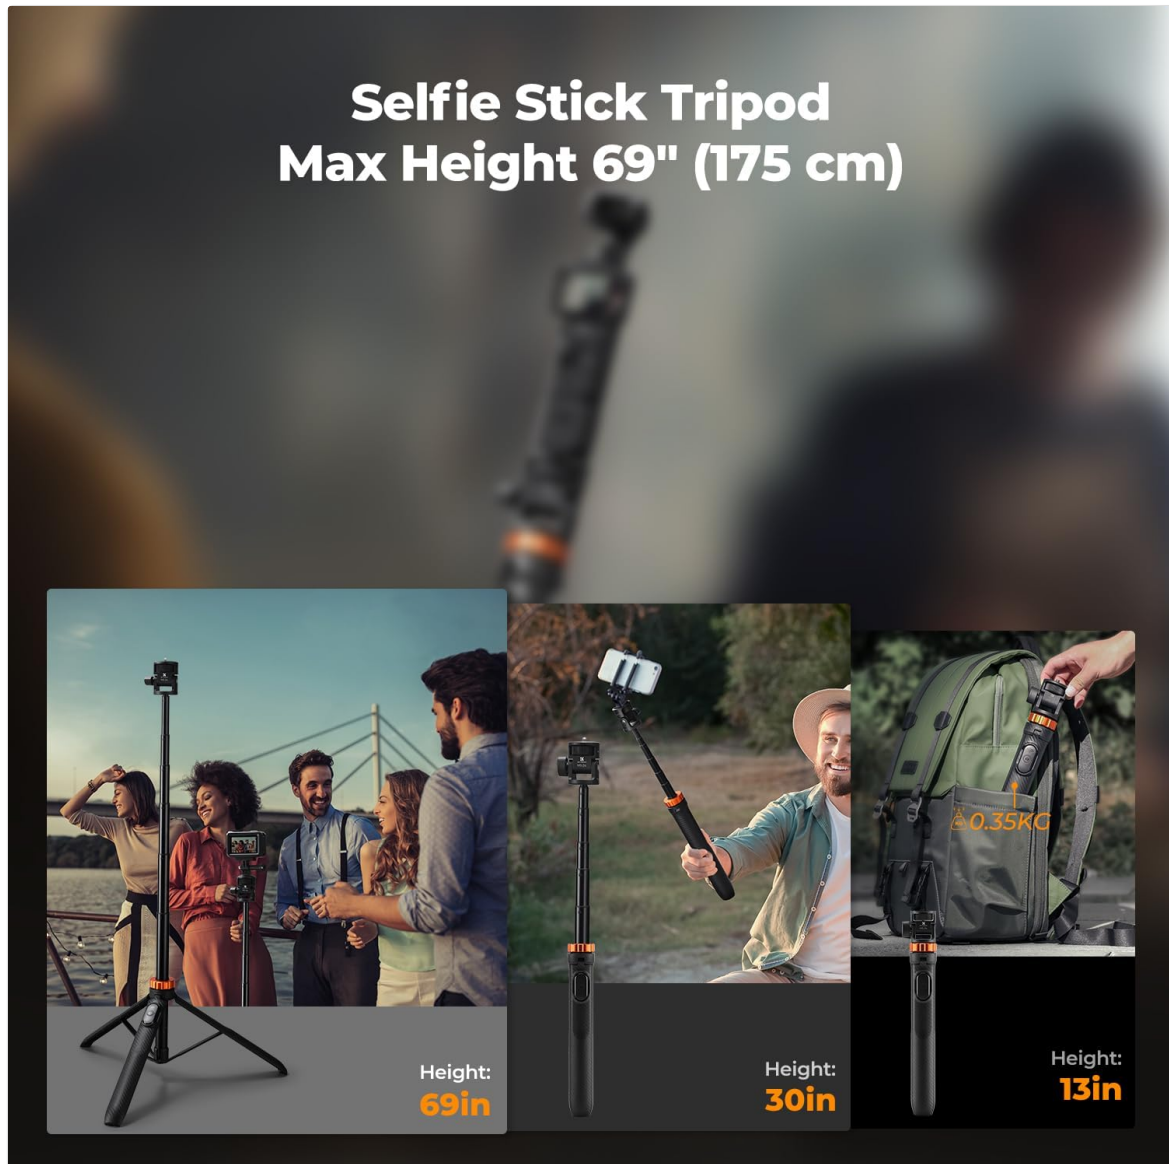



Image 5.1: The tripod's adjustable height from 13 inches (collapsed) to 69 inches (fully extended).

5.3. Adjusting Angle and Orientation

The device mount allows for flexible angle adjustments. You can tilt your device vertically by approximately ± 90 degrees. To switch between horizontal and vertical shooting modes for smartphones, rotate the phone clip as needed. The head can be fixed at any desired angle.

Switch between horizontal and vertical shooting modes in one second



 Not limited to horizontal and vertical- it can be fixed at any angle you desire

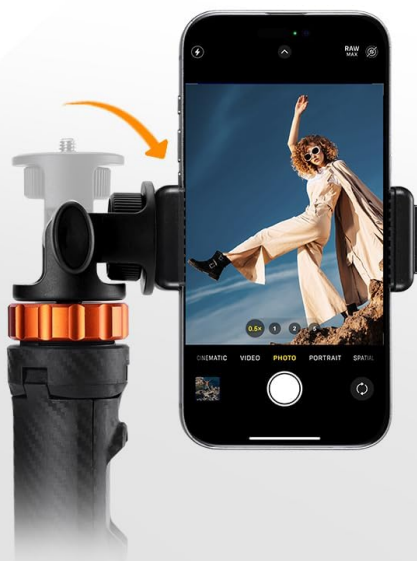


Image 5.2: Switching between horizontal and vertical shooting modes.

5.4. Using the Bluetooth Remote

Once paired, simply press the button on the remote to trigger your smartphone's camera shutter. The remote has an effective range of up to 10 meters (33 feet) and can operate continuously for approximately 10 hours on a single charge.

6. MAINTENANCE

- Clean the tripod and selfie stick with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Ensure the extension pole sections are free of dust and debris to maintain smooth operation.
- Store the device in a cool, dry place when not in use.
- Periodically check all screws and connections to ensure they are secure.
- The Bluetooth remote control contains a Lithium Metal battery. Follow local regulations for battery disposal.

7. TROUBLESHOOTING

- **Remote Control Not Connecting:**

- Ensure the remote is charged and turned on.
- Check your smartphone's Bluetooth settings to confirm Bluetooth is enabled.
- Unpair and re-pair the remote control if connection issues persist.
- Ensure the remote is within the 10-meter operating range of your device.

- **Tripod Stability Issues:**

- Ensure the tripod legs are fully extended and locked into position on a flat, stable surface.
- Verify that the attached device does not exceed the recommended weight limit of 1kg (2.2 lbs).
- Avoid using the tripod in strong winds, especially when fully extended.

- **Extension Pole Sticking:**

- Check for any debris or foreign objects in the pole sections.
- Clean the pole sections with a dry cloth. Do not apply lubricants.

8. SPECIFICATIONS

Feature	Detail
Model Name	MS24
Item Model Number	KF09.143
Maximum Height	175 cm (69 inches)
Minimum Height	35 cm (13 inches)
Product Dimensions	6.77 x 1.26 x 1.26 inches (collapsed)
Item Weight	0.38 Kilograms (13.4 ounces)
Recommended Load Capacity	1 kg (2.2 lbs)
Material	Aluminum
Tripod Head Type	Ball Heads
Compatible Devices	Cellphone, DJI OSMO 360/Pocket3, GoPro Hero 13/12/11/10/9/8/7, Projector, iPhone 17/16/15
Special Features	Foldable, Lightweight, Bluetooth Remote Control
Bluetooth Remote Battery	1 Lithium Metal battery (included)

9. WARRANTY AND SUPPORT

K&F CONCEPT products are manufactured to high-quality standards. For warranty information or technical support, please refer to the official K&F CONCEPT website or contact their customer service directly. Keep your purchase receipt as proof of purchase.