#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- COSORI /
- > COSORI Wireless Meat Thermometer + 12-in-1 Dual Blaze Air Fryer Instruction Manual

#### COSORI ea8cbcbe-74be-4623-a4a6-4f3790a953e7

# COSORI Wireless Meat Thermometer + 12-in-1 Dual Blaze Air Fryer Instruction Manual

#### **NTRODUCTION**

This manual provides essential instructions for the safe and efficient operation of your COSORI Wireless Meat Thermometer and 12-in-1 Dual Blaze Air Fryer. Please read all instructions thoroughly before first use and retain this manual for future reference.

# **IMPORTANT SAFETY INSTRUCTIONS**

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## WHAT'S IN THE BOX

Upon unpacking, please ensure all items are present and in good condition:

- COSORI 12-in-1 Dual Blaze Air Fryer
- · Wireless Meat Thermometer
- Thermometer Charging Base
- · User Manual (this document)

## **SETUP**



This image illustrates the COSORI Dual Blaze Air Fryer with its basket filled with fries, the wireless meat thermometer and its charging base, and a smartphone displaying the COSORI app. The app shows real-time temperature monitoring for the thermometer and cooking settings for the air fryer.

## **Air Fryer Initial Setup**

- 1. Place the air fryer on a stable, heat-resistant surface, ensuring adequate clearance from walls and other appliances.
- 2. Remove all packaging materials and stickers.
- 3. Clean the air fryer basket and crisper plate with warm, soapy water. Rinse and dry thoroughly.
- 4. Plug the air fryer into a grounded electrical outlet.

## **Wireless Meat Thermometer Setup**

- 1. Charge the wireless meat thermometer by placing it into its charging base. Ensure the base is connected to a power source.
- 2. Allow the thermometer to fully charge before first use.

# **App Connection (Control Method: App)**

- 1. Download the COSORI app from your device's app store.
- 2. Open the app and follow the on-screen instructions to create an account or log in.
- 3. Pair your COSORI Dual Blaze Air Fryer and Wireless Meat Thermometer with the app. This typically involves selecting the device model within the app and following the pairing prompts.

## **OPERATING INSTRUCTIONS**

## **Air Fryer Operation**

- The Dual Blaze Technology utilizes two heating elements to ensure even cooking and crispiness without the need for preheating or shaking during the cooking process.
- · Place food in the air fryer basket. Do not overfill.
- Select a cooking preset or manually set the temperature (up to 400°F) and time using the control panel or the COSORI app.
- Press the start button to begin cooking.
- The air fryer offers 12-in-1 functions, allowing for various cooking methods such as air frying, roasting, baking, and more. Refer to the app for specific program details.

## **Wireless Meat Thermometer Operation**

- Insert the thermometer probe into the thickest part of the meat, avoiding bone or gristle.
- Ensure the thermometer is properly paired with the COSORI app.
- The COSORI app provides real-time updates on cooking progress, displaying the internal temperature of your food.
- Dual sensors in the meat thermometer provide accurate temperature readings (±1.8°F) to ensure precise cooking results.
- The wireless design of the meat thermometer offers convenience for monitoring and simplifies cleaning and storage.

### MAINTENANCE AND CLEANING

## **Air Fryer Cleaning**

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The air fryer basket and crisper plate should be washed with warm, soapy water. They are not dishwasher safe.
- Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
- For stubborn food residue, soak the basket and crisper plate in warm, soapy water for 10-15 minutes before cleaning.

## **Wireless Meat Thermometer Cleaning**

- Wipe the thermometer probe with a damp cloth after each use.
- Do not immerse the entire thermometer or its charging base in water.
- Ensure the thermometer is completely dry before returning it to the charging base.

#### **TROUBLESHOOTING**

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Contact customer support if the issue persists.
Food is not cooking evenly.	Basket is overcrowded; incorrect temperature/time settings.	Avoid overcrowding the basket. Ensure proper temperature and time settings are selected for the food type. The Dual Blaze Technology minimizes this issue, but proper loading is still important.
Thermometer not connecting to app.	Bluetooth/Wi-Fi off; thermometer not charged; app issue.	Ensure your device's Bluetooth and Wi-Fi are enabled. Check if the thermometer is fully charged. Restart the app and try pairing again.
Inaccurate thermometer readings.	Probe not inserted correctly; thermometer malfunction.	Ensure the probe is inserted into the thickest part of the meat, away from bone. If issues persist, contact customer support.

# **SPECIFICATIONS**

Feature	Detail
Brand	COSORI
Model Number	ea8cbcbe-74be-4623-a4a6-4f3790a953e7
Control Method	Арр
Max Temperature Setting	400 Degrees Fahrenheit
Air Frying Technology	Dual Blaze Technology
Material	Ceramic, Metal, Plastic (Outer Material: Polypropylene)
Product Care Instructions	Wipe Clean
Dishwasher Safe	No
Color	Modern Grey

# WARRANTY AND SUPPORT

 
COSORI provides a limited warranty for this product. For detailed warranty information, product registration, or technical support, please refer to the official COSORI website or contact their customer service department. Please have your model number (ea8cbcbe-74be-4623-a4a6-4f3790a953e7) available when contacting

#### Related Documents - ea8cbcbe-74be-4623-a4a6-4f3790a953e7




#### COSORI Dual Blaze™ 6.4-Litre Smart Air Fryer User Manual

Comprehensive user manual for the COSORI Dual Blaze™ 6.4-Litre Smart Air Fryer (Model: CAF-P583S-KEU). Learn about setup, operation, safety, maintenance, and VeSync app features for healthier cooking.



## COSORI Smart Meat Thermometer User Manual - Accurate Cooking Guide

 Comprehensive user manual for the COSORI Smart Meat Thermometer (CMT-R161S). Learn about setup, usage, safety precautions, care, and warranty information for precise cooking.



#### COSORI Smart Meat Thermometer CMT-R161S Brukerhåndbok

Komplett brukerhåndbok for COSORI Smart Meat Thermometer (CMT-R161S). Lær om sikkerhet, bruk, oppsett og garanti. Tilgjengelig på flere språk for enkel tilgang.



## COSORI Dual Blaze™ 6.4-Litre Smart Air Fryer User Manual

Comprehensive user manual for the COSORI Dual Blaze™ 6.4-Litre Smart Air Fryer (Model: CAF-P583S-KEU). Learn about setup, operation, safety guidelines, maintenance, troubleshooting, and VeSync app integration for healthier, delicious meals.



## COSORI Dual Blaze™ 6.4-Litre Smart Air Fryer User Manual

User manual for the COSORI Dual Blaze™ 6.4-Litre Smart Air Fryer, model CAF-P583S-KTR. Includes setup, operation, safety precautions, troubleshooting, and warranty information.



## COSORI Dual Blaze 6.8-Quart Smart Air Fryer User Manual

Comprehensive user manual for the COSORI Dual Blaze 6.8-Quart Smart Air Fryer, detailing setup, operation, safety guidelines, troubleshooting, and maintenance for optimal use.