

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Revell](#) /
- › [Revell Ghost Driver Remote Control Toy Car User Manual \(Model 24682\)](#)

Revell 24682

Revell Ghost Driver Remote Control Toy Car User Manual

Model: 24682

1. PRODUCT OVERVIEW

The Revell Ghost Driver is a remote-controlled toy car designed for users aged 6 years and up. This vehicle features an elaborately printed body, LED lighting for enhanced visibility in low-light conditions, and a 2.4GHz remote control system for stable operation. Its compact size makes it suitable for both indoor and outdoor use.



Image: The Revell Ghost Driver RC car, showcasing its vibrant orange and multi-colored design.

2. WHAT'S INCLUDED

Please verify that all components are present in the packaging:

- Revell Control Ghost Driver Light Up RC Car

- 2.4 GHz Remote Control
- 5x AA Alkaline Batteries (for the car)
- Instruction Manual (this document)



Image: The Revell Ghost Driver RC car and its remote control, displayed within the product packaging.

3. SETUP

3.1 Battery Installation (RC Car)

1. Locate the battery compartment on the underside of the RC car.
2. Use a small screwdriver (not included) to open the battery compartment cover.
3. Insert 5 AA alkaline batteries, ensuring correct polarity (+/-). The batteries are included with the product.
4. Replace the battery compartment cover and secure it with the screw.

3.2 Battery Installation (Remote Control)

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert 2 AA alkaline batteries (not included, typically required for remote controls), ensuring correct polarity (+/-).
4. Replace the battery compartment cover.



Image: The 2.4 GHz remote control, showing its ergonomic design and control sticks.

3.3 Pairing the Remote Control

The RC car and remote control are typically pre-paired. If pairing is required or connection is lost:

1. Ensure both the RC car and remote control have fresh batteries installed.
2. Turn on the RC car using its power switch.
3. Turn on the remote control. The indicator light on the remote should blink.
4. Wait a few seconds for the remote control and car to establish a connection. The indicator light on the remote should become solid once paired.
5. If pairing fails, turn both devices off and repeat the steps.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

The 2.4 GHz remote control provides precise command over the vehicle:

- **Left Joystick (Forward/Backward):** Push forward to move the car forward. Pull backward to move the car in reverse.
- **Right Joystick (Left/Right):** Push left to turn the car left. Push right to turn the car right.

4.2 LED Lighting Feature

The Revell Ghost Driver is equipped with LED lighting. These lights activate automatically when the car is powered on, providing a unique visual effect, especially when operating in darker environments.



Image: The Revell Ghost Driver RC car illuminated by its internal LED lights, creating a glowing effect in the dark.

4.3 Speed

The RC car can reach speeds of approximately 7 km/h, offering an engaging experience for its intended age group.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the car and remote control. Avoid using water or chemical cleaners, as these can damage electronic components.
- **Storage:** When not in use for extended periods, remove all batteries from both the car and the remote control to prevent leakage and damage. Store the product in a cool, dry place away from direct sunlight.
- **Battery Care:** Always use fresh batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries responsibly.

6. TROUBLESHOOTING

- **Car not responding:** Ensure both the car and remote control are powered on and have fresh batteries. Re-attempt pairing if necessary. Check for any obstructions to the wheels or steering mechanism.
- **Poor range or interference:** The 2.4 GHz system is designed to minimize interference, but strong radio signals or multiple RC devices in close proximity can affect performance. Try operating in a different location.
- **Lights not working:** Verify the car's batteries are correctly installed and charged.

7. SPECIFICATIONS

Feature	Detail
Model Number	24682
Product Dimensions	6.89 x 3.54 x 2.95 inches
Item Weight	1.08 pounds
Recommended Age	6 years and up
Batteries (Car)	5 AA batteries (included)
Control Frequency	2.4 GHz
Max Speed	Approx. 7 km/h

8. SAFETY INFORMATION

WARNING: CHOKING HAZARD - SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

Always supervise children during operation. Keep fingers, hair, and loose clothing away from moving parts. Do not operate near roads, water, or in hazardous conditions. Do not modify the product or its components.

9. PRODUCT VIDEO

Your browser does not support the video tag.

Video: Official product video for the Revell Ghost Driver RC car, demonstrating its features and operation.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Revell website. Keep your purchase receipt as proof of purchase.