

[Manuals.plus](#) /

› [Just Play](#) /

› Just Play Disney Stitch Many Moods 14-inch Interactive Plush Instruction Manual

Just Play 11583

Just Play Disney Stitch Many Moods 14-inch Interactive Plush Instruction Manual

INTRODUCTION

Welcome to the world of Disney Stitch! This interactive plush toy, inspired by Disney's live-action Lilo & Stitch film, brings Stitch's personality to life with expressive LCD eyes and over 50 unique sounds and reactions. Designed for children aged 3 years and up, this manual provides essential information for setup, operation, and care to ensure optimal enjoyment.



Image: The Disney Stitch Many Moods 14-inch Interactive Plush, featuring blue fur, large pink-lined ears, and expressive LCD eyes.

SAFETY INFORMATION

Please read and understand all safety precautions before using this product.

- **Small Parts Warning:** This product may contain small pieces. Keep away from very young children who may put objects in their mouths.
- **Battery Safety:** Use only the specified battery type (3 x AA batteries). Ensure correct polarity when inserting

batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy will not be used for an extended period. Dispose of used batteries responsibly.

- **Supervision:** Adult supervision is recommended during play, especially for younger children.

SETUP

Battery Installation

The Disney Stitch Many Moods plush requires 3 x AA batteries (included). Follow these steps to install or replace batteries:

1. Locate the battery compartment on Stitch's foot.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 3 x AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Activating Full Play Mode

Stitch is initially set to "TRY ME" mode for in-store demonstration. To unlock his full range of emotions and interactions, you must switch him to "ON" mode.

1. Locate the switch on Stitch's back.
2. Slide the switch from "TRY ME" to "ON".
3. Stitch is now ready for interactive play!

Your browser does not support the video tag.

Video: This video demonstrates the various interactive features and modes of the Disney Stitch Many Moods plush, including how to switch from "TRY ME" to "ON" mode and activate different reactions by touching specific areas.

OPERATING INSTRUCTIONS

Stitch features over 50 sounds and reactions, with expressive LCD eyes that respond to various interactions. Explore his many moods by engaging with him in different ways:

- **Scratch his head:** Gently scratch Stitch's head to reveal his lovable and affectionate side. His eyes may show hearts or other happy expressions.



Image: A child hugging the Stitch plush, which displays a content expression on its LCD eyes, labeled "Cute and Fluffy!".

- **Rub his belly:** Rub Stitch's belly for playful antics and sounds. He might giggle or make other mischievous noises. You can also "feed" him by pressing his belly when he's hungry.



Image: The Stitch plush with its mouth open, displaying "Mmm" and "Stitch is Hangry!" on its LCD eyes, indicating hunger.

- **Jiggle, tilt, or hold upside down:** Move Stitch around, jiggle him, or hold him upside down to activate silly phrases, sound effects, and animated eye reactions. Be mindful not to overdo the bouncing, as it might make him grumpy!



Image: A child holding the Stitch plush upside down, with its LCD eyes displaying a dizzy, swirling pattern, and text "Wiggle Stitch and watch him get dizzy!".

- **Rock him gently:** When it's time to wind down, gently rock Stitch to hear adorable yawns and snores as his eyes close for sleep. He makes a sweet companion for bedtime.

Your browser does not support the video tag.

Video: This video demonstrates the Disney Stitch Ultimate Stitch Interactive Plush, showcasing its various sounds, reactions, and interactive play features in different scenarios.

Your browser does not support the video tag.

Video: This video highlights the interactive sounds and actions of the Disney Lilo & Stitch plush, showing how it responds to touch and movement.

MAINTENANCE

- **Cleaning:** Surface wash only. Do not immerse Stitch in water. Use a damp cloth with mild soap to clean soiled areas, then air dry.

- **Storage:** Store Stitch in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Always remove batteries if the toy is to be stored for an extended period to prevent leakage and damage.

TROUBLESHOOTING

Problem	Solution
Stitch is not responding or has limited reactions.	◦ Ensure the switch on Stitch's back is set to "ON" mode, not "TRY ME". ◦ Check the batteries. Replace with fresh AA batteries if they are low or depleted.
Sounds are distorted or too quiet.	◦ Replace the batteries with new ones.
LCD eyes are not displaying correctly.	◦ Replace the batteries. ◦ If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	9.88 x 5 x 12.85 inches
Item Weight	1.21 pounds
Model Number	11583
Manufacturer Recommended Age	36 months - 8 years
Batteries	3 AAA batteries required (included)
Manufacturer	Just Play
Interactive Features	LCD eyes, 50+ sounds & effects, touch and motion activated reactions.

WARRANTY AND SUPPORT

For warranty information or customer support regarding your Disney Stitch Many Moods Interactive Plush, please refer to the packaging or contact Just Play customer service directly. Contact details can typically be found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question