

[Manuals.plus](#) /

› [SWAN](#) /

› Swan SD10518BLK Dual Basket Digital Air Fryer User Manual

SWAN SD10518BLK

Swan SD10518BLK Dual Basket Digital Air Fryer User Manual

Model: SD10518BLK

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance and retain them for future reference. Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not operate the appliance with a damaged cord or plug.
- Always unplug the appliance when not in use and before cleaning.
- Allow the appliance to cool completely before cleaning or storing.
- Do not place the appliance near hot gas or electric burners, or in a heated oven.
- Ensure adequate ventilation around the appliance during use.
- Do not cover the air inlet or outlet vents during operation.
- Use only accessories recommended by the manufacturer.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Swan SD10518BLK Dual Basket Digital Air Fryer utilizes Swan Cyclone Technology for efficient, healthier cooking with less oil. It features two independent cooking baskets and a digital control panel with pre-set functions.



Image: Front view of the Swan SD10518BLK Dual Basket Digital Air Fryer, showcasing its sleek black design, digital display, and two front-facing handles for the cooking baskets.

Key Components:

- **Digital Control Panel:** Intuitive touch controls for temperature, time, and pre-set functions.
- **Dual Cooking Baskets:** Two independent 3.8L non-stick baskets for cooking different foods simultaneously.
- **Air Inlet/Outlet Vents:** Located at the rear and top for proper air circulation.
- **Power Cord:** For connecting to a mains power supply.

7.6L DUAL BASKET AIR FRYER

with

CYCLONE
TECHNOLOGY



Digital screen with
8 one-touch function



Dual baskets for
independent cooking



Non-stick, easy
to clean baskets

Swan
designed for life



**Less Fat.
More Flavour.**

The healthier way to fry, cook,
grill and bake using minimal oil.

*Uses 90% less oil than a standard deep fryer

Image: The Swan 7.6L Dual Basket Air Fryer on a kitchen counter, with callouts highlighting its digital screen with 8 one-touch functions, dual baskets for independent cooking, and non-stick, easy-to-clean baskets.



Image: An illustrative diagram of the Swan Dual Basket Air Fryer showing the internal hot air circulation, emphasizing the "Swan Cyclone Technology" for fast and energy-efficient cooking with less oil.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Cleaning:** Before first use, wipe the exterior of the air fryer with a damp cloth. Wash the cooking baskets and crisper trays with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm of clear space around the back and sides of the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.

OPERATING INSTRUCTIONS

Basic Operation:

1. Place food into the cooking baskets. Do not overfill.
2. Slide the baskets firmly back into the air fryer.
3. Press the Power button to turn on the display.
4. Select a pre-set cooking function or manually adjust temperature and time using the control panel.
5. Press the Start/Pause button to begin cooking.
6. Shake or flip food halfway through cooking for even results, if necessary.
7. Once cooking is complete, carefully remove the baskets and transfer food.

Smart Finish Dual Baskets:

The Smart Finish function allows you to cook two different foods at different temperatures and times, ensuring both are ready simultaneously.



Image: A close-up view of the Swan Dual Basket Air Fryer's interior, showing one basket with fried chicken and the other with french fries, illustrating the "Smart Finish Duo Baskets" feature for cooking two different foods simultaneously.

1. Load each basket with desired food.
2. Select the "Smart Finish" option on the control panel.

3. Set the desired temperature and time for each basket (Left and Right).
4. The air fryer will automatically adjust the cooking start times for each basket so they finish at the same moment.

Match Cook Synchronised Heating:

The Match Cook function synchronizes both baskets to cook at the same temperature and time, ideal for larger batches of a single food type.

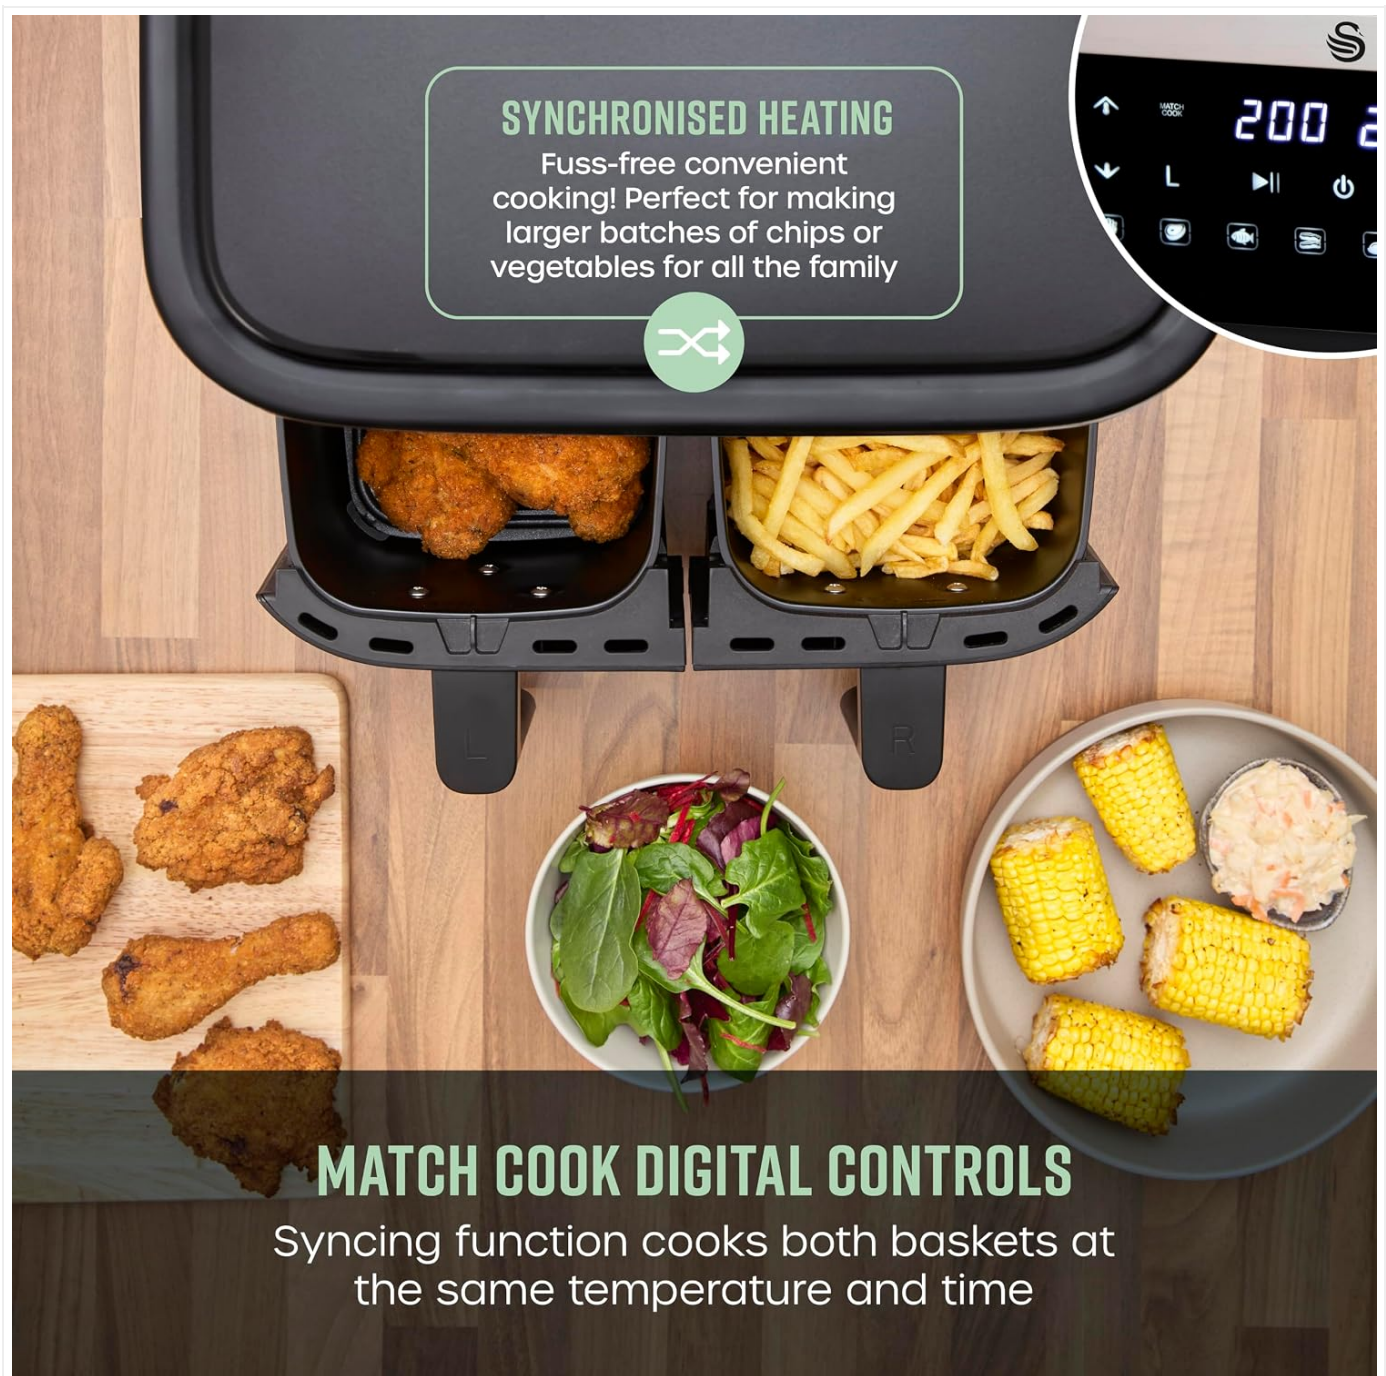


Image: A top-down view of the Swan Dual Basket Air Fryer with food in both baskets, highlighting the "Synchronised Heating" and "Match Cook Digital Controls" features, which allow both baskets to cook at the same temperature and time.

1. Load both baskets with the same type of food.
2. Select the "Match Cook" option.
3. Set the desired temperature and time. Both baskets will operate identically.

Pre-Set Cooking Options:

The air fryer includes 8 pre-set cooking functions for common foods:

- Fries

- Steak
- Fish
- Bacon
- Chicken
- Bake
- Vegetables
- Dehydrate

Simply select the desired pre-set, and the air fryer will automatically set the optimal temperature and time. These can be adjusted manually if needed.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Baskets and Trays:** The non-stick cooking baskets and crisper trays are dishwasher safe, but hand washing with warm, soapy water is recommended to preserve the non-stick coating. Use a non-abrasive sponge.
3. **Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn residue, use a mild detergent. Do not use abrasive cleaners or metal scouring pads.
4. **Exterior:** Clean the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food debris. Ensure the appliance is completely cool and unplugged.
6. **Storage:** Store the air fryer in a cool, dry place when not in use. Ensure all parts are clean and dry before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet not working; appliance damaged.	Ensure plug is fully inserted. Test outlet with another appliance. Contact customer support if damaged.
Food is not cooked evenly.	Baskets overloaded; food not shaken/flipped.	Do not overload baskets. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean baskets and interior thoroughly. For high-fat foods, drain excess fat during cooking.
Appliance emits unusual odor.	First use odor; food residue.	Normal for first few uses. Ensure appliance is clean. If odor persists or is strong, unplug and contact support.

SPECIFICATIONS

- Brand:** SWAN
- Model:** SD10518BLK
- Capacity:** 7.6 Litres (Dual 3.8L Baskets)
- Power:** 2850 Watts
- Voltage:** 240 Volts
- Colour:** Black
- Product Dimensions:** 36.5 x 36.6 x 31.6 cm (D x W x H)
- Item Weight:** 7.1 kg
- Special Features:** Temperature Control, Timer, Automatic Shut-Off, Swan Cyclone Technology, Smart Finish, Match Cook

Material: Composite

PRODUCT DIMENSIONS



Image: A diagram illustrating the product dimensions of the Swan Dual Basket Air Fryer, showing its height (32cm), depth (37cm), and width (37cm).

WARRANTY AND SUPPORT

This Swan SD10518BLK Dual Basket Digital Air Fryer comes with a **2-year manufacturer guarantee** from the date of purchase. This guarantee covers manufacturing defects and faulty materials under normal household use.

To register your product or for technical support and warranty claims, please visit the official SWAN website or contact their customer service department. Keep your proof of purchase for warranty validation.



2 year
GUARANTEE

We're proud
of our quality

Image: A grey heart-shaped logo with "2 year GUARANTEE" text, indicating the product's warranty period.

For further assistance, you may refer to the official SWAN website: www.swan-brand.co.uk

© 2025 SWAN. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question