

[manuals.plus](#) /› [RadioShack](#) /› [RadioShack True Wireless Outdoor Speaker \(Model 4001765-PRNT\) Instruction Manual](#)

RadioShack 4001765-PRNT

RadioShack True Wireless Outdoor Speaker Instruction Manual

Model: 4001765-PRNT

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your RadioShack True Wireless Outdoor Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

The RadioShack True Wireless Outdoor Speaker is designed to deliver clear, dynamic audio in various environments. Its portable and weatherproof design makes it suitable for outdoor use, while True Wireless Stereo (TWS) functionality allows for an enhanced audio experience.

2. PRODUCT OVERVIEW

2.1 What's in the Box

- RadioShack True Wireless Outdoor Speaker
- Charging Cable
- Audio Cable

What's in the box:



Speaker



User manual



Charging cable

Figure 1: Included components of the speaker package.

2.2 Key Features

- **9W Audio Output:** Delivers crisp, clear sound with dynamic range.
- **True Wireless Stereo (TWS):** Allows pairing of two speakers for a stereo sound experience.
- **Weatherproof Design (IPX6):** Resistant to water splashes, dust, and impacts, suitable for outdoor use.
- **Portable and Compact:** Lightweight design for easy transport.
- **Long-Lasting Battery:** Built-in rechargeable battery for extended playback.
- **Multiple Connectivity Options:** Bluetooth 5.0, AUX input, and USB playback.

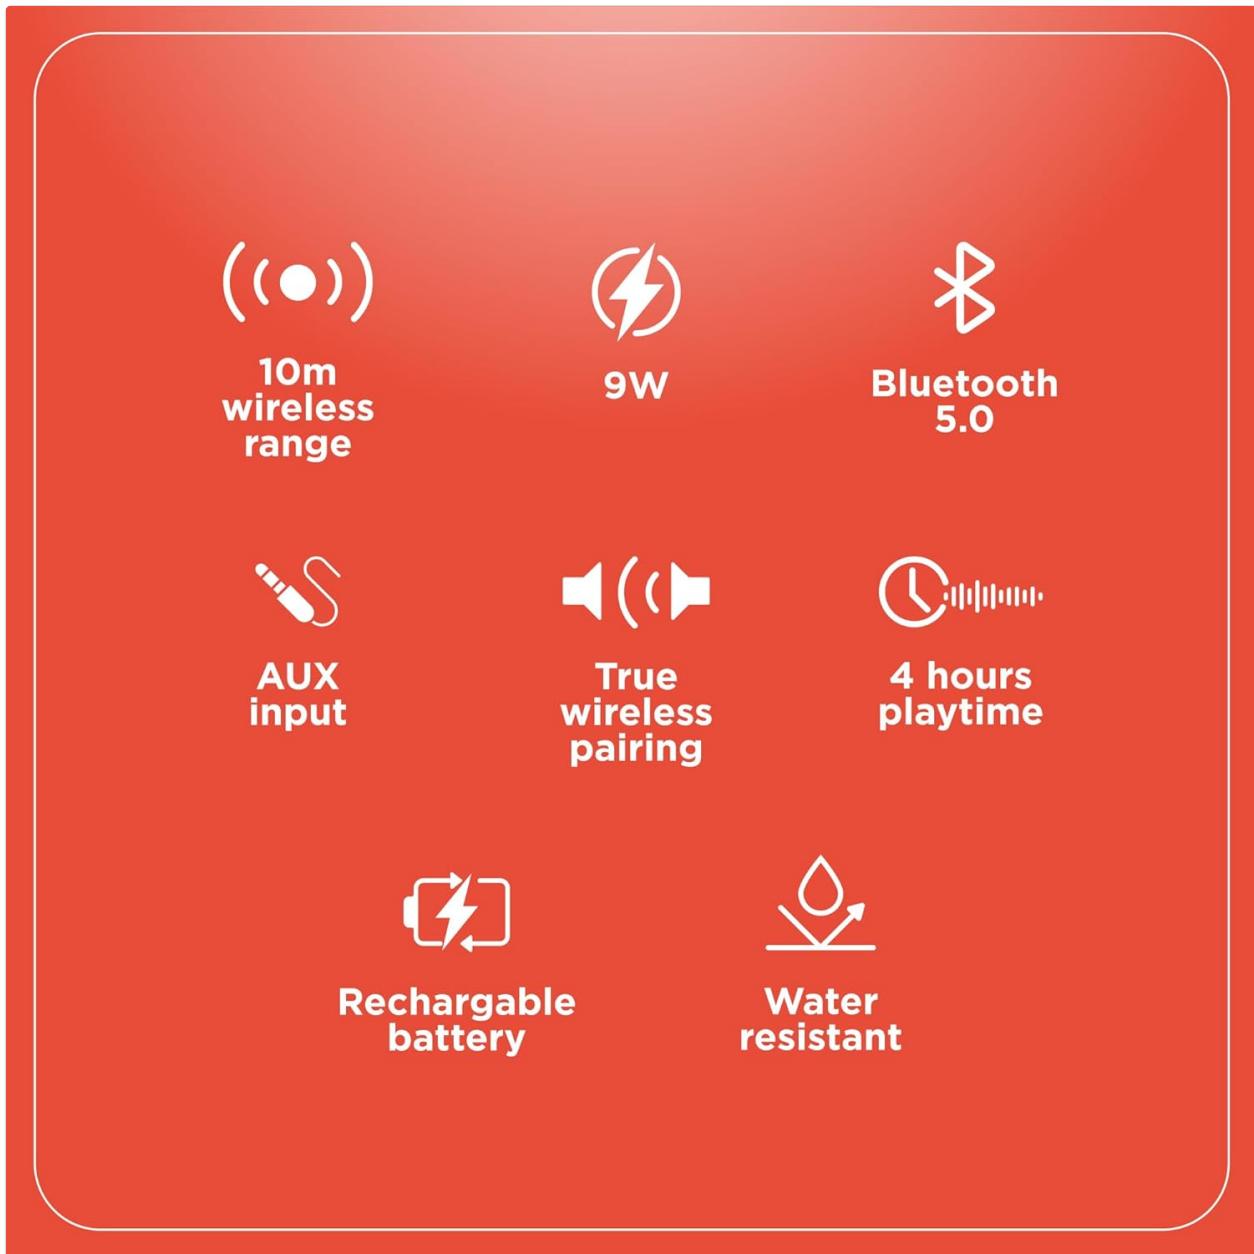


Figure 2: Overview of the speaker's main features and capabilities.

2.3 Controls and Ports

The speaker features intuitive controls and essential ports for various functions.

- **Power Button:** Turns the speaker on or off.
- **Mode Button (M):** Switches between Bluetooth, AUX, and USB/microSD modes.
- **Play/Pause Button:** Controls audio playback.
- **Volume Up/Next Track Button (V+):** Increases volume with a short press, skips to the next track with a long press.
- **Volume Down/Previous Track Button (V-):** Decreases volume with a short press, goes to the previous track with a long press.
- **microSD Card Slot:** For playing audio from a microSD card.
- **USB Port:** For playing audio from a USB drive.
- **DC 5V Port:** For charging the speaker.
- **AUX Input:** For wired audio connection using the included audio cable.



Bluetooth, AUX, and USB connectivity

Figure 3: Detailed view of the speaker's control panel and connectivity ports.

3. SETUP

3.1 Initial Charging

1. Before first use, fully charge the speaker.
2. Connect the included charging cable to the DC 5V port on the speaker.
3. Connect the other end of the charging cable to a USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate. Once fully charged, the light will change or turn off (refer to specific product indicator behavior).

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button until you hear an audible prompt or see the indicator light illuminate.
- **To Power Off:** Press and hold the Power button again until you hear an audible prompt or the indicator light turns off.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode. The indicator light will typically flash rapidly. If not, press the 'M' (Mode) button to switch to Bluetooth mode.
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "RadioShack Speaker" (or similar name) from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the indicator light will stop flashing and remain solid.
5. You can now play audio from your device through the speaker.

4.2 True Wireless Stereo (TWS) Pairing

To use two RadioShack True Wireless Outdoor Speakers together for stereo sound:

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be your primary speaker), press and hold the 'M' (Mode) button for a few seconds until you hear a TWS pairing prompt.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in section 4.1.
5. Audio will now play in stereo across both speakers.

4.3 AUX Input Playback

1. Connect one end of the included 3.5mm audio cable to the AUX input port on the speaker.
2. Connect the other end of the audio cable to the headphone jack of your audio device.
3. Press the 'M' (Mode) button on the speaker until it switches to AUX mode.
4. Play audio from your connected device. Volume can be controlled via both the speaker and your device.

4.4 USB/microSD Playback

1. Insert a USB drive into the USB port or a microSD card into the microSD slot.
2. Press the 'M' (Mode) button on the speaker until it switches to USB or microSD mode.
3. The speaker will automatically begin playing audio files from the inserted storage device.

5. MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to extreme temperatures, direct sunlight, or excessive humidity.
- While the speaker is weatherproof (IPX6), avoid submerging it in water. Ensure port covers are securely closed when near water.
- Store the speaker in a cool, dry place when not in use for extended periods.

Waterproof speaker

IPX6 rating



Figure 4: The speaker's weatherproof design allows for use in outdoor environments like by a pool.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or already connected to another device. Device's Bluetooth is off.	Ensure speaker is in Bluetooth pairing mode (flashing indicator). Disconnect from other devices. Turn on Bluetooth on your device.
No sound.	Volume is too low. Incorrect input mode. Device is not playing audio.	Increase speaker and device volume. Press 'M' to select correct input mode (Bluetooth, AUX, USB/microSD). Ensure audio is playing on your source device.

Problem	Possible Cause	Solution
TWS pairing fails.	Speakers are too far apart. One speaker is already connected to a device.	Ensure speakers are within close proximity. Disconnect both speakers from any Bluetooth devices before initiating TWS pairing.
Poor audio quality.	Bluetooth device is too far from the speaker. Obstructions between devices.	Move the Bluetooth device closer to the speaker. Remove any obstructions.

7. SPECIFICATIONS

Feature	Detail
Model Name	TWS Outdoor Speaker 9 watts
Model Number	4001765-PRNT
Brand	RadioShack
Speaker Type	Outdoor
Mounting Type	Tabletop Mount
Audio Output Power	9 Watts (14 Watts Max)
Wireless Communication	Bluetooth 5.0
Connectivity Technology	Bluetooth, Auxiliary (3.5mm), USB, microSD
Compatible Devices	Laptop, Smartphone, Tablet
Waterproof Rating	IPX6
Power Source	Battery Powered (Rechargeable)
Input Voltage	5 Volts
Control Method	Touch Buttons
Product Dimensions	12"D x 5.5"W x 6.25"H
Item Weight	2.4 Pounds
Color	Black

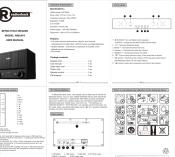
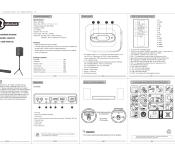
8. WARRANTY AND SUPPORT

This RadioShack True Wireless Outdoor Speaker comes with a limited warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage duration and how to make a claim.

For technical support, troubleshooting assistance, or warranty inquiries, please visit the official RadioShack website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.

Online Support: [Visit the RadioShack Store on Amazon](#)

Related Documents - 4001765-PRNT

	<p>RadioShack 4001942 & 4001944 Dual PA Speaker User Manual</p> <p>User manual for RadioShack 4001942 and 4001944 Dual 10-inch and 15-inch 2-way PA Speakers. Includes specifications, packing contents, amplifier control panel details, MP3 player functions, remote control guide, Bluetooth pairing, and important safety/FCC information.</p>
	<p>RadioShack TCR-200 Telephone Cassette Recorder Owner's Manual</p> <p>Comprehensive user guide for the RadioShack TCR-200 Telephone Cassette Recorder. Learn about its features, installation, operation, maintenance, and important legal considerations for recording phone calls.</p>
	<p>Radioshack 4001974 Retro Style Speaker User Manual</p> <p>Comprehensive user manual for the Radioshack 4001974 Retro Style Speaker. Learn about its specifications, features, front panel controls, remote operation, Bluetooth pairing, rear panel connections, and important usage guidelines.</p>
	<p>RadioShack 2607147 Wireless Keyboard User Manual</p> <p>User manual for the RadioShack 2607147 Wireless Keyboard, detailing specifications, features, and FCC compliance information.</p>
	<p>RadioShack 4001976 Soundbar Speaker User Manual</p> <p>User manual for the RadioShack 4001976 Soundbar Speaker, providing operating instructions, specifications, and connection diagrams.</p>
	<p>Radioshack Cell Phone Stand with Wireless Charger User Manual</p> <p>User manual for the Radioshack Cell Phone Stand with Wireless Charger, model 2733350. Includes instructions for use, indicator descriptions, precautions, product parameters, and FCC statement in English and Spanish.</p>

