

[Manuals.plus](#) /

› [TIMNUT](#) /

› TIMNUT 4K 60FPS Waterproof Action Camera User Manual

## TIMNUT Q60

# TIMNUT 4K 60FPS Waterproof Action Camera User Manual

Model: Q60 | Brand: TIMNUT

## 1. INTRODUCTION

This manual provides detailed instructions for the TIMNUT 4K 60FPS Waterproof Action Camera, Model Q60. Designed for capturing high-quality video and photos in various environments, including underwater, this camera features advanced stabilization, a responsive touchscreen, and Wi-Fi connectivity. Please read this manual thoroughly to ensure proper operation and maintenance of your device.

## 2. WHAT'S IN THE BOX

Verify that all items are present in your package:

- 1 x TIMNUT 4K 60FPS Waterproof Action Camera
- 1 x 64G SD card
- 2 x 1350 mAh batteries
- 1 x Charger
- 1 x Remote control
- A large selection of attachments and chains (various mounts and accessories)

# Long Lasting Battery Life

**1350 mAh | FREE 64GB Card**



Image: Camera with battery and 64GB SD card.

## 3. SETUP

### 3.1. Battery Installation

1. Locate the battery compartment on the bottom of the camera.
2. Open the compartment cover.
3. Insert the 1350 mAh battery, ensuring the contacts align correctly.
4. Close the battery compartment cover securely.

### 3.2. SD Card Insertion

1. Locate the SD card slot, typically next to the battery compartment.
2. Insert the provided 64GB Micro SD card with the contacts facing down until it clicks into place.
3. To remove, press the card gently until it pops out.

### 3.3. Powering On/Off

- To power on, press and hold the Power button (usually on the side) for a few seconds until the screen illuminates.
- To power off, press and hold the Power button again until the screen turns off.

### 3.4. Initial Charging

Before first use, fully charge both batteries using the provided charger. The charging indicator light will change once charging is complete.

### 3.5. Wi-Fi and App Control

The camera supports Wi-Fi connectivity for easy control via your smartphone. Download the dedicated app (refer to the QR code in the quick start guide or product packaging for app details). Once installed, connect your phone to the camera's Wi-Fi network to control settings, view live footage, and transfer files.



Image: Front and back view of the action camera.



Image: Touchscreen interface for easy navigation.

***If you're looking for a much more affordable action camera***

**1.All the Excitement in ONE Camera.**

*TIMNUT camera an even more polished, feature-packed yet user-friendly action camera.*

**2.Wifi & APP Control Camera**

*You can download fun DV to keep and share your exciting sports moments on your phone or tablet, WIFI signal range up to 10M(33 FT).*

Image: Wi-Fi connectivity for app control.

## 4. OPERATING

### 4.1. Video Recording

- Switch to video mode using the mode button or touchscreen.
- Press the Shutter/Record button to start recording. Press again to stop.
- The camera supports 4K 60FPS video resolution for high-quality footage.
- Utilize the **12s Pre-recording** feature to capture moments before you even press record. This ensures you don't miss critical action.

## 12S PRE-RECORDING

Missed the highlights? Didn't get the shot you wanted? Pre-recording allows you to travel through time.



Image: 12-second pre-recording feature.

### 4.2. Photo Capture

- Switch to photo mode.
- Press the Shutter/Record button to take a 48MP photo.
- The camera offers excellent **48MP HD Color Performance**, ensuring crisp and detailed images even in challenging conditions.

# 48MP HD Color Video/Photo

Stabilizes action shots, minimizes ghosting and boosts details in the highlights and shadows for vibrant daytime shots.



Image: Enhanced photo quality comparison.

## 4.3. 6-Axis Stabilization

The camera is equipped with advanced **6-axis stabilization (EIS)** technology, ensuring your videos remain smooth and steady even during dynamic activities. This is particularly useful for action shots where camera shake is common.

# 6-axis Stabilisation

Suitable for dynamic video recording



Image: 6-axis stabilization in action.

## 4.4. Waterproof Use

The TIMNUT Action Camera is designed to be waterproof up to **10 meters (33 feet) without an additional case**. This makes it ideal for watersports like swimming, surfing, and diving. Ensure all ports are securely closed before submerging the camera.

# Underwater camera **33ft** without case



Image: Camera's waterproof capability.

## 4.5. Special Features

- **Low Light Performance:** The camera features an enhanced imaging sensor (1/1.3-inch) for superior performance in low light conditions, reducing blur and maintaining detail.

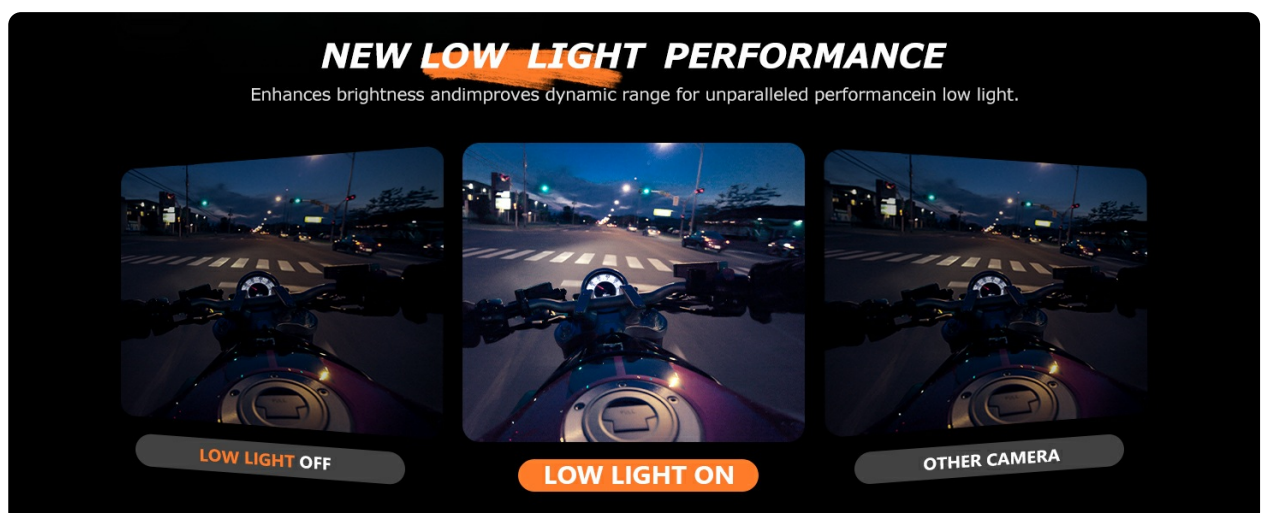 


Image: Low light performance comparison.

- **8X Zoom:** Utilize the 8X digital zoom to focus on distant subjects while maintaining clarity.



Image: 8X zoom capability.

- **Dual Screen:** The camera features both a rear touchscreen and a front-facing screen, ideal for vlogging and framing self-shots.
- **Horizontal/Vertical Switching:** Easily switch between horizontal (16:9) and vertical (9:16) shooting modes to suit your content needs.

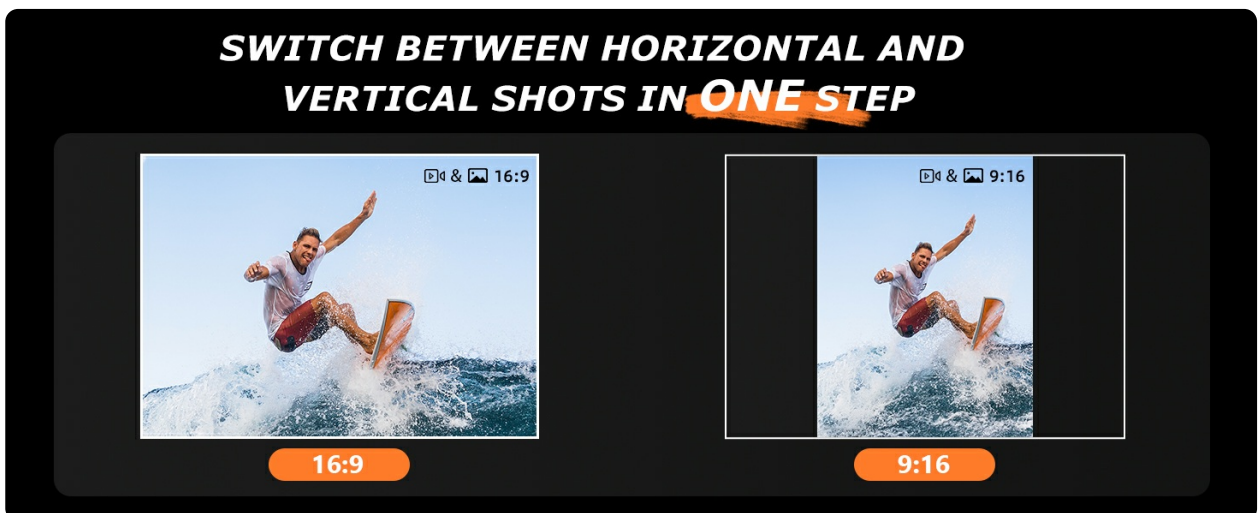 


Image: Switching between horizontal and vertical shots.

- **Wide Angle Lens:** Capture expansive landscapes and broader scenes with the wide-angle lens.
- Other features include slow motion photography, driving mode, image flipping, time-lapse photo, exposure adjustment, and white balance adjustment.

# 48 MP Color Performance Capture with Clarity



6-axis  
Stabilisation



8x  
Zoom



12s  
Pre-recording



4K 60fps  
Video



48MP  
Photo



Image: Overview of camera features.



 
Snorkeling



Cycling



Boating

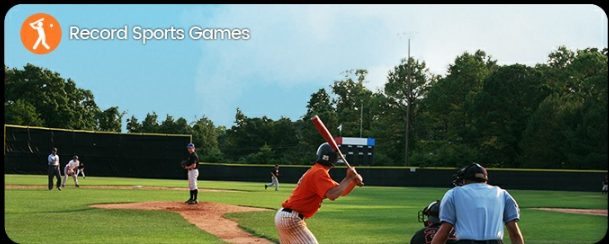

Record Sports Games

Image: Versatile usage scenarios.

## 5. MAINTENANCE

### 5.1. Cleaning the Camera

- After using the camera in water, rinse it with fresh water and dry thoroughly with a soft, lint-free cloth.
- Do not use harsh chemicals or abrasive materials for cleaning.
- Clean the lens with a specialized lens cleaning cloth to avoid scratches.

### 5.2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- Do not expose batteries to extreme temperatures.

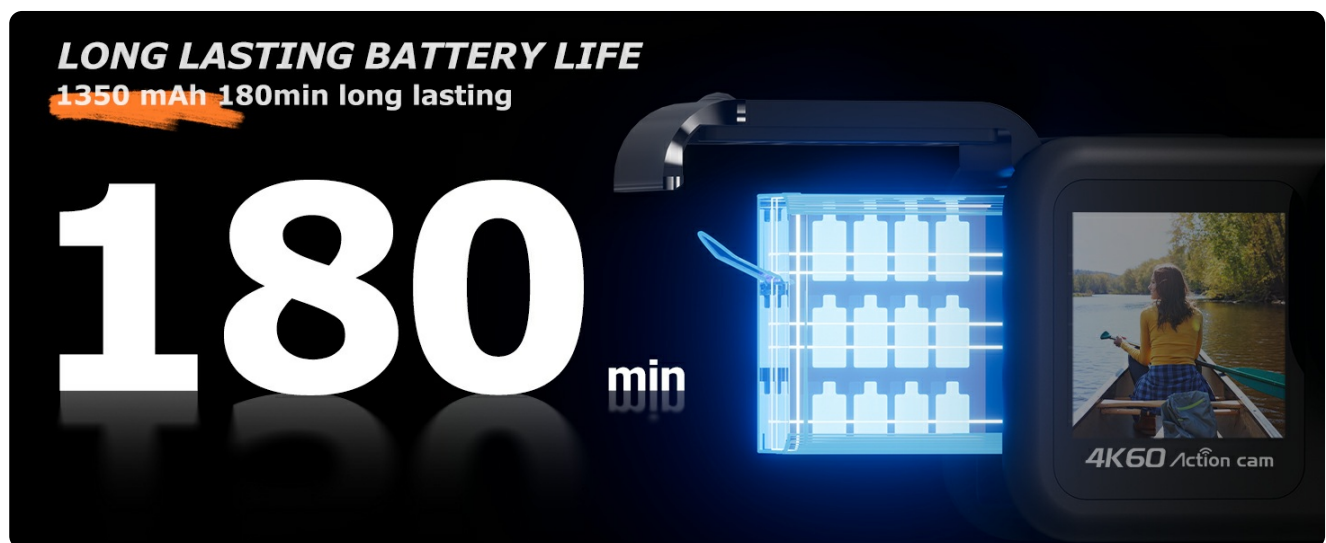 


Image: Battery life information.

### 5.3. SD Card Management

- Regularly back up your footage and photos to a computer or external storage.
- Format the SD card periodically within the camera's settings to maintain optimal performance and prevent data corruption.

## 6. TROUBLESHOOTING

If you encounter issues with your TIMNUT Action Camera, please refer to the following common solutions:

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted. Try using the second battery.
- **Recording issues (freezing, corrupted files):** Check if the SD card is properly inserted and formatted. Try a different SD card if the issue persists. Ensure the card is a high-speed class (e.g., U3).
- **Poor image/video quality:** Ensure the lens is clean and free from smudges or debris. Check your resolution and frame rate settings.
- **Wi-Fi connection problems:** Ensure Wi-Fi is enabled on the camera and your smartphone. Restart both devices and try reconnecting.

- **Touchscreen unresponsive:** Power off and restart the camera. Ensure your fingers are clean and dry.

For more complex issues not covered here, please contact customer support.

## 7. SPECIFICATIONS

| Feature                  | Detail                                                          |
|--------------------------|-----------------------------------------------------------------|
| Brand                    | TIMNUT                                                          |
| Model Number             | Q60                                                             |
| Item Weight              | 1.1 pounds                                                      |
| Package Dimensions       | 10.91 x 4.96 x 2.32 inches                                      |
| Batteries                | 2 Lithium Ion batteries (included)                              |
| Color Name               | BLACK                                                           |
| Special Features         | Anti-Shake, Low Light, Remote Control, Slow Motion, Touchscreen |
| Photo Sensor Technology  | MOS                                                             |
| Video Capture Resolution | 4K                                                              |
| Maximum Focal Length     | 2.4 Millimeters                                                 |
| Maximum Aperture         | 2.4 Millimeters                                                 |
| Flash Memory Type        | Micro SD                                                        |
| Video Capture Format     | MOV                                                             |
| Supported Audio Format   | AAC                                                             |
| Screen Size              | 2.2 Inches                                                      |
| Connectivity Technology  | Wi-Fi                                                           |
| Date First Available     | August 17, 2024                                                 |

## 8. WARRANTY AND SUPPORT

TIMNUT is committed to providing high-quality products and excellent customer service. Your purchase includes:

- **30-Day Refund:** If you are not satisfied with your purchase, you may be eligible for a refund within 30 days.
- **365-Day Replacement:** Enjoy peace of mind with a 365-day replacement policy for eligible issues.
- **24-Hour Troubleshooting:** Access dedicated support for troubleshooting assistance within 24 hours.
- **Lifetime Support:** Benefit from lifetime technical support for your TIMNUT Action Camera.

For any inquiries or support needs, please refer to the contact information provided with your product packaging or visit the official TIMNUT website.

© 2025 TIMNUT. All rights reserved.

**Ask a question about this manual**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question