

- Manuals.plus /
- › SUPERJARE /
- › SUPERJARE L Shaped Bakers Rack with Power Outlet Instruction Manual

SUPERJARE L Shaped Bakers Rack with Power Outlet

# SUPERJARE L Shaped Bakers Rack with Power Outlet Instruction Manual

Model: L Shaped Bakers Rack with Power Outlet  
Brand: SUPERJARE

## 1. PRODUCT OVERVIEW

This instruction manual provides detailed information for the assembly, operation, and maintenance of your SUPERJARE L Shaped Bakers Rack with Power Outlet. Please read this manual thoroughly before assembly and use to ensure proper functionality and safety.

The SUPERJARE L Shaped Bakers Rack is designed to maximize corner space in your home, offering both style and functionality. It features a reversible setup, a built-in power strip, and ample storage options for various kitchen essentials and appliances.



Figure 1.1: Fully assembled SUPERJARE L Shaped Bakers Rack, showcasing its storage capabilities and integrated power outlet.

## 2. SAFETY INFORMATION

**WARNING: Failure to follow these safety instructions may result in injury or damage to the product.**

- Do not overload shelves. Ensure the unit is stable and level before use. Always follow manufacturer's guidelines for

weight limits.

- Be cautious when using the built-in power strip to prevent electrical hazards. Ensure all appliances plugged into the power strip do not exceed the maximum wattage (1800W max).
- Always connect the anti-tip device to a wall stud to prevent accidental tipping, especially in households with children or pets.
- Keep all electrical cords away from water and heat sources.
- Do not allow children to climb on the rack.
- Regularly check all screws and connections to ensure they remain tight.

### 3. PRODUCT FEATURES

The SUPERJARE L Shaped Bakers Rack is designed with several key features to enhance its utility and adaptability:

- **L-shaped Design:** Maximizes corner space, fitting snugly into tight kitchen corners.
- **Reversible Setup:** Allows for flexible layout adjustments to suit your specific needs, whether as a kitchen organizer or a display shelf.
- **Built-in Power Strip:** Includes 3 AC outlets and an air switch for convenient appliance use, eliminating messy extension cords. Features a 2-meter (6.5-foot) power cord for flexible positioning.
- **Ample Storage:** Features 3 upper shelves for smaller items and 3 deep shelves for larger appliances.
- **Grid Panel with Hooks:** A grid panel with 12 S-shaped hooks is included for hanging mugs, utensils, or kitchen tools.
- **Durable Construction:** Made with solid particleboard and a sturdy metal frame for long-term durability.
- **Adjustable Feet:** Ensures stability on uneven surfaces.
- **Anti-tip Device:** For enhanced safety and stability.

# Easy Smart Storage with Grid & Upper Shelves



Snack



Toaster



Microwave



Seasoning



Coffee Machine



Teakettle



Figure 3.1: Detail of the upper shelves and grid panel, illustrating smart storage options for various kitchen items.

## Stay Charged with Safety



**3** AC Outlets  
1800W max





**1** On-off Switch  
Ensure Safety



**6.5**-Foot  
Power Cord



  
Figure 3.2: The integrated power strip with three AC outlets and a safety switch, designed for convenient appliance use.

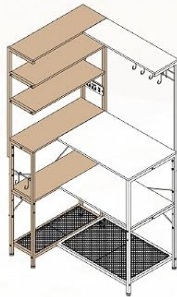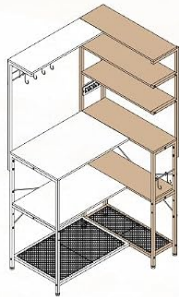

## Reversible Shelves

Flexibility redefined with 2

 Figure 3.3: Illustration of the reversible shelf design, offering flexibility in layout.

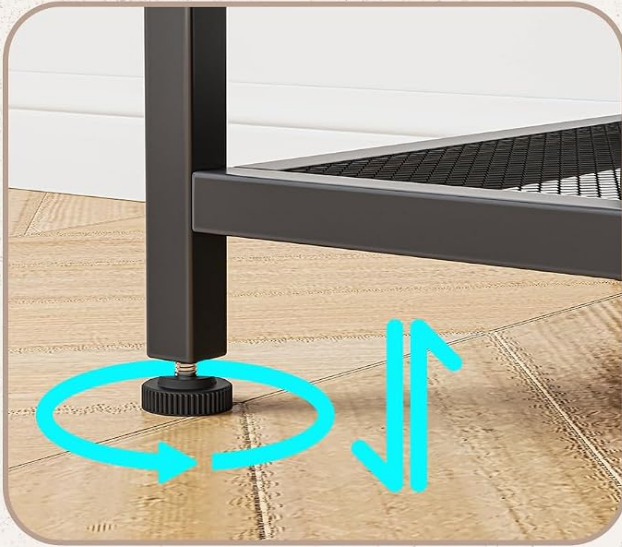

Adjustable Feet



X-Shaped Crossbar



Anti-tip Device



12 S-shaped Hooks

Figure 3.4: Key structural and safety features including adjustable feet, X-shaped crossbar for stability, anti-tip device, and the 12 S-shaped hooks.

## 4. SETUP AND ASSEMBLY

The SUPERJARE L Shaped Bakers Rack is designed for easy assembly. All parts are labeled, and necessary tools are provided. Please follow the clear instructions included in the packaging for a smooth setup process.

### 4.1 Before You Begin

- Unpack all components and verify against the parts list provided in your assembly guide.
- Ensure you have enough clear space for assembly.
- Identify the orientation for the L-shape (left or right) before starting, as the unit is reversible.

### 4.2 Assembly Steps (General Guidance)

1. Assemble the main metal frames according to the provided diagrams.

2. Attach the wooden shelves to the frame, ensuring all screws are tightened securely.
3. Install the grid panel and attach the S-shaped hooks.
4. Mount the power strip in its designated location.
5. Attach the adjustable feet to the bottom of the frame and level the unit.
6. Secure the anti-tip device to a wall stud using appropriate hardware (not always included, but recommended).

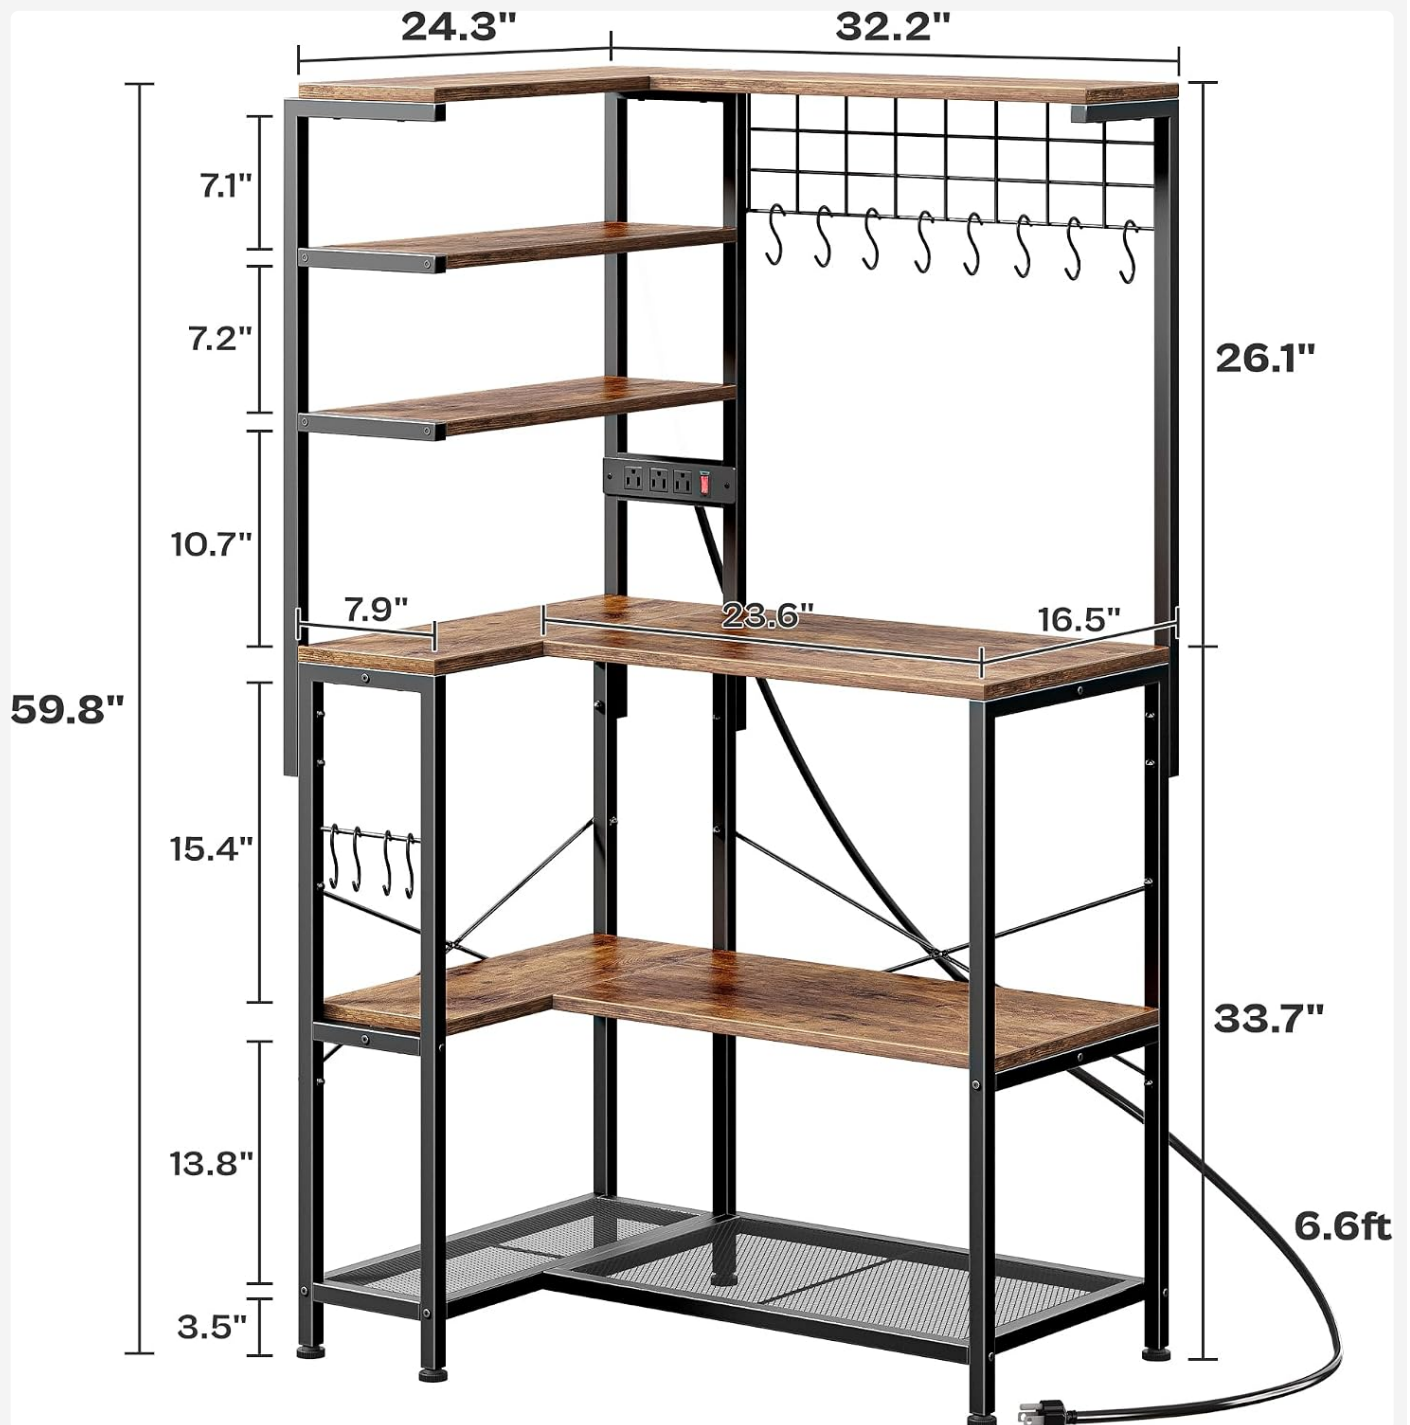 


Figure 4.1: Product dimensions, essential for planning placement and assembly.

## 5. OPERATING INSTRUCTIONS

### 5.1 Using the Power Outlet

- Plug the rack's power cord into a standard wall outlet.
- Press the red air switch on the power strip to turn on the outlets.

- Plug your kitchen appliances (e.g., microwave, coffee maker, toaster) into the 3 AC outlets.
- Ensure the total wattage of all plugged-in appliances does not exceed 1800W.
- To turn off power to the outlets, press the air switch again.

## 5.2 Organizing Your Rack

- Utilize the upper shelves for spices, cups, and smaller items.
- Place larger appliances like microwaves and coffee machines on the deeper lower shelves.
- Hang mugs, spatulas, and other kitchen tools on the S-shaped hooks.
- Consider the weight distribution when placing items to maintain stability.

## 6. MAINTENANCE

- **Cleaning:** Wipe down the wooden shelves and metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they are tight. Re-tighten if necessary.
- **Power Strip:** Keep the power strip clean and dry. Do not immerse in water.
- **Adjustable Feet:** Ensure the adjustable feet are properly set to keep the rack level and stable.

## 7. TROUBLESHOOTING

This section addresses common issues you might encounter with your bakers rack.

### 7.1 Stability Issues

- **Problem:** The rack wobbles or feels unstable.
- **Solution:**
  - Ensure all assembly screws are fully tightened.
  - Adjust the leveling feet at the bottom of the rack to compensate for uneven floors.
  - Verify that the anti-tip device is securely fastened to a wall stud.
  - Distribute weight evenly across the shelves.

### 7.2 Power Outlet Not Working

- **Problem:** Appliances plugged into the power strip do not receive power.
- **Solution:**
  - Check if the rack's main power cord is securely plugged into a working wall outlet.
  - Ensure the red air switch on the power strip is pressed to the "ON" position.
  - Verify that the total wattage of connected appliances does not exceed 1800W. If overloaded, unplug some devices and reset the air switch.
  - Test the wall outlet with another appliance to ensure it is functional.

### 7.3 Missing or Damaged Parts

- **Problem:** Parts are missing or damaged upon arrival.
- **Solution:**
  - Contact SUPERJARE customer support immediately with your purchase details and a description of the

missing/damaged parts.

## 8. SPECIFICATIONS

| Attribute          | Detail                                                                                                |
|--------------------|-------------------------------------------------------------------------------------------------------|
| Brand              | SUPERJARE                                                                                             |
| Model              | L Shaped Bakers Rack with Power Outlet                                                                |
| Color              | Rustic Brown                                                                                          |
| Product Dimensions | 61.8D x 81.8W x 151.8H centimeters (24.3D x 32.2W x 59.8H inches)                                     |
| Item Weight        | 18 Kilograms (39.68 lbs)                                                                              |
| Material           | Engineered Wood, Metal                                                                                |
| Number of Shelves  | 6                                                                                                     |
| Power Outlet       | 3 AC Outlets, 1800W max, with Air Switch                                                              |
| Power Cord Length  | 2 meters (6.5 feet)                                                                                   |
| Special Features   | Adjustable Feet, Durable, Power Outlets, Reversible, Space Saving, Anti-tip Device, 12 S-shaped Hooks |
| Mounting Type      | Freestanding                                                                                          |

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

SUPERJARE products typically come with a limited warranty covering manufacturing defects. Please refer to the warranty card included with your product packaging or visit the official SUPERJARE website for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

### 9.2 Customer Support

If you have any questions regarding the assembly, operation, or maintenance of your SUPERJARE L Shaped Bakers Rack, or if you encounter any issues not covered in this manual, please contact SUPERJARE customer support:

- **Website:** Visit the official SUPERJARE website for FAQs and contact forms.
- **Email:** Refer to your product packaging or the official website for customer service email addresses.
- **Phone:** Contact numbers may be available on the official website or product documentation.

When contacting support, please have your product model number (L Shaped Bakers Rack with Power Outlet) and purchase date ready.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0DD3DPDFR>

More documents and user manuals: <https://manuals.plus/>