

[Manuals.plus](#) /

› [KEEPOW](#) /

› KEEPOW Vacuum Belt For Bissell Proheat DeepClean Essential Carpet Cleaner - Instruction Manual

## KEEPOW 1601542 & 1601543

# KEEPOW Replacement Vacuum Belts

Instruction Manual for Bissell Proheat DeepClean Essential Carpet Cleaners

## INTRODUCTION

---

This manual provides essential information for the installation and maintenance of KEEPOW replacement vacuum belts for your Bissell Proheat DeepClean Essential Carpet Cleaner. These belts are designed to restore optimal performance to your appliance by ensuring proper brush roll and pump operation.



Image: A set of KEEPOW replacement vacuum belts, including a flat drive belt and a cogged gear belt, positioned alongside a Bissell Proheat DeepClean Essential Carpet Cleaner, illustrating the product's purpose.

## COMPATIBILITY

---

KEEPOW replacement belts are compatible with the following Bissell Proheat DeepClean Essential Carpet Cleaner models:

- 8852 Series: 8852, 88522, 8852R, 8852T, 88523, 88524
- 9585 Series: 9585
- 1887 Series: 1887, 18872, 1887L, 1887T
- 1200R Series: 1200R
- 1210 Series: 1210, 12108

These belts replace original parts **1601542** (flat drive belt) and **1601543** (cogged gear belt).

# COMPATIBILITY

## Fit for Bissell Proheat DeepClean Essential Carpet Cleaner

8852, 88522, 8852R, 8852T, 9585, 88523, 88524, 1887, 18872, 1887L, 1887T, 1200R, 1210, 12108 Series



**keepow**

Image: A visual guide displaying several Bissell Proheat DeepClean Essential Carpet Cleaner models (8852, 9585, 1887, 18872, 1887L) with checkmarks, confirming their compatibility with the KEEPOW replacement belts shown on the right.

## PRODUCT FEATURES AND MATERIAL

KEEPOW vacuum belts are manufactured from high-quality rubber, ensuring durability and flexibility for long-lasting reliability. They are designed to maintain your vacuum machine in prime working condition.

- **Durable & Flexible:** Constructed from premium rubber for extended lifespan.
- **Safe & Non-Toxic:** Materials chosen for user safety.
- **Long Lasting:** Engineered for sustained performance.
- **Easy to Replace:** Designed for straightforward installation.

# PREMIUM MATERIAL

Replace Part 1601542

Replace Part 1601543



DURABLE &  
FLEXIBLE



SAFE &  
NON-TOXIC



LONG  
LASTING



EASY TO  
REPLACE

**keepow**

Image: A detailed view of the cogged replacement belt, emphasizing its premium rubber material. Accompanying icons illustrate key features: durable & flexible, safe & non-toxic, long lasting, and easy to replace.

## INSTALLATION INSTRUCTIONS


Replacing the vacuum belts is a straightforward process. Follow these steps carefully to ensure correct installation and optimal performance of your carpet cleaner.

1. **Preparation:** Unplug your Bissell carpet cleaner from the power outlet before beginning any maintenance or replacement procedures.
2. **Access the Brush Roll Area:** Lay the cleaner on its side or back to access the underside where the brush roll is located. You may need to remove a cover plate or screws to expose the belts and brush roll.
3. **Remove Old Belts:** Carefully remove the broken or worn belts from their respective positions. Note how they were routed around the motor shaft and brush roll. There are typically two belts: a flat drive belt and a cogged gear belt.
4. **Install New Belts:**

- First, place the new flat drive belt around the motor shaft and the brush roll pulley. Ensure it is seated correctly and not twisted.
  - Next, install the new cogged gear belt. This belt typically connects the brush roll to another gear or pulley system. Align the teeth of the belt with the teeth on the pulleys.
5. **Secure Components:** Once both belts are properly installed and tensioned, reattach any covers or screws that were removed.
  6. **Test Operation:** Plug in the carpet cleaner and briefly turn it on to ensure the brush roll spins freely and the belts are operating smoothly without any unusual noises.

## EASY TO INSTALL

- 1 Simply remove the broken or worn belt in the vacuum.
- 2 Replace the new belt according to the original installation position.

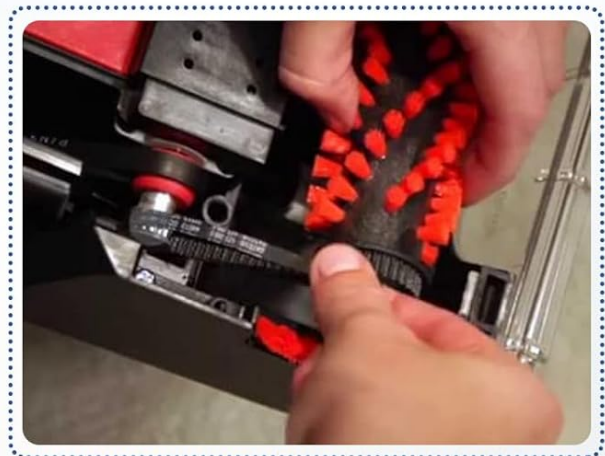

**keepow**

Image: An instructional graphic detailing the two primary steps for belt replacement: removing the old belt and installing the new one in its original position. An accompanying photo illustrates a hand working on the brush roll assembly of a carpet cleaner.



Image: A four-panel visual guide illustrating the steps for vacuum belt replacement, from detaching the old belt to correctly seating the new one on the brush roll and motor components.

## MAINTENANCE AND REPLACEMENT SCHEDULE

---

For optimal performance of your Bissell Proheat DeepClean Essential Carpet Cleaner, it is recommended to inspect and replace the vacuum belts regularly. Worn or stretched belts can lead to reduced cleaning efficiency and brush roll malfunction.

**Suggestion:** Vacuum belts should be replaced every **3-6 months** for optimum performance, or sooner if signs of wear, cracking, or breakage are observed.

# REPLACEMENT

We recommend replace belts **every 3 to 9 months** to ensure optimum performance of your vacuum



**keepow**

Image: A Bissell carpet cleaner in use on a carpeted floor, with an overlay showing the two replacement belts, reinforcing the recommendation for timely belt replacement to maintain cleaning effectiveness.

## SPECIFICATIONS

| Attribute             | Detail                                     |
|-----------------------|--------------------------------------------|
| Product Type          | Replacement Vacuum Belts (2 Pack)          |
| Material              | High-Quality Rubber                        |
| Belt Style            | Flat Drive Belt & Gear Belt (Cogged)       |
| Replaces Part Numbers | 1601542 (Flat Belt), 1601543 (Cogged Belt) |
| Flat Belt Perimeter   | Approx. 8.07 inches (20.5 cm)              |

| Attribute             | Detail                        |
|-----------------------|-------------------------------|
| Flat Belt Width       | Approx. 0.27 inches (0.68 cm) |
| Cogged Belt Perimeter | Approx. 7.13 inches (18.3 cm) |
| Cogged Belt Width     | Approx. 0.15 inches (0.4 cm)  |



Image: A technical diagram illustrating the precise dimensions of both the flat and cogged vacuum belts, including their perimeter and width measurements in inches and centimeters.

### TROUBLESHOOTING

If your carpet cleaner is not performing as expected after belt replacement, consider the following:

- **Brush Roll Not Spinning:**

- Ensure both belts are correctly installed and tensioned. A loose or improperly routed belt will prevent the brush roll from turning.
- Check for any obstructions (hair, debris) wrapped around the brush roll or pulleys that might be preventing movement.
- Verify that the brush roll itself is not damaged or seized.

- **Unusual Noises:**

- A squealing or grinding noise might indicate improper belt alignment or a worn bearing in the brush roll assembly.
- Ensure all covers are securely fastened after reassembly.

- **Reduced Suction/Cleaning Performance:**

- While belt replacement primarily affects the brush roll, ensure no other components were dislodged during the process.
- Check for clogs in hoses or nozzles.

If problems persist, consult your carpet cleaner's original user manual or contact Bissell customer support for further assistance.

## WARRANTY AND SUPPORT

KEEPOW products are designed for quality and reliability. If you encounter any issues with your KEEPOW vacuum belts or require assistance, please contact KEEPOW customer service directly. Your satisfaction is important to us.

For general inquiries or support regarding KEEPOW products, you may visit the official KEEPOW store on Amazon:

[KEEPOW Store](#).

For specific product issues, please refer to the contact information provided with your purchase or on the product packaging.

© 2025 KEEPOW. All rights reserved. This manual is for informational purposes only.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question