

[Manuals.plus](#) /

> [Inwa](#) /

> Inwa Wearable Bluetooth Speaker Instruction Manual

Inwa MZ-628

Inwa Wearable Bluetooth Speaker

Model: MZ-628

INTRODUCTION

The Inwa Wearable Bluetooth Speaker is a lightweight, portable audio device designed for hands-free music and calls. Its clip-on design and IP67 waterproof rating make it suitable for various activities, including work, home, and outdoor use. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your speaker.

WHAT'S IN THE BOX

- 1 x Inwa Wearable Bluetooth Speaker
- 1 x USB Cable

SETUP

Charging the Speaker

Before first use, fully charge your Inwa Wearable Bluetooth Speaker. Connect the provided USB-C cable to the charging port on the speaker and to a compatible USB power source. The charging indicator will show the charging status.



Image showing the Inwa speaker being charged via a USB-C cable, highlighting its fast charging capability and 600mAh battery.

Pairing with a Bluetooth Device

To pair your speaker with a smartphone or tablet, ensure the speaker is powered on. It will automatically enter pairing mode or you can manually activate it. On your device, search for 'Inwa Speaker' in the Bluetooth settings and select it to connect. A voice prompt will confirm successful connection.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the power button to turn the speaker on or off. The display will show the battery percentage upon turning off.

Music Playback

Once paired, you can play music from your connected device. Use the volume buttons on the speaker to adjust the audio level. The speaker features a premium driver for loud, immersive sound quality.

SET UP YOUR MUSIC

**Newly super loud volume in
small design**



Image illustrating the Inwa speaker emitting sound waves, emphasizing its loud volume in a small design.

Hands-Free Calls

The built-in noise-canceling microphone allows for crystal-clear hands-free calls. When a call comes in, press the multi-function button to answer or end the call.

STRONGER CLIP

Easy to open clips for one-handed operation, easy attachment



Image showing a person wearing the Inwa speaker clipped to their shirt, demonstrating its use for hands-free calls with a built-in noise-canceling microphone.

Wearing the Speaker

The Inwa speaker is designed to be worn conveniently. Use the integrated clip to attach it to your clothing, bag, or other suitable surfaces. Its lightweight design (64g/2.2 ounces) ensures comfort during extended use.



2.20Z EASY TO CARRY ***Clips Attaches Anywhere***

Image depicting the Inwa speaker clipped to a work belt, highlighting its lightweight and easy-to-carry design.

	<i>Inwa</i>	OTHERS	OTHERS
Battery	✓ 600mAh	✗ 560mAh	✗ 560mAh
IP Level	✓ IP67	✗ IPX7	✗ IP56
RMS	✓ 5W	✗ 1.9W	✗ 2.18W
SNR	✓ 95DB	✗ 75DB	✗ 80DB

Image showing the Inwa speaker clipped to a person's shirt, emphasizing its ultra-lightweight design for indoor and outdoor use.

Speaker front

1.8 inch



A front view of a yellow and black Inwa speaker. The speaker has a black grille at the top and a yellow control panel at the bottom. The control panel features three circular buttons: a top button with a plus sign, a middle button with a circle, and a bottom button with a minus sign. A small black dot is visible to the right of the middle button. Dimension lines indicate a height of 2.9 inches and a width of 1.3 inches.

2.9 inch

1.3 inch

Diagram showing the front view of the Inwa speaker with its dimensions (1.8 inch width, 2.9 inch height, 1.3 inch depth).

MAINTENANCE

Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

Waterproofing

The speaker has an IP67 waterproof rating, meaning it is protected from dust and can withstand immersion in water up to 1 meter for 30 minutes. Ensure the charging port cover is securely closed before exposing the speaker to water.



Image showing the Inwa speaker partially submerged in water, illustrating its IP67 waterproof capability.

TROUBLESHOOTING

Speaker not turning on

- Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable.

Cannot pair with device

- Make sure the speaker is in pairing mode. Turn off and on the speaker to re-enter pairing mode.
- Ensure Bluetooth is enabled on your device and it is within range (up to 33 feet).
- Forget the device from your phone's Bluetooth settings and try pairing again.

No sound or low volume

- Check the volume levels on both the speaker and your connected device.
- Ensure the speaker is properly paired and connected.

SPECIFICATIONS

Model Name	MZ-628
Speaker Type	Outdoor
Recommended Uses	For Smartphones or Tablets
Compatible Devices	Smartphone, Tablet
Unit Count	1.0 Count
Controller Type	Button
Color	Yellow
Product Dimensions	1.85"D x 1.33"W x 2.95"H
Item Weight	2 ounces (56.7 Grams)

Waterproof Rating	IP67
Control Method	Touch
Wireless Communication Technology	Bluetooth
Speaker Size	1.85 Inches
Power Source	Battery Powered
Number of Batteries	1 AAA batteries required (included)
Connectivity Protocol	Bluetooth
Manufacturer	Inwa
Battery Capacity	600mAh
RMS Power	5W
Signal-to-Noise Ratio (SNR)	95dB

WARRANTY AND SUPPORT

Inwa offers lifetime product technical support. If you encounter any problems or have questions, please feel free to contact the Customer Service team. We are committed to resolving any issues for you within 24 hours.