

ECONTROLLY ERF6N64H

ECONTROLLY ERF6N64H Replacement Remote Control User Manual

Compatible with various HISENSE TV models

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY ERF6N64H replacement infrared remote control. It is designed to function as a direct replacement for your original HISENSE TV remote, offering all essential functions without the need for programming. Please read this manual carefully to ensure proper setup and operation.

2. PRODUCT OVERVIEW

The ECONTROLLY ERF6N64H remote control is engineered for durability and ease of use. It features a robust ABS material construction and soft silicone buttons for comfortable and responsive interaction. Utilizing infrared technology, it provides sensitive and precise control over your television.

Key Features:

- No programming required: Ready to use after battery installation.
- Durable construction: Made from ABS material, resistant to drops.
- Responsive buttons: Soft silicone buttons for tactile feedback.
- Infrared technology: Ensures reliable and sensitive control.
- Wide compatibility: Functions across various specified HISENSE TV models.

Compatible HISENSE TV Models:

- U8K Series: 65U8K, 55U8K, 75U8K, 85U8K
- U88KM Series: 55U88KM, 65U88KM, 75U88KM
- UXK Series: 85UXK, 65UXK
- A85K Series: 55A85K, 65A85K
- U8KQ Series: 75U8KQ, 65U8KQ, 55U8KQ

- Additional Models: 65UXKQ, 65UXKQTUK, 65U80KQ, 65U81KQ, 65U82KQ, 65U86KQ, 65U87KQ, 65U88KQ, 65U89KQ, 65U8KQTUK





Image 2.1: Front view of the ECONTROLLY ERF6N64H remote control, showcasing its button layout and sleek black design.

3. SETUP

Battery Installation:

The ECONTROLLY ERF6N64H remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for immediate use with your compatible HISENSE TV. No additional programming or pairing is necessary.





Image 3.1: Back view of the remote control with the battery compartment open, showing the slots for two AAA batteries.

4. OPERATING INSTRUCTIONS

Point the remote control directly at your HISENSE TV's infrared receiver. Ensure there are no obstructions between the remote and the TV. The remote provides standard functions for TV operation.

Button Functions:

- **Power (●):** Turns the TV on or off.
- **TEXT:** Accesses teletext functions.
- **INPUT:** Selects input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **CH.LIST:** Displays the channel list.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.

- **Back** (↶): Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.
- **VOL (+/-)**: Adjusts the volume level.
- **Mute** (⏸): Mutes or unmutes the TV audio.
- **Home** (△): Accesses the TV's home screen or smart TV interface.
- **CH (Up/Down)**: Changes channels sequentially.
- **Quick Access Buttons**: Dedicated buttons for streaming services like Disney, GUIDE, Deezer, NETFLIX, YouTube, Prime Video, and VIDAA TV.

5. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning**: Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA alkaline).
- **Storage**: Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Handling**: Avoid dropping the remote control or exposing it to excessive force, as this can damage internal components.

6. TROUBLESHOOTING

If you experience issues with your ECONTROLLY ERF6N64H remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity. Remove any objects blocking the line of sight to the TV's IR receiver. Move closer to the TV.
Buttons are sticky or unresponsive	Dirt or debris under buttons.	Clean the remote control as described in the Maintenance section.
Specific functions not working	TV model incompatibility (rare).	Verify your TV model is listed in the compatible models section. If issues persist, contact customer support.

7. SPECIFICATIONS

- **Model Number**: ERF6N64H
- **Brand**: ECONTROLLY

- **Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** ABS
- **Color:** Black
- **Product Dimensions:** 5 x 1 x 0.25 inches (approximately 12.7 x 2.54 x 0.64 cm)
- **Item Weight:** 2.3 ounces (approximately 65 grams)
- **Special Feature:** No programming required
- **Compatible Devices:** Television





Image 7.1: Side and front view of the ECONTROLLY ERF6N64H remote control, illustrating its dimensions (approximately 20 cm / 7.87 inches in length and 3.7 cm / 1.46 inches in width).

8. WARRANTY AND SUPPORT

For any questions, concerns, or technical assistance regarding your ECONTROLLY ERF6N64H replacement remote control, please refer to the retailer's return policy or contact the manufacturer directly through their official support channels. Please retain your proof of purchase for any warranty claims.