

SUNPOW C015

SUNPOW Golf Rangefinder User Manual

Model: C015

1. INTRODUCTION

Thank you for choosing the SUNPOW Golf Rangefinder. This high-precision laser rangefinder is designed to provide accurate distance measurements for both golf and hunting. Featuring a 1200-yard range, 7X magnification, and a rechargeable battery, it is equipped with multiple measurement modes to enhance your outdoor experience. Please read this manual carefully before using the device to ensure optimal performance and longevity.



Image: The SUNPOW Golf Rangefinder, a compact and ergonomic device with dual lenses and control buttons.

2. PACKAGE CONTENTS

Upon unboxing, please verify that all the following items are included in your package:

- SUNPOW Golf Rangefinder (Model C015)
- Portable Carrying Case
- USB Charging Cable
- Hand Strap
- Magnetic Belt Clip
- Carabiner
- Microfiber Cleaning Cloth
- User Manual

		
ÉTANCHÉITÉ IP54	SUPPORT MAGNÉTIQUE	CONCEPTION RECHARGEABLE
L'indice d'étanchéité IP54 garantit une durabilité dans les environnements difficiles, ce qui le rend idéal pour les activités de plein air telles que la randonnée, le camping et le golf.	L'aimant intégré offre une commodité supplémentaire, vous permettant de fixer facilement l'appareil sur des surfaces métalliques pour une utilisation mains libres.	La conception rechargeable offre la commodité de recharger facilement l'appareil chaque fois que nécessaire, éliminant ainsi les tracas liés au remplacement constant des piles.



Image: An overview of all items included in the SUNPOW Golf Rangefinder package, neatly arranged.

3. KEY FEATURES

- **High Precision:** Achieves an accuracy of ± 0.3 meters up to 300 meters and ± 0.5 meters up to 1200 meters. Features a transflective LCD and 7x magnification for clear readings.

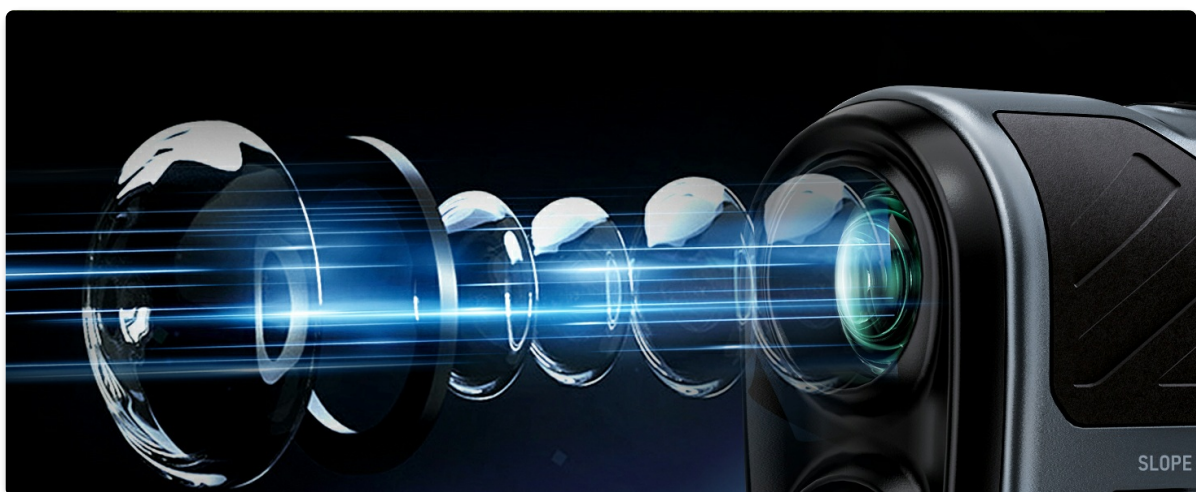


Image: Close-up view of the rangefinder's precision lenses, highlighting optical clarity.

- **Extended Range:** Capable of measuring distances up to 1200 yards, ideal for various outdoor activities.



Image: Illustration showing the rangefinder measuring a target at 1200 yards on a golf course.

- **Slope Compensation:** Provides adjusted distances based on elevation changes, crucial for accurate golf shots. This feature can be toggled on/off.

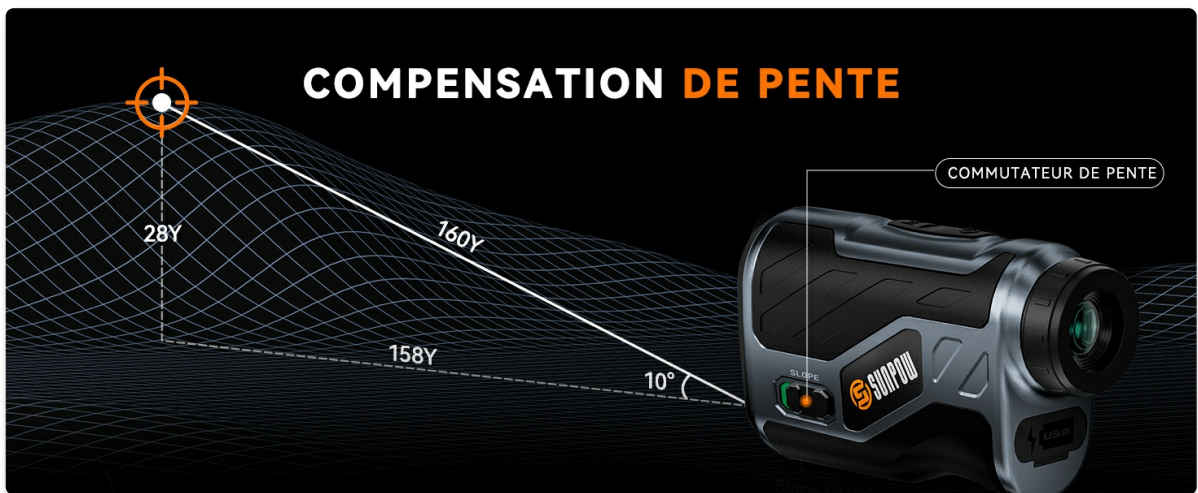


Image: Diagram illustrating how slope compensation calculates adjusted distances for uphill and downhill shots.

- **Rechargeable Battery:** Built-in USB-C rechargeable battery offers extended use, up to 40,000 measurements on a single charge. Auto-off feature after 15 seconds of inactivity.

RECHARGEABLE

40000 times continuous use with USB-C rechargeable battery, the range finder is always ready to go.



15 s
Auto-Off

USB-C
Rechargeable

Image: The rangefinder connected to a USB-C charging cable, indicating its rechargeable capability.

- **Magnetic Strip:** Integrated magnetic strip allows for convenient attachment to golf carts or other metallic surfaces for easy access.

CLARTÉ INÉGALÉE

Lentilles de précision pour une mesure précise des distances



Image: A golf rangefinder attached to a golf cart via its magnetic strip, demonstrating the magnetic mount feature.

- **IP54 Water Resistance:** Provides durability in challenging outdoor environments, suitable for hiking, camping, and golf.

4. SETUP

4.1 Charging the Device

1. Locate the USB-C charging port on the side of the rangefinder.
2. Connect the provided USB-C cable to the rangefinder and the other end to a compatible USB power source (e.g., computer USB port, wall adapter).
3. The charging indicator light will illuminate during charging and turn off when fully charged.
4. A full charge typically takes approximately 2-3 hours.

4.2 Powering On/Off

- To power on, press the Power button (usually marked with a power symbol or 'ON').
- The device will automatically power off after 15 seconds of inactivity to conserve battery.

5. OPERATING INSTRUCTIONS

The SUNPOW Golf Rangefinder offers 5 distinct measurement modes. Press the 'M' (Mode) button to cycle through these modes.

5.1 Golf Ballistic / Slope Compensation Mode

This mode provides the actual distance and the slope-adjusted distance, which is essential for golf. Toggle the physical 'SLOPE' switch on the device to enable or disable slope compensation.



Image: The rangefinder's display showing golf ballistic mode with compensated distance and angle.

5.2 Speed Measurement Mode

Ideal for hunting or observing moving objects, this mode measures the speed of a target.



Image: The rangefinder's display showing speed measurement mode, with a cheetah as the target.

5.3 Elevation Measurement Mode

This mode is useful for engineering measurements or determining vertical height differences.



Image: The rangefinder's display showing elevation measurement mode, with a construction crane as the target.

5.4 Distance Measurement Mode

Provides a direct line-of-sight distance to the target. Suitable for general use, including hiking.



Image: The rangefinder's display showing distance measurement mode, with a mountain landscape as the target.

5.5 Memory Mode

This mode is designed for specific applications like archery, allowing for consistent measurements to pre-set targets.



Image: The rangefinder's display showing memory mode, with archery targets in the background.

6. MAINTENANCE

- **Cleaning:** Use the provided microfiber cloth to gently wipe the lenses and body of the rangefinder. Do not use abrasive materials or chemical cleaners.
- **Storage:** Store the device in its carrying case when not in use to protect it from dust, moisture, and impacts. Avoid extreme temperatures.
- **Battery Care:** Recharge the battery regularly, even if not frequently used, to maintain battery health. Avoid fully discharging the battery for extended periods.
- **Water Resistance:** While IP54 rated, avoid submerging the device in water. Dry it thoroughly if it gets wet.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; device malfunction.	Charge the battery fully. If problem persists, contact support.
Inaccurate measurements.	Lens obstruction; incorrect mode; environmental factors (fog, heavy rain).	Clean lenses. Ensure correct mode is selected. Avoid use in extreme weather.
Display is dim or unreadable.	Low battery; extreme lighting conditions.	Recharge battery. Adjust viewing angle or move to a different lighting condition.
Cannot switch modes.	Button malfunction; temporary software glitch.	Press the 'M' button firmly. Power off and on the device.

8. SPECIFICATIONS

Feature	Detail
Model Number	C015
Color	Black
Material	Metal
Dimensions (L x W x H)	9.6 x 11 x 16.5 cm
Weight	450 Grams
Magnification	7X
Measurement Range	Up to 1200 Yards
Accuracy	±0.3m (up to 300m), ±0.5m (up to 1200m)
Battery Type	Rechargeable Lithium-ion (2 included)
Water Resistance Level	IP54 (Non-waterproof, splash resistant)
Auto-Off	15 seconds

9. WARRANTY AND SUPPORT

SUNPOW products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included in your package or visit the official SUNPOW website. If you encounter any issues or have questions regarding your SUNPOW Golf Rangefinder, please contact our customer support team. Details for contacting support can typically be found on our website or on the packaging.

Documents - SUNPOW – C015

no relevant documents