

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY XRT270 Voice Remote Control User Manual for Vizio Smart TVs

ECONTROLLY XRT270-SNPRIC-BT

ECONTROLLY XRT270 Voice Remote Control User Manual

Compatible with Vizio V/D/M/P TV Series

1. SETUP

1.1 Battery Installation

To begin using your remote control, install two new AAA alkaline batteries. Ensure correct polarity (+/-) as indicated inside the battery compartment.





Image: Rear view of the remote with the battery cover removed, illustrating battery placement.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards and remove it.
3. Insert two AAA alkaline batteries, matching the positive (+) and negative (-) terminals correctly.
4. Replace the battery cover by sliding it back into position until it clicks securely.

Note: Only installing new alkaline batteries will ensure optimal performance.

1.2 Pairing with Your TV

This remote control requires pairing with your Vizio Smart TV before use to enable full functionality, including voice control.

1. Ensure your Vizio Smart TV is powered on.
2. On your TV, navigate to the **Settings** menu.
3. Select **Remotes & Bluetooth Devices** or a similar option.
4. Choose **Pair New Device** or **Add Remote**.
5. Follow the on-screen instructions to put your remote into pairing mode. This typically involves pressing and holding specific buttons on the remote (e.g., the 'Home' and 'Back' buttons simultaneously) until an indicator light flashes.
6. Once the remote appears on your TV screen, select it to complete the pairing process.

2. OPERATING INSTRUCTIONS

2.1 Remote Control Layout and Basic Functions

Familiarize yourself with the buttons on your ECONTROLLY XRT270 remote control.





Image: Front view of the ECONTROLLY XRT270 remote control.

- **Power Button (⏻):** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI 1, HDMI 2, etc.).
- **Navigation Pad (Circular):** Use the directional arrows to move through menus and content. The center button acts as 'OK' or 'Select'.
- **Back Button (←):** Returns to the previous screen or menu.
- **Home Button (🏠):** Accesses the TV's main smart TV interface or home screen.
- **Star Button (☆):** Often used for quick access to favorite apps or settings.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels (if applicable).
- **App Shortcut Buttons:** Dedicated buttons for popular streaming services like Netflix, Sling, Prime Video, Redbox, iHeartRadio, and Crackle.
- **Settings Button (⚙️):** Opens the TV's settings menu.

2.2 Voice Control Functionality

Your remote features built-in voice recognition for convenient control of your TV.



Image: The remote control with the voice control button highlighted.

1. Press and hold the **Microphone Button** () located below the app shortcut buttons.
2. Speak your command clearly into the remote control. Examples include:
 - "Open Netflix"
 - "Switch to HDMI 1"
 - "Volume up"
 - "Search for action movies"
3. Release the Microphone Button when you have finished speaking.

Important: The voice control function of this remote will only work if your Vizio TV model itself supports voice commands. If your TV does not have native voice functionality, this feature on the remote will not be active.

3. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Care:** Replace batteries promptly when they are depleted. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

4. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Not paired with TV.	Replace batteries with new alkaline ones. Ensure correct polarity. Re-pair the remote with your TV (refer to Section 1.2).
Voice control not working.	TV does not support voice function. Remote not paired. Microphone blocked.	Verify if your Vizio TV model supports voice commands. Ensure the remote is properly paired. Check if anything is obstructing the microphone on the remote.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote surface with a soft, slightly damp cloth. Avoid excessive moisture.
Remote loses connection frequently.	Low batteries. Interference.	Replace batteries. Ensure no strong wireless interference sources are near the TV or remote. Try re-pairing.

5. SPECIFICATIONS

Detailed specifications for the ECONTROLLY XRT270 Voice Remote Control.





Image: Dimensions of the ECONTROLLY XRT270 remote control.

- **Model Number:** XRT270-SNPRIC-BT
- **Brand:** ECONTROLLY
- **Compatible Devices:** Vizio Smart Televisions (V/D/M/P Series)
- **Special Feature:** Voice Search
- **Color:** Black
- **Product Dimensions:** 5 x 1 x 0.25 inches (approximately 12.7 x 2.54 x 0.64 cm)
- **Item Weight:** 2.3 ounces (approximately 65 grams)
- **Power Source:** 2 x AAA Alkaline Batteries (not included)

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DD3TQV75>

More documents and user manuals: <https://manuals.plus/>