

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY 0322850 Remote Control User Manual

ECONTROLLY RCEC--0322850-MZZBVA

ECONTROLLY 0322850 Remote Control User Manual

Model: RCEC--0322850-MZZBVA

Brand: ECONTROLLY

INTRODUCTION

This manual provides instructions for the ECONTROLLY 0322850 Replacement Remote Control, designed for compatibility with the iRV 29 RV Mechless Stereo Unit, AM/FM Radio, RV Media Player, and Recreational Vehicle Audio Entertainment System. This remote offers a direct replacement solution, requiring no programming.

Key features include:

- Durable ABS material construction, resistant to falling.
- Soft silicone buttons for enhanced durability and flexibility.
- Advanced infrared technology for low power consumption, long transmission distance, and sensitive, precise control.
- Stable performance and farther transmitting distance compared to original remotes.

SETUP AND FIRST USE

The ECONTROLLY 0322850 remote control is designed for immediate use without any complex programming. Simply install new alkaline batteries to begin operation.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready to control your compatible iRV 29 RV Mechless Stereo Unit.

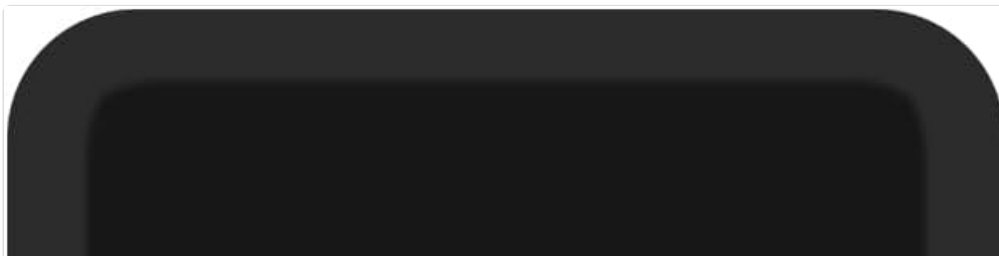




Figure 1: Rear view of the remote control, indicating the battery compartment.

This section details the functions of each button on the ECONTROLLY 0322850 remote control.





Figure 2: Front view of the ECONTROLLY 0322850 Remote Control.

Button Functions

Button	Function
Power ()	Turns the stereo unit ON or OFF.
X1, X2	Mute/Unmute audio for Zone 1 and Zone 2 respectively.
MODE	Cycles through available audio sources (e.g., AM, FM, USB, Bluetooth, AUX).
ZONE 1, ZONE 2	Selects or controls audio output for specific zones.
BAND	Switches between radio bands (e.g., FM1, FM2, AM).
VOL+ / VOL-	Increases / Decreases the master volume level.
AMS	Automatic Memory Store: Scans and stores strong radio stations.
(Previous)	Skips to the previous track/station.
SEL (Select)	Enters menu options or confirms selections.
(Next)	Skips to the next track/station.
EQ	Accesses equalizer settings to adjust audio profiles.
DISP	Changes display information or brightness.
1 /	Preset 1 / Play/Pause function.
2 / INT	Preset 2 / Intro Scan: Plays the first few seconds of each track.
3 / RPT	Preset 3 / Repeat: Repeats the current track or album.
4 / RDM	Preset 4 / Random (Shuffle): Plays tracks in a random order.
5 / -10 DIR-	Preset 5 / Skips back 10 tracks/files.
6 / +10 DIR+	Preset 6 / Skips forward 10 tracks/files.

CARE AND MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new alkaline batteries of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and

potential damage. Store in a cool, dry place.

- **Avoid Exposure:** Keep the remote away from direct sunlight, extreme temperatures, moisture, and strong magnetic fields.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common solutions:

Problem	Possible Cause / Solution
Remote is not responding.	◦ Batteries are dead or inserted incorrectly. Replace with new alkaline batteries, ensuring correct polarity. ◦ Obstruction between the remote and the stereo unit's IR receiver. Ensure a clear line of sight. ◦ Remote is too far from the stereo unit. Move closer.
Some buttons are not working.	◦ Batteries are low. Replace them. ◦ Button may be stuck or dirty. Gently clean around the button.
Remote works intermittently.	◦ Low batteries. Replace them. ◦ Interference from other electronic devices. Try moving the remote or the stereo unit.

SPECIFICATIONS

Technical specifications for the ECONTROLLY 0322850 Remote Control:

- **Model Number:** RCEC--0322850-MZZBVA
- **Product Dimensions:** 5 x 1 x 0.25 inches
- **Item Weight:** 2.3 ounces
- **Color:** Black
- **Material:** ABS
- **Special Feature:** No programming required
- **Compatible Devices:** iRV 29 RV Mechless Stereo Unit, AM/FM Radio, RV Media Player, Recreational Vehicle Audio Entertainment System
- **Power Source:** 2 x AAA Alkaline Batteries (not included)



Figure 3: Dimensions of the ECONTROLLY 0322850 Remote Control.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY 0322850 Remote Control, please refer to the documentation provided with your purchase or contact the seller directly. As a replacement remote, specific warranty terms may vary.

For further assistance, you may contact the manufacturer, ECONTROLLY, through their official support channels if available.

© 2024 ECONTROLLY. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question