

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hatteker](#) /

› [Hatteker Electric Body Trimmer with Extendable Arm - Model 6198 User Manual](#)

Hatteker 6198

Hatteker Electric Body Trimmer with Extendable Arm - Model 6198 User Manual

Your comprehensive guide to safe and effective grooming.

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Hatteker Electric Body Trimmer. Retain this manual for future reference.

- Do not use the trimmer on irritated or broken skin.
- Avoid placing the blades near eyes, ears, or other sensitive areas.
- Clean the blades and shaving head regularly to prevent bacterial growth.
- Do not use the device while it is charging.
- Avoid using the trimmer near water sources unless specifically designed for wet use (this model is IPX6 waterproof).
- Keep out of reach of children.

2. PRODUCT OVERVIEW

The Hatteker Electric Body Trimmer Model 6198 is a versatile grooming kit designed for various body areas, including the back, face, arms, and chin. It features multiple interchangeable heads and an adjustable extendable arm for hard-to-reach areas.

2.1 Package Contents

- Hatteker Electric Body Trimmer (Main Unit)
- Precision Trimmer Head
- Nose/Ear Trimmer Head
- Body Hair Shaver Head
- Main Shaver Head (for back)
- Extendable Arm
- Guide Combs (1mm, 2mm, 3mm for precision trimmer; 3mm, 6mm for body hair trimmer)
- USB Charging Cable

- Cleaning Brush
- User Manual

RECHARGEABLE BATTERY

1.5
Hour
CHARGING TIME

60
Min
RUNNING TIME

USB Charging Computers Mobile Power USB Panel

Image: Hattaker Electric Body Trimmer with all included accessories, including various heads, guide combs, and charging cable.

3. SETUP AND CHARGING

3.1 Initial Charge

Before first use, fully charge the trimmer. The device may not power on if the battery is low, even if the LED display shows a percentage. A full charge takes approximately 1.5 hours and provides up to 60 minutes of running time.

- Connect the USB charging cable to the trimmer's charging port.
- Plug the other end of the USB cable into a universal USB charging head (not included), computer, or power bank.
- The LED display will indicate the charging status and battery level.



Image: The trimmer displaying battery level and charging information, indicating 1.5 hours charging time for 60 minutes running time.

3.2 Attaching and Changing Trimmer Heads

The trimmer comes with four interchangeable heads for different grooming needs.

- To attach a head: Align the desired head with the main unit and gently push until it clicks into place.
- To remove a head: Hold the main unit firmly and pull the head straight off.
- The main shaver head can be mounted in two directions for easier access to certain areas.



Image: Visual guide demonstrating the four different trimmer heads: Precision Trimmer, Main Shaver, Nose/Ear Trimmer, and Body Hair Shaver, along with examples of their use on face, back, and chest.

3.3 Assembling the Extendable Arm

The extendable arm is designed to help reach difficult areas like the back.

- Attach the main trimmer unit to the end of the extendable arm. Ensure it is securely fastened.
- The arm features a 180° adjustable angle. Press the 'PRESS' button on the arm to adjust the angle and length as needed.
- Extend the arm to the desired length for comfortable reach.

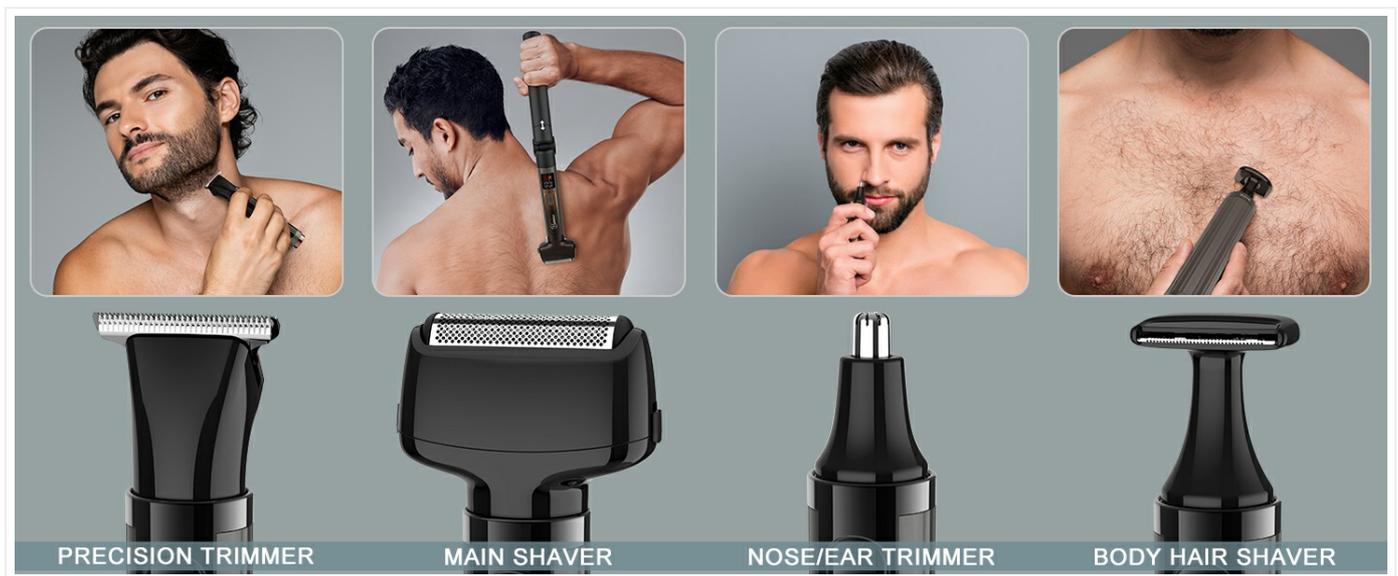


Image: The extendable arm demonstrating its 180-degree adjustable opening and how to extend its length by pressing the lock button.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Speed Settings

The trimmer is operated with a single button.

- To turn on: Press the ON/OFF button once.
- To adjust speed: Press the ON/OFF button again to cycle through available speeds. The 'Turbo' mode will be indicated on the LED display.
- To turn off: Press the ON/OFF button until the device powers down.

4.2 Travel Lock Function

The travel lock prevents accidental activation during transport.

- To activate travel lock: Press and hold the ON/OFF button for 3 seconds. A lock icon will appear on the LED display.
- To deactivate travel lock: Press and hold the ON/OFF button for 3 seconds. The lock icon will disappear.

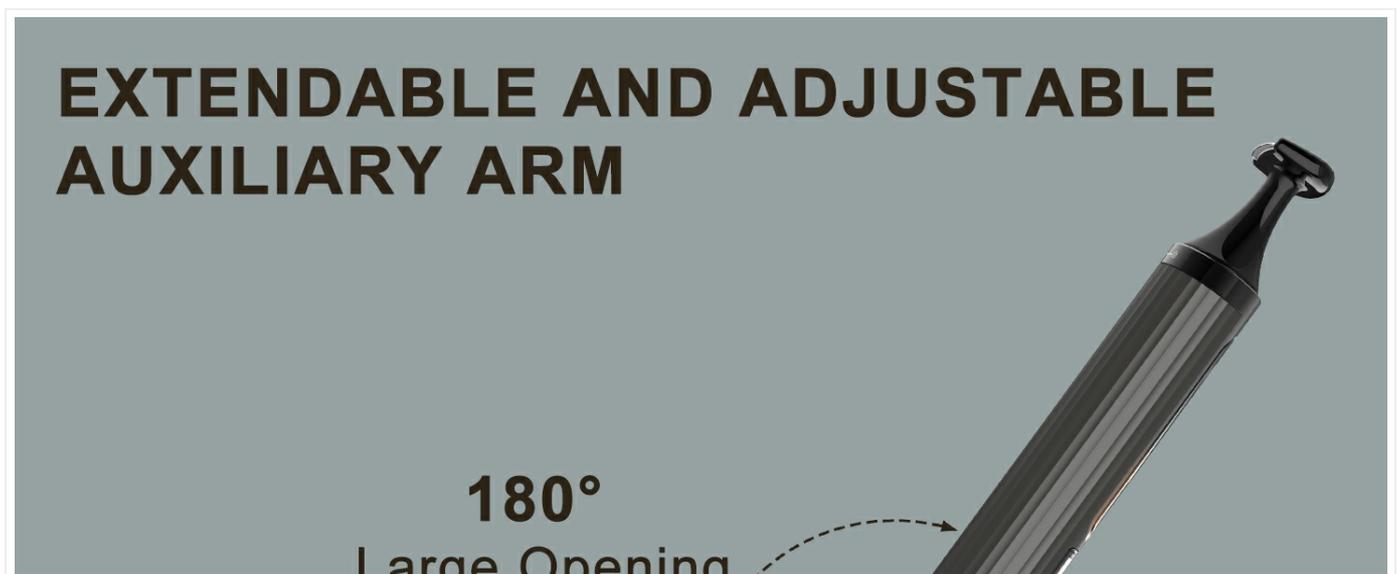


Image: The trimmer's LED display illustrating the ON/OFF button, travel lock activation/deactivation, battery display, running time, and charging time.

4.3 Grooming Tips

- For best results, ensure skin is clean and dry before trimming.
- Use the appropriate guide comb for desired hair length.
- Move the trimmer against the direction of hair growth for a closer trim.
- The blades are designed to be skin-friendly, gliding smoothly to prevent pulling or irritation.
- For back shaving, utilize the extendable arm to reach all areas comfortably.

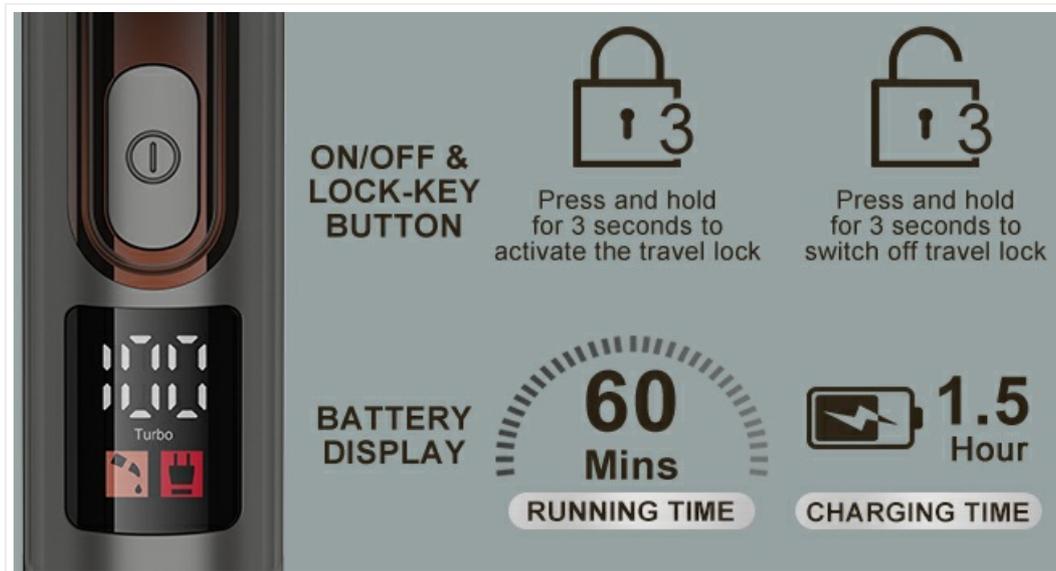


Image: Close-up view of the skin-friendly blades on various trimmer heads, including the foil shaver and nose/ear trimmer.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your trimmer.

5.1 Cleaning the Trimmer

The Hatteker Electric Body Trimmer features an IPX6 waterproof design, allowing for easy cleaning.

- After each use, remove the trimmer head.
- Rinse the trimmer head and the main unit directly under running tap water.
- Use the provided cleaning brush to remove any stubborn hair clippings from the blades.
- Allow all parts to air dry completely before reassembling or storing.



Image: The Hatteker trimmer submerged in water, highlighting its IPX6 washable design for easy cleaning under running water.

5.2 Storage

Store the trimmer in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the travel lock is activated if transporting the device.

6. TROUBLESHOOTING

If you encounter issues with your Hatteker Electric Body Trimmer, refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or travel lock activated.	Charge the trimmer for 1.5 hours. Deactivate travel lock by pressing and holding the ON/OFF button for 3 seconds.
Trimmer stops during use.	Automatic shutdown feature or low battery.	The trimmer automatically shuts off after 15 minutes of continuous use. Press the ON/OFF button to resume. If it continues to stop, recharge the battery.
Poor trimming performance.	Blades are dull or clogged with hair.	Clean the trimmer head and blades thoroughly. Consider replacing the head if performance does not improve.
Skin irritation after use.	Improper technique or sensitive skin.	Ensure blades are clean. Use a gentle touch and trim in the direction of hair growth if irritation occurs. Avoid pressing too hard.

7. SPECIFICATIONS

- **Model Number:** 6198
- **Brand:** Hatteker
- **Power Source:** Battery Powered
- **Battery Type:** 1 AA (included)
- **Battery Life:** Up to 60 minutes
- **Charging Time:** Approximately 1.5 hours
- **Waterproof Rating:** IPX6 (Washable)
- **Blade Material:** Stainless Steel
- **Weight:** 200 Grams
- **Color:** Black
- **Country of Origin:** China

8. WARRANTY AND SUPPORT

For any problems encountered during use, please contact Hatteker customer support. Refer to your purchase documentation for specific warranty details and contact information.

Note: The set does not include a charging adapter; the USB cable is compatible with universal charging adapters.

