

[Manuals.plus](#) /

› [DEERTiME](#) /

› DEERTiME E9 Android 14 Tablet User Manual

DEERTiME E9

DEERTiME E9 Android 14 Tablet User Manual

Model: E9

1. OVERVIEW

The DEERTiME E9 Android 14 Tablet is a versatile device designed for productivity and entertainment. It features an octa-core processor, ample memory, and a high-definition touchscreen, making it suitable for various tasks from browsing and streaming to light work.

What's Included

- DEERTiME E9 Tablet
- Bluetooth Keyboard (QWERTY)
- Wireless Mouse
- Protective Case
- Protective Film (Screen Protector)
- 5V/2A Charger
- Type-C Cable
- USB to Type-C Adapter
- User Manual



This image displays all the components included in your DEERTiME E9 Tablet package, ensuring you have everything needed for immediate use.

2. SETUP GUIDE

Initial Power On

1. Press and hold the power button located on the side of the tablet until the DEERTiME logo appears.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.

Connecting Accessories (Keyboard & Mouse)

The DEERTiME E9 Tablet comes with a Bluetooth keyboard and a wireless mouse for enhanced productivity. Follow these steps to connect them:

1. **For the Bluetooth Keyboard:**
 - a. Turn on the keyboard. Look for a small switch on the keyboard, usually labeled 'ON/OFF' or a Bluetooth symbol.
 - b. On your tablet, go to **Settings > Connected devices > Pair new device**
 - c. The tablet will scan for nearby Bluetooth devices. Select the keyboard from the list (it may appear as 'Bluetooth Keyboard' or a similar name).
 - d. Follow any on-screen pairing instructions, which may include entering a code on the keyboard.
2. **For the Wireless Mouse:**
 - a. Locate the USB receiver for the wireless mouse, typically found in a compartment on the mouse itself.
 - b. Insert the USB receiver into the provided USB to Type-C adapter.
 - c. Plug the Type-C end of the adapter into the tablet's Type-C port.
 - d. Turn on the mouse. The mouse should automatically connect to the tablet.



This image illustrates the tablet being used with its keyboard and mouse, demonstrating a typical setup for productivity.

This video demonstrates the unboxing and initial setup of the DEERTiME E9 tablet, including connecting the keyboard and mouse, and navigating the Android 14 interface.

3. OPERATING INSTRUCTIONS

Navigating Android 14

The DEERTiME E9 Tablet runs on the latest Android 14 operating system, offering an intuitive and personalized user experience. Key features include:

- **Personalized Operation:** Customize your tablet's desktop with widgets and themes.
- **Privacy & Security:** Enhanced controls for app permissions and data privacy.
- **Parental Controls:** Manage screen time and app access for children.
- **Multitasking:** Utilize split-screen mode to run two applications simultaneously.


Faster Processing Speeds



Octa-core



2.0GHz

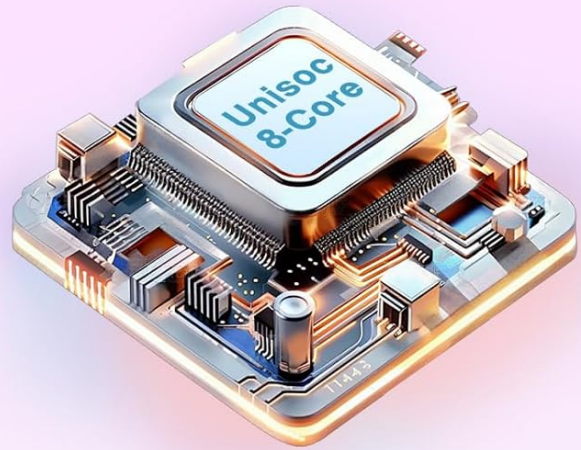

Fine Appearance



10.1 FHD



5G+2.4G
WiFi



5MP+8MP



Three Color Options



Face Unlock



Stereo Sound

PureScund Audio



Dual Speaker

Pure Sound Quality



3.5mm

Headsetjack



This image highlights the Android 14 interface on the DEERTIME E9 Tablet, showcasing features like parental controls and multitasking capabilities.

Display Features (Widevine L1, Split-Screen)

The 10.1-inch HD touchscreen with 1280x800 resolution provides a clear and vibrant viewing experience. With Widevine L1 support, you can stream high-definition content from popular platforms like Netflix and Amazon Prime Video without geographic restrictions, provided you have Wi-Fi access. The split-screen feature allows for efficient multitasking, enabling you to view and interact with two apps side-by-side.



This image shows the tablet's screen casting feature, allowing you to project content onto a larger display for an enhanced viewing experience.

Camera Usage


The tablet is equipped with a 5MP front camera and an 8MP rear camera. These cameras are suitable for video calls, capturing casual photos, and scanning documents.



A detailed view of the tablet's camera, highlighting its design and placement.

Face Unlock

For quick and secure access, the DEERTIME E9 Tablet supports face unlock. To set this up, navigate to **Settings > Security > Face unlock** and follow the on-screen instructions to register your face.

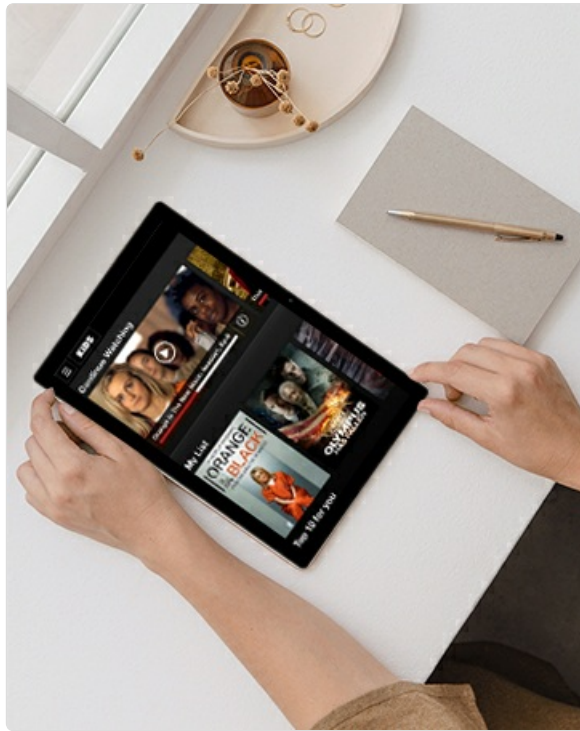

This image demonstrates the convenient face unlock feature for quick and secure access to your tablet.

4. BATTERY MANAGEMENT

The DEERTIME E9 Tablet is equipped with an 8000mAh battery, providing extended usage times for various activities.

Charging

To charge your tablet, connect the provided Type-C cable to the tablet's Type-C port and the other end to the 5V/2A charger. Plug the charger into a wall outlet. A charging indicator will appear on the screen.

Optimizing Battery Life

- Reduce screen brightness.
- Disable Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.
- Enable battery saver mode in Settings.



This graphic highlights the impressive 8000mAh battery capacity and estimated usage times for different activities such as gaming, video playback, web surfing, and e-reading.

5. MAINTENANCE AND CARE

Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

Software Updates

Regularly check for software updates to ensure optimal performance and security. Go to **Settings > System > System update** to check for and install available updates.

Storage Management

The tablet comes with 128GB of internal storage, expandable up to 1TB via a Micro SD TF card. To manage storage, go to **Settings > Storage**. You can free up space by uninstalling unused apps, deleting old files, or moving media to an external SD card.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your DEERTiME E9 Tablet.

Issue	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Screen is unresponsive	Restart the tablet. If the issue persists, ensure the screen is clean and free of debris. A factory reset may be necessary as a last resort (back up your data first).
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled in Settings. Restart your Wi-Fi router. Forget the network and try reconnecting. Check if other devices can connect to the same network.
Keyboard/Mouse not connecting	Ensure Bluetooth is enabled on the tablet (for keyboard). For the mouse, ensure the USB receiver is properly inserted into the adapter and tablet. Check battery levels of accessories. Re-pair the devices if necessary.
Apps crashing or freezing	Close and reopen the app. Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). Ensure the tablet's software is up to date.

7. SPECIFICATIONS

Detailed technical specifications for the DEERTiME E9 Tablet:

Feature	Specification
Operating System	Android 14
Processor	Octa-Core (2.0GHz A75 + A55 cores)
RAM	22GB (6GB physical + 16GB virtual)
Internal Storage	128GB ROM
Expandable Storage	Up to 1TB via Micro SD TF card
Screen Size	10.1 Inches

Feature	Specification
Screen Resolution	1280x800 pixels (HD)
Battery Capacity	8000mAh Lithium Polymer
Front Camera	5MP
Rear Camera	8MP
Wireless Connectivity	2.4G/5G Wi-Fi, Bluetooth 5.0
Other Features	Widevine L1, Face Unlock, GPS, Dual Speakers, GMS Certified
Dimensions	9.6 x 0.4 x 6.3 inches
Weight	1.2 pounds

Latest Systems & Higher Configurations

Android 14 | Octa-core CPU | Thin& Light

10.1"
E9



10.1-inch IPS

16:10 Screen Ratio



Straight Edges



Dual Speaker



5MP



8MP



22GB RAM
(6+16)GB



128GB ROM



8000mAh



5G+2.4G
WiFi

This image provides a visual summary of the tablet's advanced configurations and features, including its Android 14 OS and Octa-core CPU.

8. WARRANTY AND SUPPORT

DEERTiME products are designed for reliability and performance. For specific warranty details and support, please refer to the warranty card included in your product packaging or visit the official DEERTiME store.

- **Online Support:** For frequently asked questions and troubleshooting tips, visit the DEERTiME brand store on Amazon: [DEERTiME Store](#)
- **Customer Service:** If you require further assistance, please contact DEERTiME customer support through the contact information provided in your user manual or on the brand's official channels.

© 2024 DEERTiME. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reset the DEERTiME E9 tablet?

To reset your DEERTiME E9 tablet, you can use one of the following methods depending on whether you need a simple restart or a full factory reset: Forced Restart (If the tablet is frozen): Press...

[Read full answer](#)