

[Manuals.plus](#) /

› [Madesa](#) /

› Madesa Nobre Wardrobe 11935Z - 3 Sliding Door Closet Instruction Manual

Madesa 11935Z

Madesa Nobre Wardrobe 11935Z Instruction Manual

Model: 11935Z | Brand: Madesa

PRODUCT OVERVIEW

The Madesa Nobre Wardrobe is a matrimonial closet designed for efficient organization and storage in your bedroom. It features three sliding doors, ample internal compartments, and a durable engineered wood construction with a high-protection finish.



Front view of the Madesa Nobre Wardrobe, showcasing its three sliding doors and brown finish.


DIMENSIONS

Understand the overall dimensions of your Madesa Nobre Wardrobe to ensure it fits your space.

- **Height:** 205 cm
- **Width:** 170 cm
- **Depth:** 51 cm



Diagram illustrating the external height (205 cm), width (170 cm), and depth (51 cm) of the wardrobe.

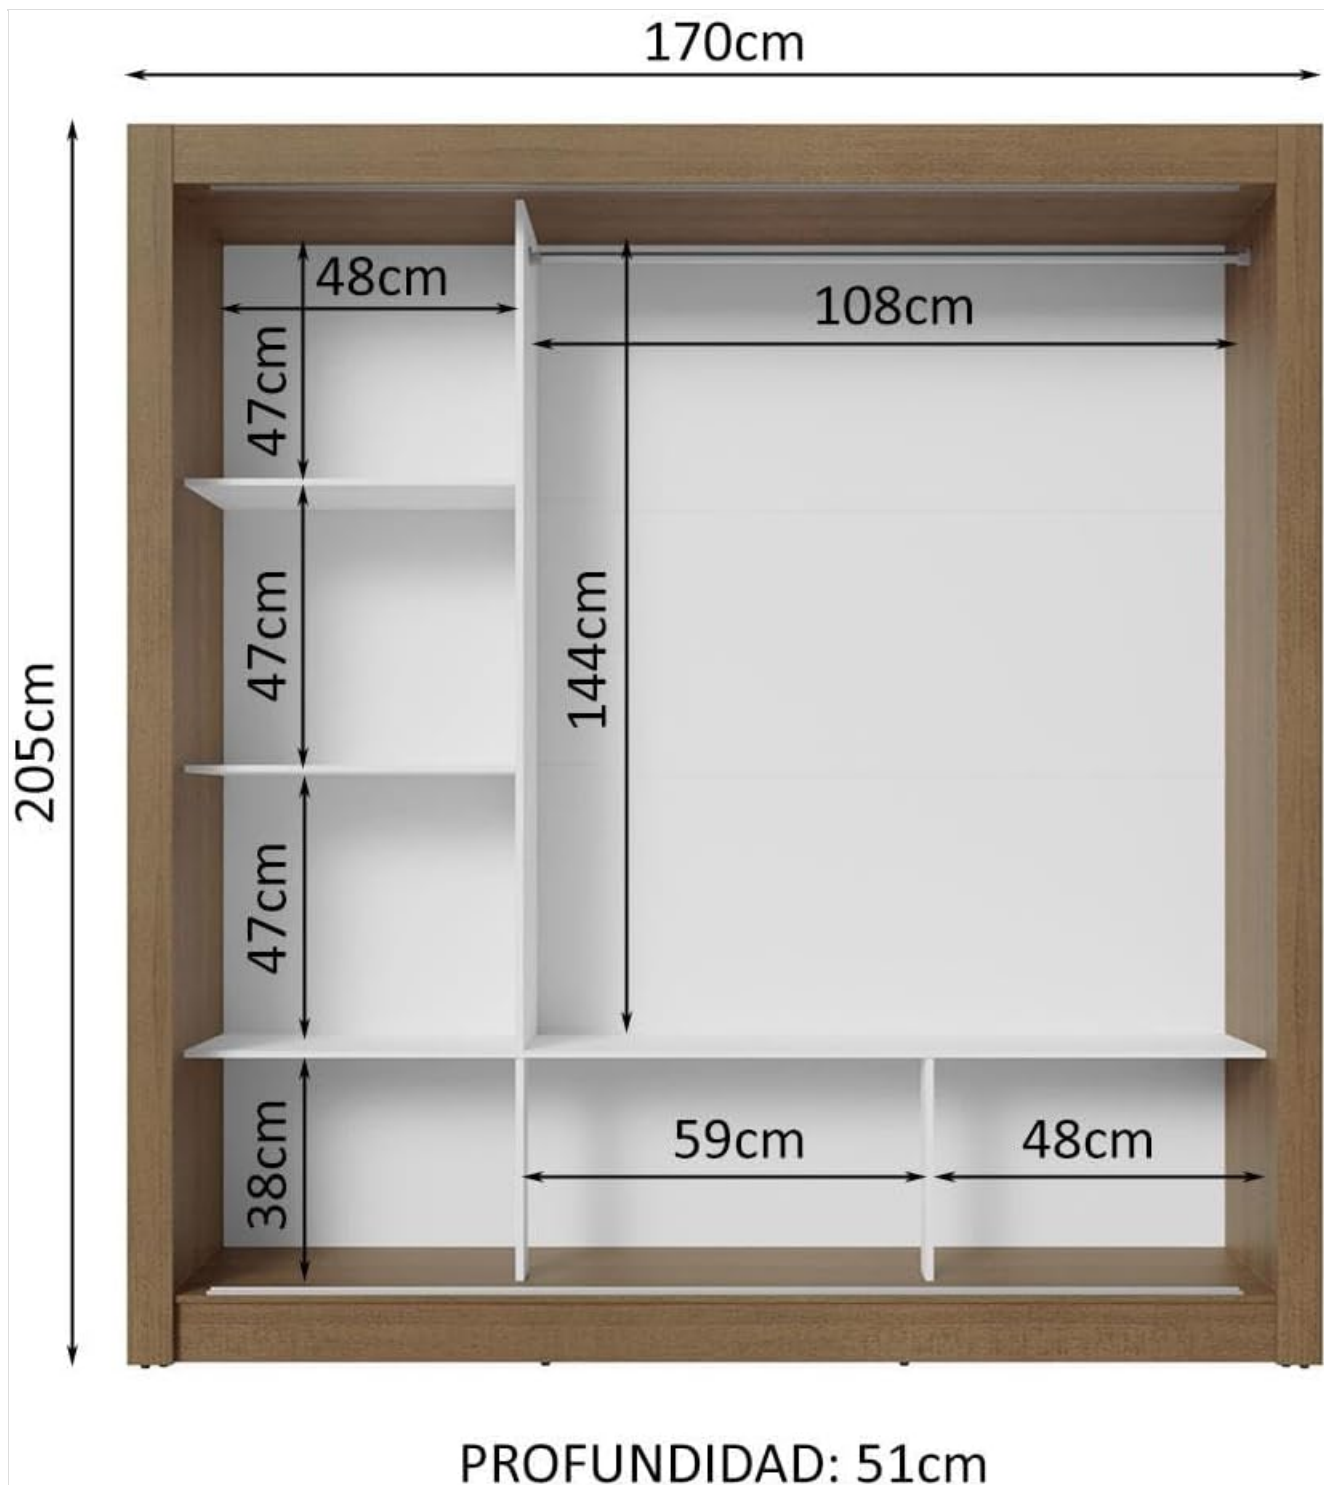

Internal layout diagram showing shelf and hanging space dimensions, including 48cm, 47cm, 38cm shelf heights and 108cm hanging width.

SETUP AND ASSEMBLY

This wardrobe requires assembly. Follow the provided instructions carefully. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

Preparation

- Unpack all components and verify against the parts list (not provided here, refer to physical manual).
- Ensure you have the necessary tools (e.g., screwdriver, hammer).
- Choose a clear, spacious area for assembly.

Assembly Steps (General Guidelines)

1. Assemble the main frame structure using the provided fasteners.
2. Install the internal shelves and dividers according to the diagram.
3. Attach the metal hanger bars securely.
4. Install the aluminum rails for the sliding doors on both the top and bottom sections.
5. Mount the three sliding doors onto the rails, ensuring smooth operation.
6. Attach the minimalist handles to the doors.



Detail of the minimalist handle design, facilitating door operation.

Note: Detailed, step-by-step assembly instructions with diagrams are included in the physical product package. Refer to those for precise guidance.

OPERATING INSTRUCTIONS

Sliding Doors

The wardrobe features three sliding doors with aluminum rails for smooth and quiet operation. To open or close a door, gently slide it along its track. Avoid forcing the doors, as this can damage the rails or the door mechanism.



Illustration of the smooth-gliding doors with aluminum rails, ensuring quiet and effortless movement.

Storage Capacity


Utilize the multiple internal niches and the heavy-duty metallic hanger bar for efficient organization of clothing, footwear, and accessories. The hanger bar is suitable for long garments.



Repisas espaciosas

Repisas amplias, diseñadas para una mejor organización y fácil acceso a tus pertenencias.

View of the spacious internal shelves, designed for organized storage of various items.

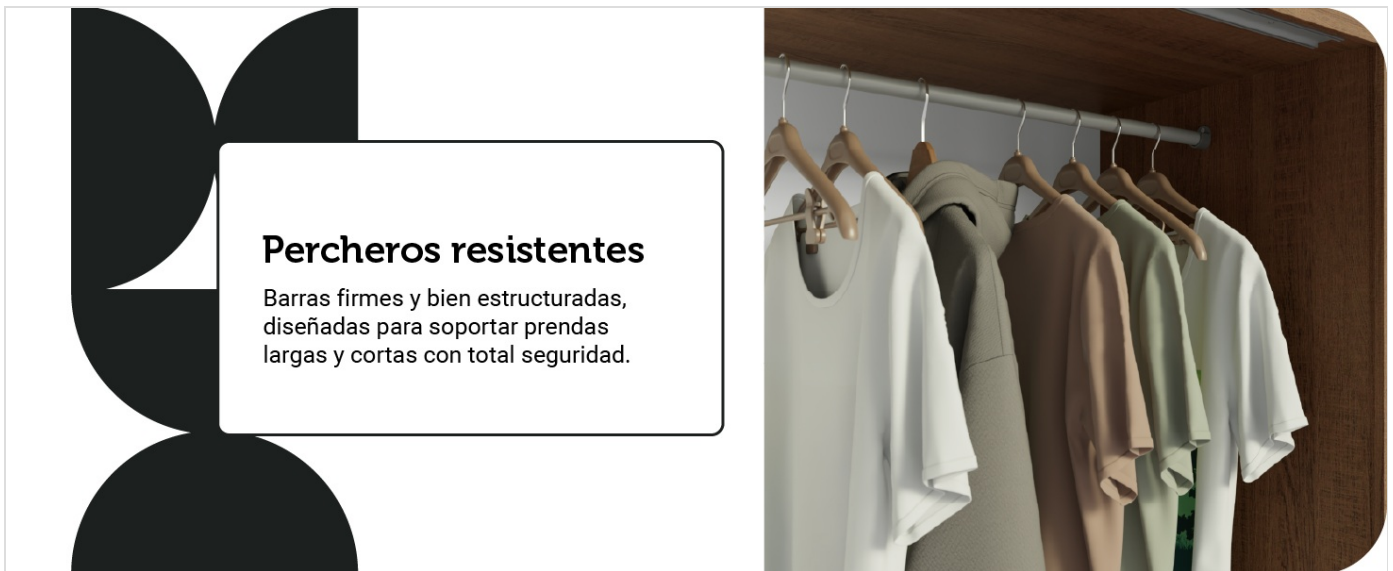

Percheros resistentes

Barras firmes y bien estructuradas, diseñadas para soportar prendas largas y cortas con total seguridad.

Detail of the robust hanger bars, capable of supporting various garments.

MAINTENANCE

Proper maintenance ensures the longevity and appearance of your Madesa Nobre Wardrobe.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, as these can damage the polyester finish.
- **Dusting:** Regularly dust the wardrobe with a dry, soft cloth to prevent buildup.
- **Rail Maintenance:** Periodically check the aluminum sliding door rails for any debris or obstructions. Clean them gently to ensure continued smooth operation.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 5 kg per shelf/compartment to prevent structural damage.
- **Environmental Conditions:** Keep the wardrobe in a stable environment, away from direct sunlight, extreme temperatures, and high humidity, which can affect wood products.



The high-resistance polyester finish provides durability and is easy to clean, maintaining the wardrobe's appearance.

TROUBLESHOOTING

If you encounter issues with your wardrobe, refer to the following common solutions:

Problem	Possible Cause	Solution
Doors do not slide smoothly.	Debris in rails, misaligned doors, loose fasteners.	Clean rails of any dust or objects. Check door alignment and adjust if necessary. Ensure all fasteners are tightened.
Wardrobe feels unstable.	Uneven floor, loose assembly fasteners.	Ensure the wardrobe is on a level surface. Re-tighten all assembly screws and bolts.
Parts are missing or damaged during assembly.	Manufacturing error, shipping damage.	Contact Madesa customer support (see Support section) with your purchase details and a description of the issue.

SPECIFICATIONS

Model:	11935Z
Brand:	Madesa
Dimensions (H x W x D):	205 cm x 170 cm x 51 cm
Material:	Engineered Wood (Frame, Back, Top), Aluminum (Handles, Rails)
Color:	Brown
Number of Doors:	3 (Sliding)
Number of Shelves:	3
Number of Compartments:	7
Maximum Weight Capacity (per shelf):	5 kg

Assembly Required:	Yes
Installation Type:	Freestanding, Floor Mount
Finish Type:	Polyester Paint (7 layers)
Sustainability:	Wood from renewable sources

WARRANTY INFORMATION

Specific warranty details for the Madesa Nobre Wardrobe are typically provided with the product packaging or can be obtained directly from Madesa customer service. Please refer to the documentation included with your purchase for comprehensive warranty terms and conditions.

SUPPORT

For further assistance, questions regarding assembly, parts, or product information, please contact Madesa customer support. Contact details are usually available on the manufacturer's website or within the product packaging.

You can also visit the official Madesa store on Amazon for more information:[Madesa Amazon Store](#)

© 2026 Madesa. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

