

Moose 25251

Moose FLIPSLIDE Portable Electronic Game Instruction Manual

1. INTRODUCTION

The FLIPSLIDE is a portable electronic game designed to challenge your quick thinking and dexterity. The objective is to flip and slide colored blocks to match illuminated patterns. It features four distinct game modes: Quick Mode, Level Mode, Memory Mode, and Multiplayer Mode, offering versatile gameplay for individuals or groups. This manual provides comprehensive instructions for setup, operation, and maintenance of your FLIPSLIDE game.

Safety Information

WARNING: Choking hazard. This toy contains small parts. Not suitable for children under 3 years of age.

2. SETUP

Battery Installation

The FLIPSLIDE game requires AA/AAA batteries, which are included with the product. To install or replace batteries:

1. Locate the battery compartment on the back of the FLIPSLIDE unit.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert the batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Ensure the batteries are properly installed before first use.



Figure 2.1: Front view of the FLIPSLIDE game in its packaging.

3. OPERATING INSTRUCTIONS

Basic Gameplay

The core gameplay involves manipulating the colored blocks to match patterns displayed by lights. Follow these general steps:

1. **Power On:** Press the power button to start the game.
2. **Select Mode:** Choose one of the four game modes (see below).
3. **Observe Pattern:** The game will display a light pattern on the central blocks.
4. **Flip Blocks:** Rotate the outer blocks to reveal the correct colors.
5. **Slide Blocks:** Slide the colored blocks into the positions that match the illuminated pattern.
6. **Win:** Successfully reproduce the pattern to complete a round or level.

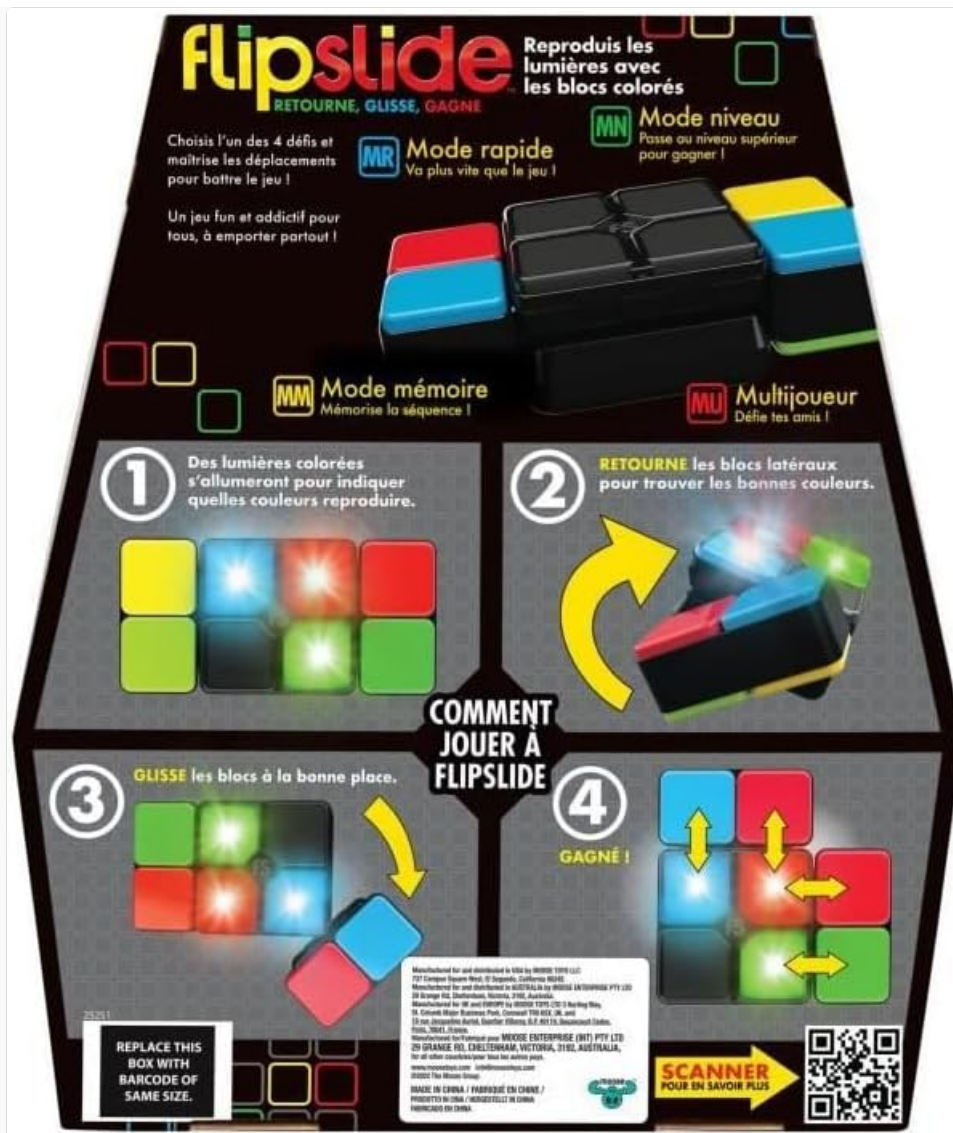


Figure 3.1: Visual guide to FLIPSLIDE gameplay steps.

For additional information and gameplay tips, visit the official product page: [FLIPSLIDE Official Page](#)

Game Modes

The FLIPSLIDE offers four engaging game modes:

- **Quick Mode:** A fast-paced challenge to solve patterns as quickly as possible.
- **Level Mode:** Progress through increasingly difficult levels, testing your skills.
- **Memory Mode:** Remember and reproduce complex light sequences.
- **Multiplayer Mode:** Challenge friends or family in head-to-head competitions.

Volume Control

The FLIPSLIDE features adjustable volume settings. You can increase, decrease, or completely deactivate the sound to suit your environment and preference. Refer to the device's controls for volume adjustment buttons.



Figure 3.2: Various gameplay scenarios with the FLIPSLIDE.

4. MAINTENANCE

Cleaning and Storage

- To clean the FLIPSLIDE, wipe it with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- Store the game in a cool, dry place away from direct sunlight and extreme temperatures.
- If the game will not be used for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Common Issues

- **Game does not turn on:** Check if the batteries are correctly installed and fully charged. Replace if necessary.
- **Lights are dim or flickering:** This may indicate low battery power. Replace the batteries.
- **Sound issues:** Ensure the volume is not set to minimum or muted.
- **Blocks are stiff or stuck:** Ensure no foreign objects are obstructing the sliding mechanism. Do not force the blocks.

If you encounter persistent issues not covered here, please refer to the support section.

6. SPECIFICATIONS

Feature	Detail
Brand	Moose
Model Number	25251
Dimensions (L x W x H)	15.2 x 7.6 x 4.9 cm
Weight	120 grams
Recommended Age	8 years and up
Educational Value	Problem-solving skills, Pattern recognition
Number of Players	1 (supports multiplayer mode)

Batteries Required	Yes
Batteries Included	Yes
Battery Type	AA/AAA
Main Material	Plastic
Components Included	1 Flipslide game, 1 instruction manual

7. WARRANTY AND SUPPORT

Information regarding product warranty and specific customer support contact details was not provided in the available data. Please refer to the product packaging or the retailer's website for warranty terms and support options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question