

[Manuals.plus](#) /

› [RONGFA](#) /

› RONGFA Large Kids Tent Play House Instruction Manual

RONGFA B0DD4XJDFM

RONGFA Large Kids Tent Play House Instruction Manual

Model: B0DD4XJDFM

INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and care of your RONGFA Large Kids Tent Play House. Please read these instructions carefully before assembly and retain for future reference.

PRODUCT OVERVIEW

Features:

- **Spacious Design:** Measures 47 inches (L) x 40 inches (W) x 52 inches (H) (119.4 cm x 119.4 cm x 149.9 cm).
- **Capacity:** Accommodates up to three children, or one adult and one child.
- **Ventilation:** Features four large windows with white gauze curtains and a large main door.
- **Material:** Durable, machine-washable cotton fabric with a fibreglass frame.
- **Easy Assembly:** Designed for quick assembly without tools, typically within 10 minutes by an adult.

Included Accessories:

- Tent cloth cover
- Assembly poles
- Detachable and washable base cloth
- Star light (decorative)
- Decorative flag
- Carry bag

ENJOYABLE PLAYHOUSE



STAR LIGHT



PENNANT BANNERS



CARRY BAG



Image: The RONGFA Kids Tent Play House shown with its included accessories: a star light, pennant banners, and a carry bag for portability.

SAFETY INFORMATION

- Adult supervision is recommended during assembly and play.
- Keep away from open flames and heat sources.
- Ensure all poles are securely connected to prevent collapse.
- Do not hang heavy objects from the tent frame.

- Regularly inspect the tent for any damage or wear.

SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the carry bag. Verify that all parts listed in the "Included Accessories" section are present.
2. **Assemble Frame:** Connect the fibreglass poles according to the provided diagram. Ensure every pole is tightly connected to fit the fabric cover correctly. An adult can typically complete this step in about 10 minutes.
3. **Attach Fabric Cover:** Drape the tent cloth cover over the assembled frame. Ensure it is positioned correctly, aligning the door and window openings.
4. **Install Base Cloth:** Place the detachable base cloth inside the tent, securing it if there are attachment points.
5. **Add Accessories:** Attach the decorative flag to the top of the tent and place the star light inside as desired.

LARGE TENT SIZE



• Size:

47"(L) 40"(W) 52"(H)

• Accommodate:

2-3kids + an adult



PLEASE NOTE:

Press and make sure **EVERY** poles **tightly** connected to fit the cover, or the fabric cover won't fit over the tent structure.

Image: A visual representation of the tent's dimensions (47"L x 40"W x 52"H) and a crucial reminder to ensure all poles are tightly connected during assembly for proper fit.




Carry Bag



Mesh Curtain with Straps



4 windows

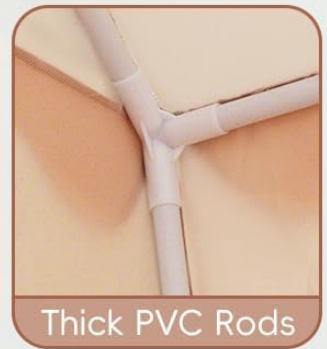

Thick PVC Rods

Image: Detailed view of the tent's components, including the carry bag, mesh curtains with securing straps, the design of the four windows, and the thick PVC rods used for the frame.

OPERATING INSTRUCTIONS

- **Curtain Operation:** The white gauze curtains on the windows and door can be tied back for an open feel or left down for privacy.
- **Star Light:** The included star light is for decorative purposes. Follow the light's specific instructions for battery installation and operation.

- **Usage:** The tent is suitable for indoor play, reading, or as a quiet space. It can also be used outdoors on lawns for parties or holidays, provided weather conditions are suitable.



Image: Two scenes showing children engaging in activities inside the tent: one child playing with blocks, and another child reading a book, highlighting the tent's versatility.

MAINTENANCE AND CARE

- **Cleaning Fabric:** All fabric components of the tent are machine washable. Use a gentle cycle with cold water and mild detergent. Do not bleach. Air dry or tumble dry on low heat.

- **Cleaning Frame:** Wipe the fibreglass poles with a damp cloth if necessary.
- **Storage:** When not in use, disassemble the tent and store all components in the provided carry bag in a cool, dry place away from direct sunlight.
- **Inspection:** Periodically check the fabric for tears and the poles for cracks or damage. Replace any damaged parts immediately.

WASHABLE FABRICS

All fabrics on the tent are machine washable.



Image: A visual confirmation that all fabric parts of the RONGFA Kids Tent are machine washable, accompanied by a washing machine icon.

- **Tent fabric does not fit:** Ensure all poles are fully and tightly connected. Disassemble and reassemble, paying close attention to pole connections.
- **Tent is unstable:** Verify that the frame is correctly assembled and all connections are secure. Ensure the tent is placed on a flat, stable surface.
- **Missing parts:** If any parts are missing upon unpacking, please contact customer support.

SPECIFICATIONS

Brand	RONGFA
Model	B0DD4XJDFM
Product Dimensions (L x W x H)	47 x 40 x 52 inches (119.4 x 119.4 x 149.9 cm)
Material (Fabric)	Cotton
Frame Material	Fibreglass
Assembly Required	Yes
Age Range	Kid

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the seller's contact information on your purchase receipt or the product listing page. Keep your proof of purchase for any warranty claims.

For further assistance, please contact the retailer where the product was purchased.

