

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Dreamegg](#) /

› [Dreamegg Travel White Noise Machine \(Model HX-R30-US\) Instruction Manual](#)

Dreamegg HX-R30-US

Dreamegg Travel White Noise Machine (Model HX-R30-US) Instruction Manual

Your guide to peaceful sleep on the go.

INTRODUCTION

Thank you for choosing the Dreamegg Travel White Noise Machine. This compact and portable device is designed to help you achieve restful sleep and relaxation by masking unwanted noises with a variety of soothing sounds. Please read this manual carefully to ensure proper use and maintenance of your device.



Image: The Dreamegg Travel White Noise Machine, a small, pink, cylindrical device, is held delicately between two fingers, emphasizing its compact and portable design.

SAFETY INFORMATION

- Do not use in the bath or near water.
- Keep the USB-C charging port away from liquids.
- Not intended for use by children. Keep out of reach of children.
- Remove battery when not in use to prevent overheating.

PACKAGE CONTENTS

- Dreamegg Travel White Noise Machine (Model HX-R30-US)
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

The Dreamegg Travel White Noise Machine features a simple and intuitive control layout for ease of use, even in low light conditions.

Controls:

- **Nubbed Button:** This multi-function button is located on the bottom of the device. It is used for Power On/Off, cycling through sound options, adjusting volume, and setting the timer. Its raised design allows for easy tactile identification.
- **USB-C Port:** Located on the side of the device, this port is used for charging.

SETUP

Charging the Device:

1. Locate the USB-C charging port on the device.
2. Connect the provided USB-C cable to the device and a compatible USB power adapter (not included) or a computer's USB port.
3. The device features a 1000mAh battery, offering extended use. It can be used while charging.

Small but Rechargeable

Easy charging with USB-C



Image: The Dreamegg device is shown connected to a laptop via its USB-C charging cable, illustrating the charging process.

OPERATING INSTRUCTIONS

1. Power On/Off:

- To power on the device, press the **nubbed button** located on the bottom.
- To power off, press and hold the nubbed button until the sound stops.

2. Sound Selection:

- After powering on, press and hold the **nubbed button** to cycle through the 16 available sound options. Release the button when you hear your desired sound.

3. Volume Adjustment:

- Press the **nubbed button** once (short press) to adjust the volume. There are 32 levels of volume control.

4. Timer Function:

- Press the **nubbed button** twice (double press) to set a timer. Cycle through 30, 60, or 90-minute options.
- To enable continuous play, cycle past the 90-minute option.
- The device features a memory function, recalling your last sound and volume settings.

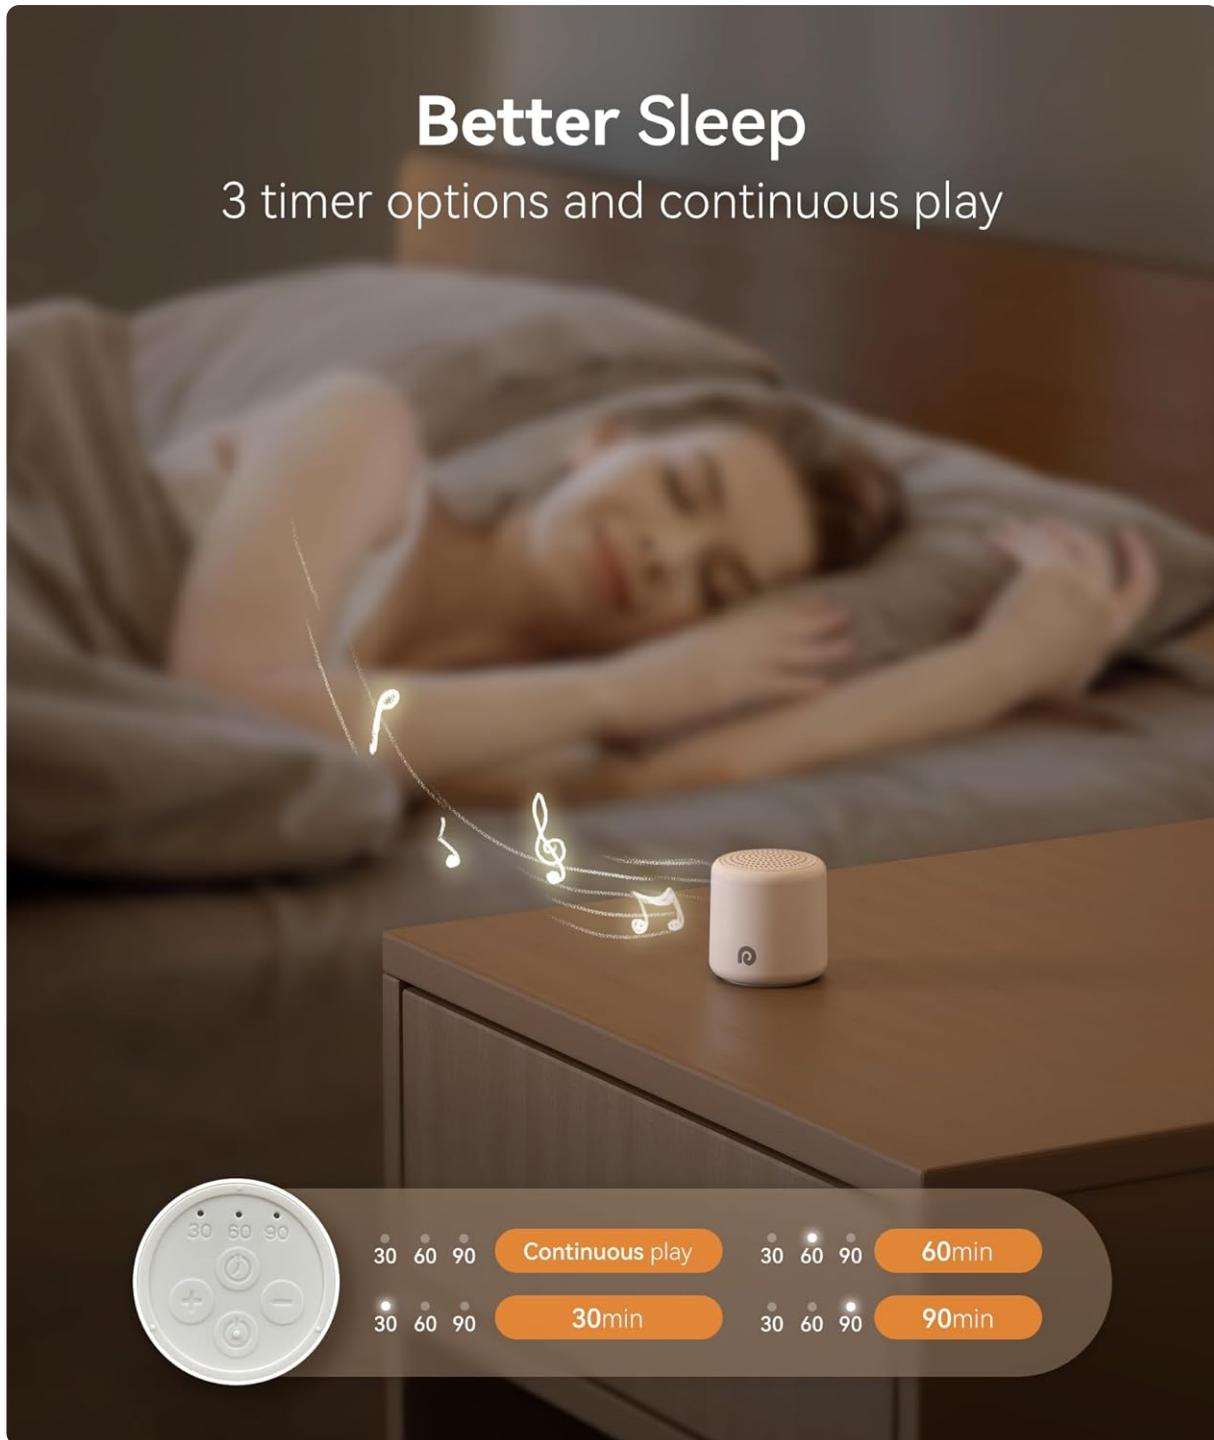


Image: The Dreamegg device is placed on a nightstand, with an overlay illustrating the timer options: 30 minutes, 60 minutes, 90 minutes, and continuous play.

AVAILABLE SOUNDS

The Dreamegg Travel White Noise Machine offers 16 distinct soothing sounds:

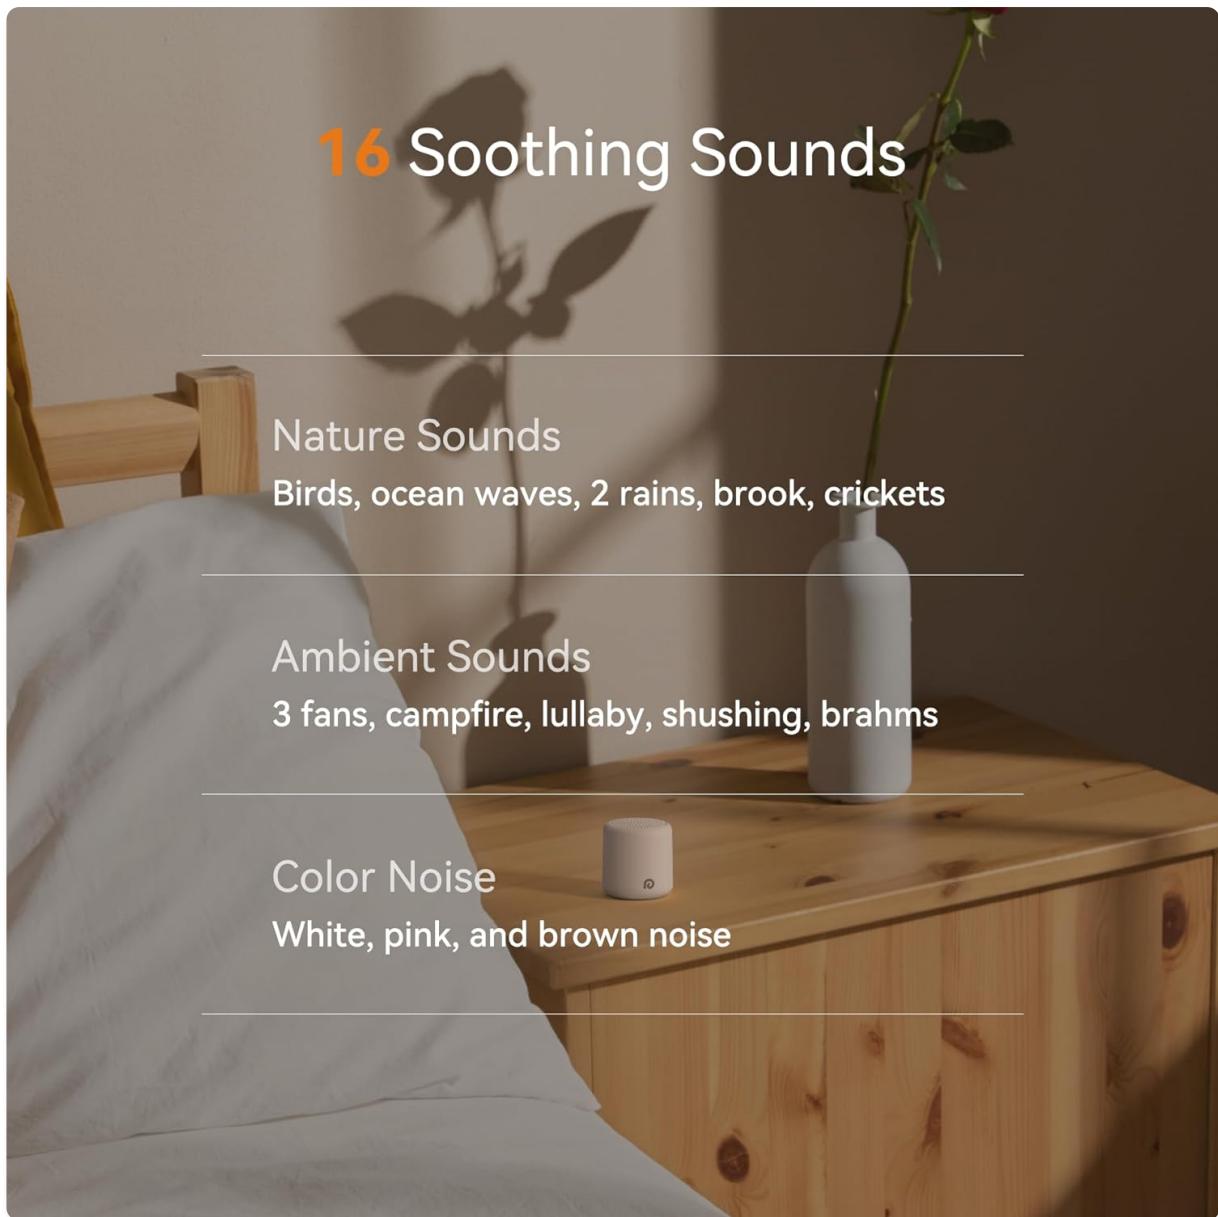


Image: A visual representation of the 16 available sounds, categorized for easy understanding: Nature Sounds (Birds, Ocean Waves, 2 Rains, Brook, Crickets), Ambient Sounds (3 Fans, Campfire, Lullaby, Shushing, Brahms), and Color Noise (White, Pink, and Brown Noise).

- **Nature Sounds:** Birds, Ocean Waves, Rain (2 variations), Brook, Crickets.
- **Ambient Sounds:** Fan Sounds (3 variations), Campfire, Lullaby, Shushing, Brahms.
- **Color Noise:** White Noise, Pink Noise, Brown Noise.

MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly.

TROUBLESHOOTING

No Sound:

- Ensure the device is powered on.
- Check the volume level; increase if necessary.
- Ensure the device is charged.

Device Not Charging:

- Verify the USB-C cable is securely connected to both the device and the power source.
- Try a different USB-C cable or power adapter.
- Ensure the power source is active.

Sound Quality Issues:

- Ensure the device is placed on a stable, flat surface.
- Avoid placing the device near other electronic devices that may cause interference.

SPECIFICATIONS

Product Dimensions	1.8 x 1.8 x 1.9 inches
Item Weight	1.6 Ounces
Model Number	HX-R30-US
Battery Type	1 Lithium Polymer battery (included)
Battery Capacity	1000mAh
Power Source	Battery Powered
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Pink

WARRANTY AND SUPPORT

Dreamegg products are designed for reliability and performance. For any questions, concerns, or technical assistance, please contact Dreamegg customer support. Dreamegg offers 24-hour customer support to assist you.

For more information and support, please visit the official Dreamegg store:[Dreamegg Store on Amazon](#)

Related Documents - HX-R30-US

	<p>Dreamegg Sleep Lite D11 Max Travel Sound Machine User Manual User manual for the Dreamegg Sleep Lite D11 Max Travel Sound Machine, providing safety information, package contents, operating instructions, and troubleshooting tips.</p>
---	---

 <p>D11 Portable White Noise Machine User's Manual</p> <p>Model No.: HFD-W11</p> <p>Model d'utilisation Manuale di istruzioni Manual de usuario Gebrauchsanleitung 使用说明书</p> <p>English.....01 Français.....09 Italiano.....15 Español.....21 Deutsche.....27 日本語.....33</p>	<p>Dreamegg D11 Portable White Noise Machine User's Manual</p> <p>User's manual for the Dreamegg D11 Portable White Noise Machine, covering package contents, technical information, safety guidelines, operation, charging, sound selection, night light, volume adjustment, timer functions, child lock, memory function, warranty, and customer service.</p>
 <p>Dreams Begin with Dreamegg Smart white noise machine</p> <p>USER MANUAL</p>	<p>Dreamegg Nite 1 Smart White Noise Machine User Manual</p> <p>Comprehensive user manual for the Dreamegg Nite 1 smart white noise machine, covering setup, app control, features, safety information, and troubleshooting.</p>
 <p>D11 MAX Portable White Noise Machine User's Manual</p> <p>Model No.: HFD-W11 Max</p> <p>Model d'utilisation Manuale di istruzioni Manual de usuario Gebrauchsanleitung 使用说明书</p> <p>English.....01 Français.....08 Italiano.....13 Español.....18 Deutsche.....23 日本語.....28</p>	<p>Dreamegg D11 MAX Portable White Noise Machine User Manual</p> <p>User manual for the Dreamegg D11 MAX Portable White Noise Machine, covering package contents, technical specifications, safety information, usage instructions, warranty, and customer support.</p>
 <p>D3 Pro Portable White Noise Sound Machine User's Manual</p> <p>Model No.: HFD-W04</p> <p>Questions or Answers? Answers to frequently asked questions and memory settings in 30 hours for any problems. FAQs & Memory</p>	<p>Dreamegg D3 Pro Portable White Noise Sound Machine User Manual</p> <p>Comprehensive user manual for the Dreamegg D3 Pro Portable White Noise Sound Machine (Model No. HFD-W04), covering setup, operation, troubleshooting, and warranty information.</p>
 <p>Dreamegg Sleep Lite D11 Portable Sound Machine For Baby</p> <p>User Manual</p>	<p>Dreamegg Sleep Lite D11 User Manual: Portable Baby Sound Machine</p> <p>Comprehensive user manual for the Dreamegg Sleep Lite D11, a portable sound machine designed to help babies sleep. Learn about features, safety, and troubleshooting.</p>