



Manuals.plus /

› BoostArea /

› BoostArea Dimmable Floor Lamp User Manual

BoostArea B1382

BoostArea Dimmable Floor Lamp User Manual

Model: B1382

1. INTRODUCTION

Thank you for choosing the BoostArea Dimmable Floor Lamp. This manual provides essential information for the safe and efficient use of your new lamp. This arc-style floor lamp features stepless dimmable brightness (10% to 100%) and adjustable color temperature (2700K warm white to 6500K cool white), controlled via a magnetic remote or foot switch. Its flexible design allows for 350° horizontal rotation and 90° vertical rotation of the lamp head, making it suitable for various lighting needs in living rooms, bedrooms, study rooms, and offices.



Image 1.1: The BoostArea Dimmable Floor Lamp, showcasing its remote control and various color temperature settings from warm to cool white.

2. SAFETY INFORMATION

Please read all safety instructions before installation and use. Keep this manual for future reference.

- Ensure the power supply is disconnected before assembly, cleaning, or maintenance.
- This lamp is designed for **indoor use only**. Do not expose to water or high humidity.
- Use only the specified E26 LED dimming bulb (Max 60W). Using an incompatible bulb may cause damage or fire.
- Do not attempt to modify or disassemble the lamp. Contact qualified personnel for repairs.
- Keep the lamp away from flammable materials.
- Ensure the base is placed on a stable, level surface to prevent tipping. The sturdy base (10 inch, 6.6 LB) has passed UL 8° Stability tests.
- Keep the remote control and batteries out of reach of children.

3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- Lamp Base
- Lamp Pole Sections (multiple)
- Lamp Head with E26 Socket
- Linen Lampshade
- 10W/1200LM Dimmable LED Bulb (E26)
- Remote Control (with batteries)
- Foot Switch (integrated into power cord)
- User Manual

Installation Steps



Image 3.1: Detail of the natural linen lampshade, which diffuses light for a softer glow.



Image 3.2: The sturdy metal base ensures stability for the floor lamp.

4. SETUP AND ASSEMBLY

Assembly typically takes approximately 5 minutes and requires no additional tools.

1. **Install the Lampshade:** Carefully unfold and attach the lampshade fabric to the metal rings, ensuring it forms a cylindrical shape.
2. **Assemble the Lamp Pole:** Screw all the lamp pole tubes together from top to bottom, ensuring each section is securely tightened.
3. **Attach to Base:** Insert the assembled lamp pole into the lamp base and rotate clockwise until it is firmly secured.
4. **Prepare Socket:** Unscrew the socket ring from the lamp holder on the lamp head.
5. **Secure Lampshade:** Place the assembled lampshade onto the lamp holder, then screw the socket ring back on to secure the lampshade in place.
6. **Install Bulb:** Screw the provided E26 LED bulb into the lamp socket.



Image 4.1: Visual guide for the six-step assembly process of the BoostArea Dimmable Floor Lamp.

5. OPERATING INSTRUCTIONS

The lamp can be operated using the included remote control or the integrated foot switch.

5.1. Remote Control Functions

The magnetic remote control allows for comprehensive adjustment of the lamp's settings from up to 16.5 feet away. It can be conveniently attached to any iron surface.



Image 5.1: Layout of the remote control with labels for each button's function.

- **On/Off/Matching:** Press once to turn on/off. Press and hold to pair the remote with the lamp if needed.
- **Brightness Up/Down:** Adjusts brightness steplessly from 10% to 100%.
- **Color Temperature Switching (K):** Cycles through preset color temperatures or allows stepless adjustment.
- **2700K:** Sets the light to warm white.
- **6500K:** Sets the light to cool white.
- **Neutral Light Mode:** Activates a balanced neutral white light (often around 4000K-5000K) at maximum brightness.
- **1 Hour Timing (1H):** Activates a 1-hour timer, after which the lamp will automatically turn off.
- **Night Light Mode:** Provides a very dim, warm light suitable for sleeping environments.
- **Babyfeeding Mode:** Offers a soft, gentle light ideal for nighttime feeding without disturbing sleep.
- **Working Mode:** Provides bright, cool white light suitable for concentration and tasks.
- **Reading Mode:** Delivers a comfortable, moderate brightness and color temperature for reading.



Image 5.2: Illustration of the lamp's stepless color temperature adjustment, from warm to cool light.



Image 5.3: Demonstration of the lamp's stepless dimmable brightness feature, adjustable from 5% to 100%.

5.2. Foot Switch

The foot switch, located on the power cord, provides a convenient way to turn the lamp on or off without using

the remote control.

5.3. Flexible Lamp Head

The lamp head can be rotated 350° horizontally and 90° vertically, allowing you to direct light precisely where needed for reading, working, or ambient lighting.



Image 5.4: The flexible lamp head can be adjusted to direct light as desired.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lamp.

- **Cleaning:** Disconnect the power before cleaning. The inner PVC of the lampshade is waterproof and oil-resistant. The outer linen can be cleaned with a damp cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled before attempting to replace it. Use only E26 LED dimming bulbs, with a maximum wattage of 60W.
- **Remote Control Batteries:** If the remote control's range or responsiveness decreases, replace the batteries. Refer to the remote control's battery compartment for the correct battery type.

7. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power, bulb loose or faulty, remote batteries dead, lamp not paired.	Check power outlet. Ensure bulb is screwed in tightly. Replace remote batteries. Re-pair remote by pressing and holding the On/Off button.
Remote control not working.	Batteries dead or incorrectly inserted, remote out of range, remote not paired.	Replace batteries, ensure correct polarity. Move closer to the lamp (within 16.5ft). Re-pair remote.
Brightness or color temperature cannot be adjusted.	Remote control issue, incompatible bulb.	Check remote functionality. Ensure an E26 LED dimming bulb is used.
Lamp flickers.	Loose bulb, unstable power supply, faulty bulb.	Tighten bulb. Try a different power outlet. Replace bulb.

8. SPECIFICATIONS

Feature	Specification
Model Name	Dimming floor lamp with Lampshade
Model Number	B1382
Brand	BoostArea
Product Dimensions	10"D x 10"W x 67"H
Item Weight	9.61 pounds
Light Source Type	LED
Wattage	10 watts (Max 60W for E26 bulb)
Bulb Base	E26
Color Temperature	2700K-6500K (Stepless)
Brightness	10%-100% (Stepless Dimmable)
Material	Linen, Metal
Shade Material	Linen
Base Material	Metal
Switch Type	Remote and Foot Switch
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor
Special Features	Adjustable Color Temperature, Dimmable, Flexible Head, Remote Control, Timer
Batteries Required	Yes (for remote control)

9. WARRANTY AND SUPPORT

BoostArea products are manufactured with quality and durability in mind. For specific warranty details, please refer to the product packaging or contact BoostArea customer support.

If you have any questions, require technical assistance, or need to report a problem, please contact our customer support team:

- **Email:** support@boostarea.com (Example)
- **Website:** www.boostarea.com (Example)

Please have your model number (B1382) and purchase date available when contacting support.