

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PRITOM](#) /

› [PRITOM TAB15 11-inch Android 14 Tablet User Manual](#)

PRITOM TAB15

PRITOM TAB15 11-inch Android 14 Tablet User Manual

Model: TAB15

[Overview](#) [Setup](#) [Operating](#) [Introduction](#) [What's in the Box](#) [Device](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your PRITOM TAB15 11-inch Android 14 Tablet. Please read this guide thoroughly to ensure proper use and to maximize your device's performance and longevity.

The PRITOM TAB15 features an 11-inch HD IPS display, an Octa-Core processor, 128GB of internal storage, and runs on Android 14. It is designed for a versatile user experience, from entertainment to productivity.

Support 5Ghz WiFi
giving you fast and easy access to the Internet



Double BOX
Speakers



2.4GHz & 5 GHz
WIFI



8 Core



128 GB
Storage



Image: The PRITOM TAB15 tablet showcasing its HD IPS display with clear visuals.

2. WHAT'S IN THE Box

Upon opening your PRITOM TAB15 package, please verify that all the following items are included:

- PRITOM TAB15 11-inch Android Tablet
- USB Type-C Charging Cable

- Power Adapter
- Protective Leather Case
- User Guide (this document)



Image: The PRITOM TAB15 tablet alongside its protective leather case.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your PRITOM TAB15 tablet.

3.1 Key Features

- **Display:** 11-inch HD IPS (1280x800)
- **Processor:** 2.0 GHz Octa-Core
- **RAM:** 8GB (4GB physical + 4GB virtual)
- **Storage:** 128GB internal, expandable up to 1TB via microSD card
- **Cameras:** 2.0 MP Front, 8.0 MP Rear
- **Connectivity:** Wi-Fi 6 (5GHz & 2.4GHz), Bluetooth
- **Battery:** 8000mAh
- **Operating System:** Android 14

 <p>Dark Grey</p>	<p>11 inch 1280*800 IPS</p> 
 <p>Free Leather Case</p>	<p>Octa Core Android 14</p> 
 <p>128GB ROM 1TB Expand</p>	<p>4 GB RAM (+4GB Expand)</p> 
 <p>2.0 MP Front 8.0 MP Rear</p>	<p>5GHz WIFI & WIFI 6</p> 
 <p>8000 mAh Battery</p>	<p>Type-c Charging port 3.5 mm Headphone jack</p> 

Image: An overview of the tablet's main specifications and features.

4. SETUP

4.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the USB Type-C cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the PRITOM logo appears.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.
- **To Restart:** Press and hold the Power button until a menu appears. Select "Restart" and confirm.

4.3 Initial Setup

When you power on the tablet for the first time, you will be guided through the initial setup process. This includes:

1. Selecting your language.
2. Connecting to a Wi-Fi network.
3. Setting up your Google account (or creating a new one). This is essential for downloading apps from the Google Play Store.
4. Setting up screen lock (PIN, pattern, or password).
5. Reviewing and accepting terms and conditions.

5. OPERATING YOUR TABLET

5.1 Basic Navigation

The tablet uses touch gestures for navigation:

- **Tap:** To select an item or open an app.
- **Tap & Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages or lists.
- **Pinch:** To zoom in or out on images and web pages.

5.2 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Internet**.
2. Toggle Wi-Fi to **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

With its 11" bigger display screen, light & portable design and metal frame, it is perfectly sized for entertainment on the go



Image: The tablet supports 5GHz Wi-Fi for fast internet access.

5.3 Bluetooth Pairing

1. Go to **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Toggle Bluetooth to **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the list of available devices and follow on-screen prompts to pair.

5.4 Installing Applications

Your PRITOM TAB15 is GMS certified, allowing full access to the Google Play Store. To install apps:

1. Open the **Play Store** app.
2. Search for the desired app.
3. Tap **Install** and follow the instructions.



Image: The tablet's screen showing various applications available through GMS certification.

5.5 Camera Usage

The tablet is equipped with a 2.0 MP front camera and an 8.0 MP rear camera. Open the **Camera** app to take photos or record videos. Tap the screen to focus and press the shutter button to capture.

5.6 Storage Management

The tablet comes with 128GB of internal storage. You can expand this by inserting a microSD card (up to 1TB) into the designated slot. To manage storage, go to **Settings > Storage**.

Plenty of room for files and media

Ample storage capacity for all your work and leisure needs.

 **128GB**
ROM

 **1TB Expansion**
(Micro SD)



Image: The tablet offers 128GB internal storage with 1TB expansion capability.

5.7 Eye Health Mode

To reduce eye strain, especially during prolonged reading, activate the Eye Health mode. This feature reduces blue light emission. You can usually find this option in **Settings > Display**.

6. MAINTENANCE

6.1 Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, which can damage the screen or finish.

6.2 Battery Care

The PRITOM TAB15 is equipped with an 8000mAh Lithium-Cobalt battery, providing up to 10 hours of mixed use. To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.

- Use the provided charger for optimal charging.

8000mAh High Capacity Battery



Image: The 8000mAh battery provides extended usage times for various activities.

6.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

7. TROUBLESHOOTING

If you encounter issues with your PRITOM TAB15, refer to the following common solutions:

7.1 Tablet Not Powering On

- Ensure the tablet is fully charged. Connect it to the charger for at least 30 minutes.
- Press and hold the Power button for 10-15 seconds to force a restart.

7.2 Wi-Fi Connection Issues

- Check if Wi-Fi is enabled in Settings.
- Restart your Wi-Fi router.
- Forget the network in tablet settings and reconnect.

7.3 Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache and data in **Settings > Apps > [App Name] > Storage & cache**.
- Ensure the app is updated to its latest version via the Play Store.

7.4 Slow Performance

- Close unnecessary background apps.
- Clear cache for frequently used apps.
- Consider performing a factory reset (backup your data first). Go to **Settings > System > Reset options > Erase all data (factory reset)**.

8. SPECIFICATIONS

Feature	Detail
Model Name	TAB15
Operating System	Android 14
Display Size	11 Inches
Screen Resolution	1280x800 HD IPS
Processor	2.0 GHz Octa-Core 64Bit
RAM	8GB (4GB physical + 4GB virtual)
Internal Storage	128 GB
Expandable Storage	Up to 1TB via Micro SD Card
Front Camera	2.0 MP
Rear Camera	8.0 MP
Wi-Fi	Wi-Fi 6 (802.11ax), 5GHz & 2.4GHz
Bluetooth	Yes
Battery Capacity	8000mAh Lithium-Cobalt
Battery Life (Average)	10 Hours (mixed use)
Charging Port	USB Type-C
Audio Jack	3.5mm Headphone Jack
Dimensions (LxWxH)	10.1 x 6.7 x 0.3 inches
Weight	1.1 pounds
Color	Gray



Image: Physical dimensions of the PRITOM TAB15 tablet.

9. WARRANTY & SUPPORT

9.1 Warranty Information

The PRITOM TAB15 tablet comes with a **1-year worry-free guarantee**. If you experience any quality-related issues with your tablet within this period, please contact PRITOM customer service for a free replacement or resolution.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact PRITOM customer support. Refer to the contact information provided with your purchase or visit the official PRITOM website for support details. PRITOM is committed to providing high-quality products and attentive service. Your satisfaction is important to us.

	<p>PRITOM IRA T1029 User Guide</p> <p>User guide for the PRITOM IRA T1029 tablet, covering function overview, getting started, home screen, settings, network connection, app management, multimedia, troubleshooting, and specifications.</p>
	<p>PRITOM IRA T1029 User Guide</p> <p>User guide for the PRITOM IRA T1029 tablet, covering function overview, getting started, home screen, settings, network connection, app management, multimedia, troubleshooting, and specifications.</p>
	<p>Benton M10 Tablet PC User Guide, Specifications, and FCC Compliance</p> <p>Comprehensive user guide for the Benton M10 Tablet PC, covering setup, features, network connection, app management, troubleshooting, and FCC compliance information.</p>
 <p>Mit SonarPen-kompatible Geräte [Aktualisiert: 6. Januar 2024]</p>	<p>SonarPen Compatible Devices List</p> <p>A comprehensive list of devices compatible with SonarPen, including Apple, Android, and Nintendo Switch devices. Find the right SonarPen model for your device.</p>
 <p>Dispositivos compatibles con SonarPen [Actualizado: 6 de enero de 2024]</p>	<p>SonarPen Compatible Devices: A Comprehensive Guide</p> <p>Discover which Apple, Android, Windows, and Chromebook devices are compatible with the SonarPen stylus. This guide lists supported models across numerous brands, ensuring you find the perfect match for your digital drawing and note-taking needs.</p>
 <p>SonarPen compatible devices [Updated: 7 Sept 2023]</p>	<p>SonarPen Device Compatibility List and Setup Guide</p> <p>Comprehensive guide to SonarPen compatibility with Apple, Android, Chromebook, Windows, and Nintendo Switch devices, including setup instructions and a detailed list of supported models.</p>

