

[Manuals.plus](#) /

› [Devoko](#) /

› Devoko L Shaped Gaming Desk Model 0457 Instruction Manual

Devoko 0457

Devoko L Shaped Gaming Desk Instruction Manual

Model: 0457

1. INTRODUCTION

Thank you for choosing the Devoko L Shaped Gaming Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read these instructions carefully before beginning assembly and retain them for future reference.

Safety Information

- Ensure all parts are present and undamaged before assembly.
- Assemble the desk on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid damaging components.
- Keep small parts away from children during assembly.
- Do not stand or sit on the desk.
- Distribute weight evenly across the desk surface.



Image 1.1: The Devoko L Shaped Gaming Desk, showcasing its design and potential setup with multiple monitors and accessories.

2. PACKAGE CONTENTS

Before assembly, verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

- Desktop Panels (L-shaped sections)
- Leg Frames (Z-shaped design)
- Connecting Brackets and Support Bars
- Adjustable Foot Pads
- Assembly Hardware (screws, bolts, Allen wrench)
- Instruction Manual

 
3. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward and can typically be completed by one person within 30 minutes. Follow these steps carefully:

1. **Unpack and Identify:** Carefully unpack all components and lay them out on a soft, clean surface. Identify each part using the provided parts list (if applicable) or by comparing them to the diagrams.
2. **Attach Leg Frames to Desktop Panels:** Secure the Z-shaped leg frames to the underside of the desktop panels using the provided screws. Ensure the frames are oriented correctly for the L-shape configuration. Do not fully tighten screws yet.
3. **Connect Desktop Sections:** Join the two main desktop sections using the central connecting brackets and screws. Align the edges carefully to create a seamless L-shape.
4. **Install Support Bars:** Attach any additional support bars or crossbars between the leg frames for enhanced

stability. The Z-leg design includes reinforced crossbars for increased durability.

5. **Attach Foot Pads:** Screw the adjustable foot pads into the bottom of each leg. These pads help stabilize the desk on uneven floors and protect your flooring.
6. **Final Tightening:** Once all components are loosely assembled and aligned, gradually tighten all screws and bolts. Ensure the desk is stable and level.

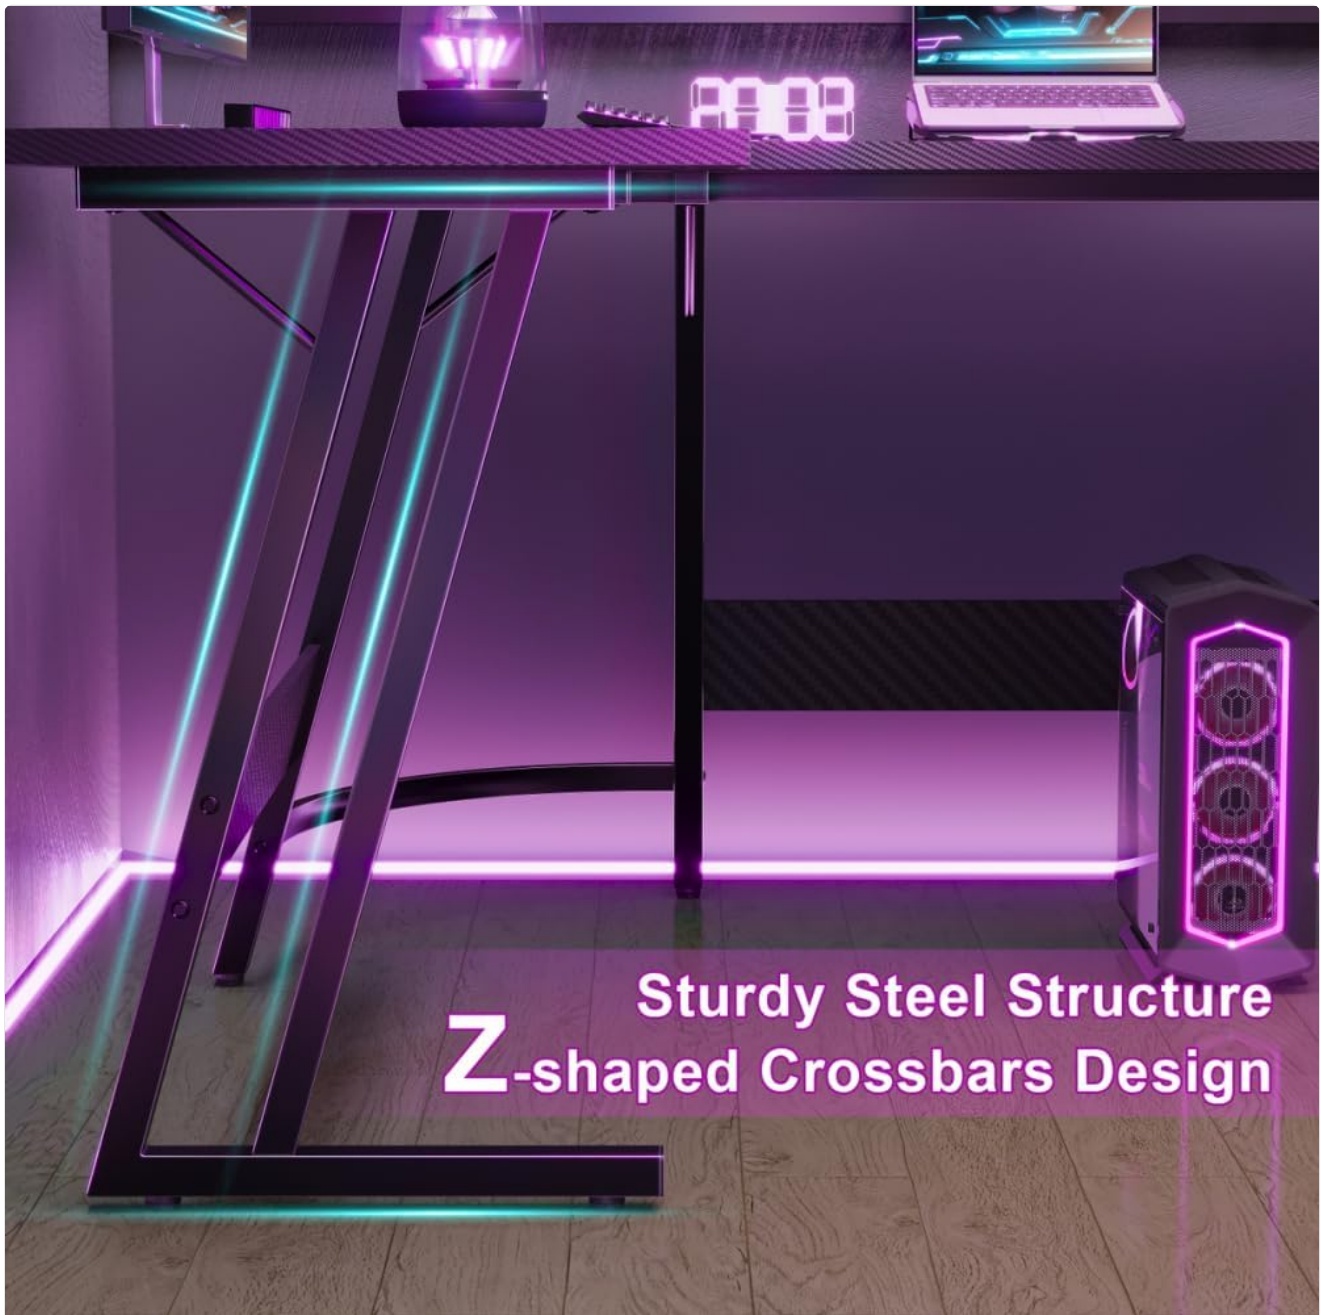

Sturdy Steel Structure Z-shaped Crossbars Design

Image 3.1: Detail of the sturdy Z-shaped crossbars design, which reinforces the desk's stability.



Image 3.2: View of the carbon fiber matt texture desktop and the adjustable foot pads for leveling.

4. USAGE GUIDELINES

The Devoko L Shaped Gaming Desk is designed for optimal comfort and functionality in home and office environments.

Ergonomic Considerations

- Position your monitor(s) at eye level to reduce neck strain.
- Ensure your keyboard and mouse are at a comfortable height, allowing your forearms to be parallel to the floor.
- Utilize the spacious legroom under the desk to stretch your legs comfortably and maintain good posture.

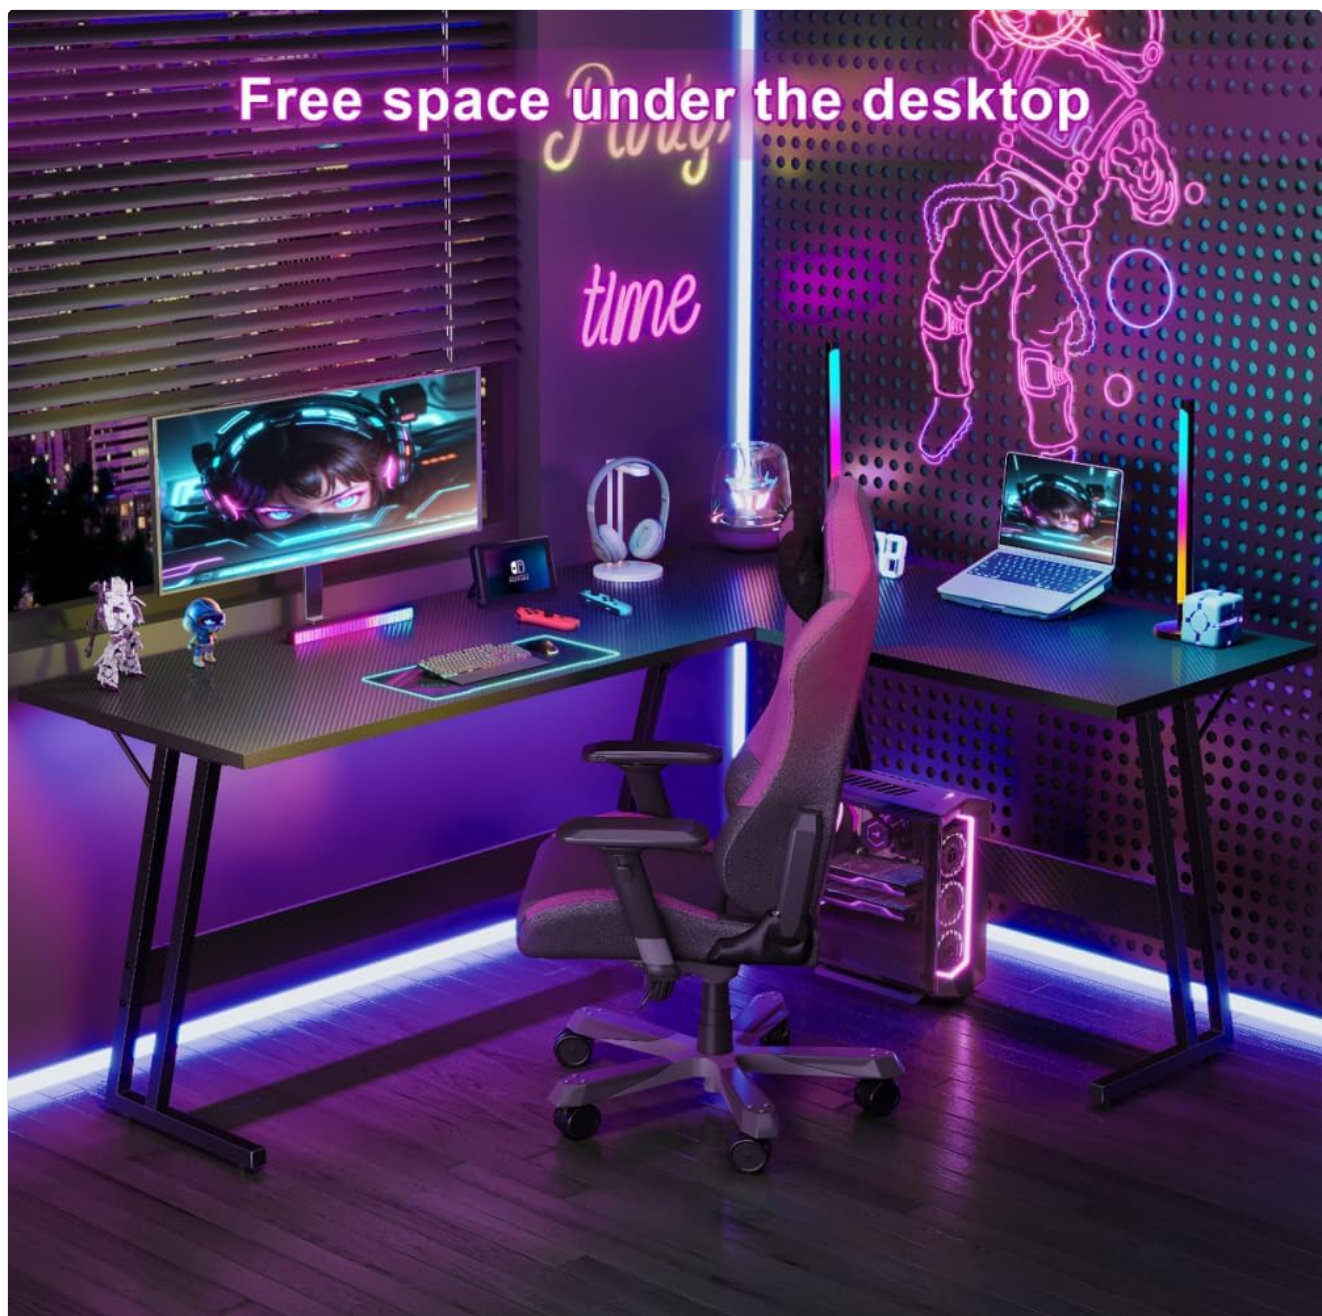 


Image 4.1: The desk provides ample space underneath, allowing for comfortable leg positioning and accommodating a gaming chair.

Weight Capacity

While the desk is built with sturdy materials, avoid placing excessive weight on any single point. Distribute the weight of monitors, computers, and other equipment evenly across the desktop surface.

5. CARE AND MAINTENANCE

Proper care will extend the lifespan and maintain the appearance of your Devoko L Shaped Gaming Desk.

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the carbon fiber texture.
- **Spills:** Clean up spills immediately to prevent staining or damage to the desktop material.
- **Heat:** Avoid placing hot items directly on the desk surface. Use coasters or protective pads.
- **Sunlight:** Prolonged exposure to direct sunlight may cause fading or material degradation over time.
- **Tighten Fasteners:** Periodically check and retighten all screws and bolts to ensure the desk remains stable.

6. TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common solutions:

- **Desk is Wobbly:**
 - Ensure all screws and bolts are securely tightened.
 - Adjust the foot pads on the bottom of the legs to level the desk on uneven flooring.
 - Verify that the desk is placed on a flat, stable surface.
- **Parts Do Not Align:**
 - Loosen all screws slightly, realign the parts, and then retighten.
 - Double-check the orientation of each component against the assembly diagrams.

7. PRODUCT SPECIFICATIONS

Detailed specifications for the Devoko L Shaped Gaming Desk, Model 0457.

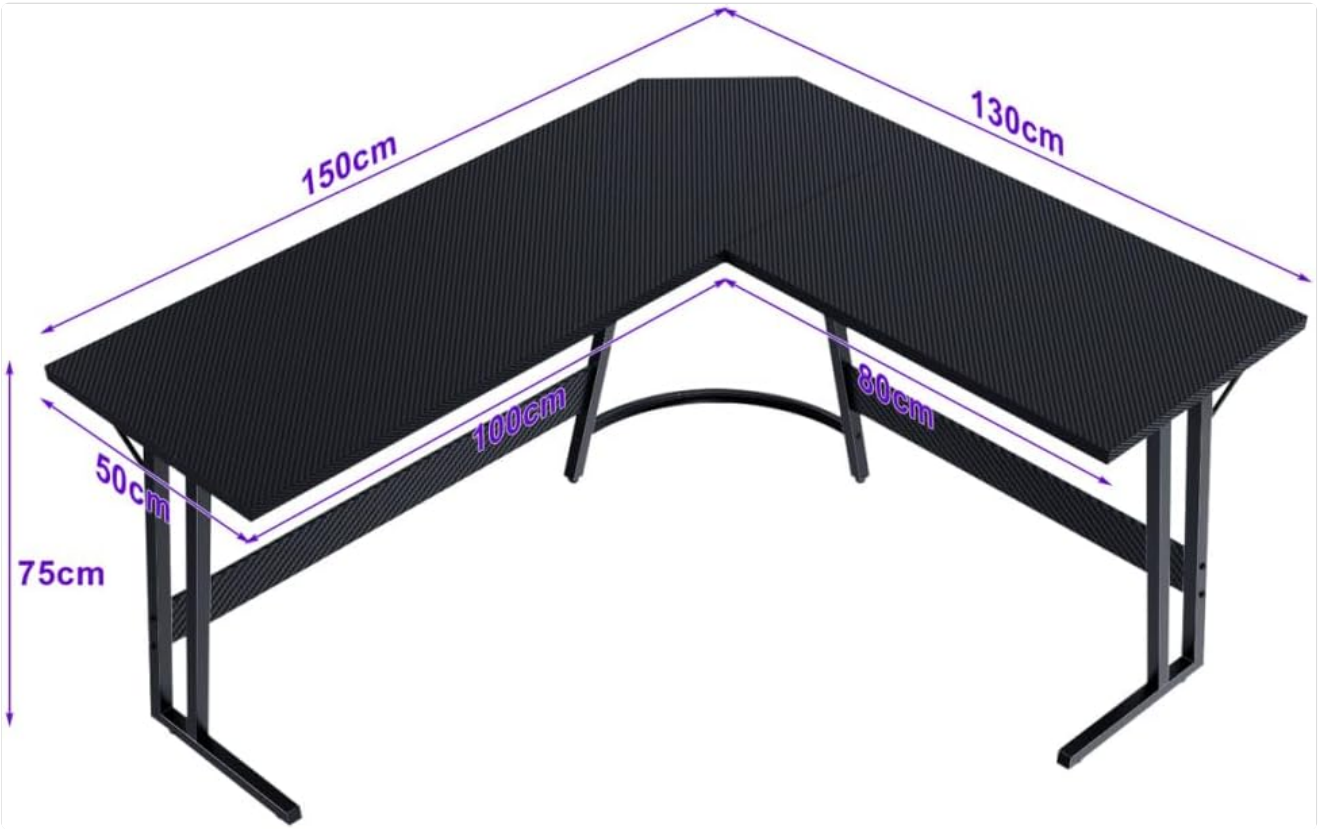 


Image 7.1: Dimensional diagram of the Devoko L Shaped Gaming Desk, illustrating its length, width, and height.

Feature	Specification
Brand	Devoko
Model Number	0457
Product Dimensions (L x W x H)	150cm x 130cm x 75cm (59.06"D x 51.18"W x 29.53"H)
Desktop Depth	50cm (19.69")

Feature	Specification
Color	Carbon Fibre Black
Item Weight	19 Kilograms (41.89 lbs)
Assembly Required	Yes
Material	High-quality iron tubes (legs), desktop (material not specified but described as carbon fiber texture)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact Devoko customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official Devoko store or contact their support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DD75WFQQ>

More documents and user manuals: <https://manuals.plus/>