

[Manuals.plus](#) /

› [Avisontek](#) /

› Avisontek Chamberlain 953ESTD Universal Garage Door Opener Remote Instruction Manual

Avisontek 953ESTD

Avisontek Chamberlain 953ESTD Universal Garage Door Opener Remote Instruction Manual

1. PRODUCT OVERVIEW

The Avisontek 953ESTD is a universal garage door opener remote designed to operate up to three garage doors. It is compatible with various Chamberlain, LiftMaster, and Sears Craftsman garage door openers manufactured since 1993. This remote features Security+2.0 rolling code encryption for enhanced security and a long operating range.



Image 1.1: Avisontek 953ESTD Universal Garage Door Opener Remote.

2. COMPATIBILITY

This remote is compatible with Chamberlain, LiftMaster, and Sears Craftsman garage door openers that feature a Purple, Red, Orange, Yellow, or Green learn button, manufactured since 1993. It is important to identify the color of your garage door opener's learn button for proper programming.

- **Compatible Learn Button Colors:** Purple, Red, Orange, Yellow, Green (for openers manufactured since 1993).
- **Not Compatible:** Security+ 3.0 White Learn Button openers produced in 2026, DIP switch openers, Genie, Overhead Door, Linear, Wayne Dalton, or Stanley openers.

WIDE COMPATIBILITY



Image 2.1: Compatibility chart showing supported brands and learn button types.

3. SETUP AND PROGRAMMING

Follow these steps to program your Avisontek 953ESTD universal garage door opener remote:

1. Step 1: Identify Color of Button

Locate the opener hanging in your garage and identify the color of the learn button on the back.

2. Step 2: Programming Initiation

Press and hold buttons II and III on the remote simultaneously until the LED on the remote stays on.

3. Step 3: Choose Code Type

Choose the remote button you want to program (e.g., button I) and press it 1-4 times according to the color of the learn button on your garage door opener. Refer to the table below:

Learn Button Color	Number of Presses
Yellow	1
Purple	2
Orange / Red	3
Green	4

4. Step 4: Confirm

Press any button on the remote (except the one chosen in Step 3) to confirm. The LED on the remote will turn off.

5. Step 5: Garage Door Opener Learning

Press the learn button on the back of your garage door opener. After the learn LED glows steadily, press and hold the remote button you chose in Step 3 until the opener lights flash or 2 clicks are heard. The remote is now programmed.

Warm Tips: If the remote does not work with your garage door opener, try repeating the instructions for a different color of learn button, as some models may vary.

EXCEPTIONAL QUALITY



Image 3.1: Detailed programming steps for the remote control.

4. OPERATING INSTRUCTIONS

Once programmed, the remote control is ready for use. Each programmed button corresponds to a specific garage door opener.

- To open or close a garage door, simply press the corresponding button on the remote.
- The remote offers an effective range of up to 164 feet, allowing for convenient access.

ONE MORE REMOTE, ONE MORE CONVENIENCE.

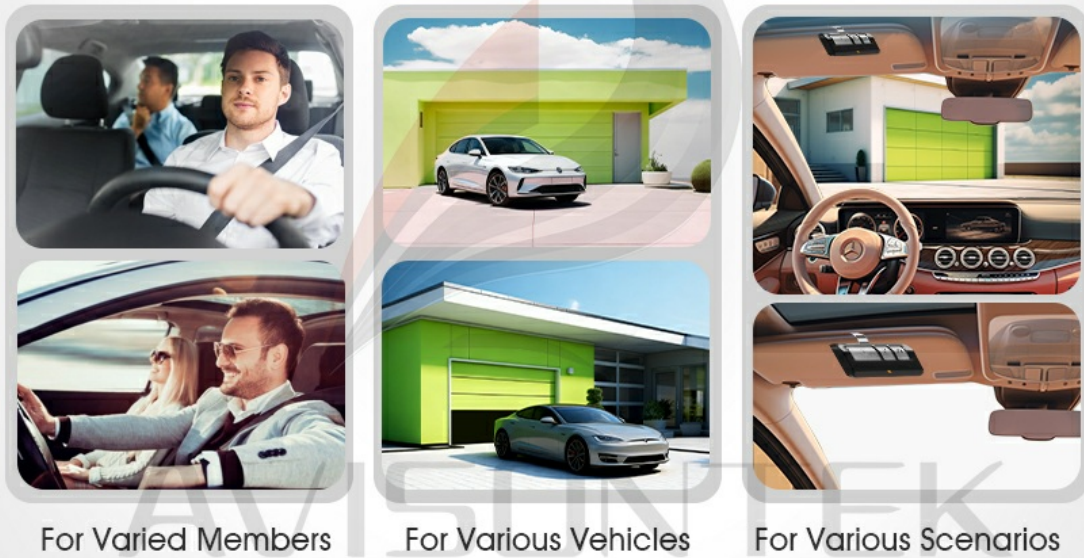


Image 4.1: Remote control in use, demonstrating its long operating range.

5. MAINTENANCE

The Avisontek 953ESTD remote is designed for durability and minimal maintenance. The remote comes with a CR2032 lithium battery pre-installed.

Battery Replacement

When the remote's operating range decreases significantly or the LED indicator fails to light up, it may be time to replace the battery.

1. Carefully open the remote casing.
2. Remove the old CR2032 battery.
3. Insert a new 3V CR2032 lithium battery, ensuring correct polarity.
4. Close the remote casing securely.

3 CHANNELS

3 BRANDS

LIFTMASTER

CHAMBERLAIN

SEARS CRAFTSMAN



Image 5.1: Illustration of the remote's internal battery compartment and CR2032 battery.

6. TROUBLESHOOTING

- **Remote not programming:**

Ensure you have correctly identified the color of your garage door opener's learn button. Re-attempt the programming steps, paying close attention to the number of presses required for your specific learn button color. If issues persist, try programming with a different learn button color setting as some models may vary.

- **Remote not operating the garage door:**

Check if the remote's LED lights up when a button is pressed. If not, the battery may be depleted and needs replacement (refer to Section 5). Ensure the remote is within the operating range of 164 feet. Verify that the remote was successfully programmed to the garage door opener.

- **Intermittent operation:**

This could be due to a weak battery. Replace the CR2032 battery. Environmental interference or obstructions between the remote and the opener can also affect performance.

7. SPECIFICATIONS

Feature	Detail
Brand	Avisontek
Model Name	Chamberlain Garage Door Opener Remote
Model Number	953ESTD
Color	Black
Connectivity Technology	Radio Frequency
Button Quantity	3

Feature	Detail
Max Number of Supported Devices	3
Maximum Range	164 Feet
Battery Type	3V CR2032 Lithium (included)
Product Weight	0.07 Kilograms
Shell Material	ABS Alloy
Encryption	Security+2.0 Rolling Code



Image 7.1: Visual representation of product dimensions and key specifications.

8. WARRANTY AND SUPPORT

The Avisontek 953ESTD Universal Garage Door Opener Remote comes with a 10-year warranty, ensuring long-term reliability and customer satisfaction.

Customer Support

For any queries, technical assistance, or warranty claims, please contact Avisontek customer support. You can reach us through our store homepage by clicking "Ask a question" or via our support email. Our team is committed to responding within 24 hours to provide prompt assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question