

- Manuals.plus /
- › TRIUMPHKEY /
 - › TRIUMPHKEY Electric Height Adjustable Standing Desk 180x80cm with 2 Memory Controls, White - Instruction Manual

TRIUMPHKEY DT-0427-182WT-IT-New

TRIUMPHKEY Electric Height Adjustable Standing Desk 180x80cm with 2 Memory Controls, White

INSTRUCTION MANUAL

Product Overview

This manual provides essential instructions for the assembly, operation, and maintenance of your TRIUMPHKEY Electric Height Adjustable Standing Desk, model DT-0427-182WT-IT-New. This desk is designed to offer a versatile workspace, allowing seamless transitions between sitting and standing positions to enhance comfort and productivity.

Key features include an electric height adjustment range of 73-119 cm, two programmable memory presets for preferred heights, a robust steel frame for stability, integrated cable management holes, and a convenient headphone hook.



Image: The TRIUMPHKEY Electric Height Adjustable Standing Desk, showcasing its spacious white desktop and sturdy white legs, set up with computer equipment and office supplies.

Safety Information

Attention:

- Use with caution.
- Follow all assembly and usage instructions carefully.
- Do not use if any part is damaged.
- Keep out of reach of children.
- Do not expose to extreme temperatures.
- Do not use in humid or wet environments.

Setup and Assembly

The TRIUMPHKEY Electric Standing Desk is designed for straightforward assembly. Detailed installation instructions and all necessary mounting tools are included in the packaging. Please follow the provided assembly guide step-by-step.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list in the included assembly guide.

2. **Assemble Frame:** Attach the desk legs to the crossbar and feet according to the diagrams. Ensure all screws are tightened securely.
3. **Attach Desktop:** Secure the desktop panels to the assembled frame. The desktop may consist of multiple pieces that fit together.
4. **Install Control Panel:** Mount the control panel to the underside of the desktop in the designated location.
5. **Connect Cables:** Connect the motor cables and power cable to the control box and then to a power outlet. Ensure all connections are firm.
6. **Initial Test:** Before placing items on the desk, perform an initial test of the height adjustment function.

Product Size

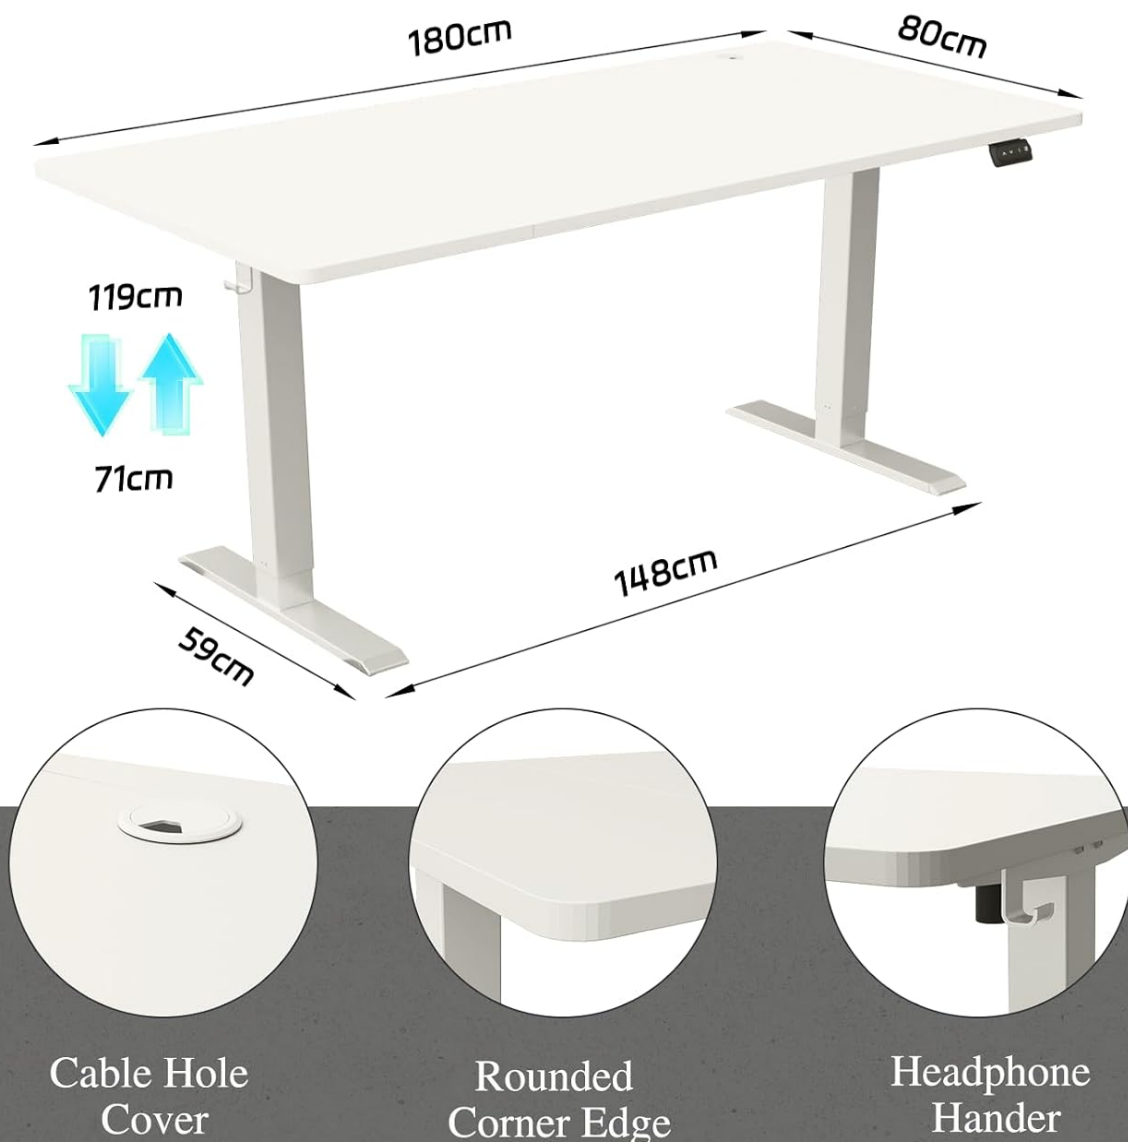


Image: Product dimensions diagram, illustrating the desk's overall size (180cm x 80cm) and height adjustment range (71cm to 119cm), along with details like cable hole cover, rounded corner edge, and headphone hanger.

Operating Instructions

The desk features an intuitive control panel for easy height adjustment and memory functions.

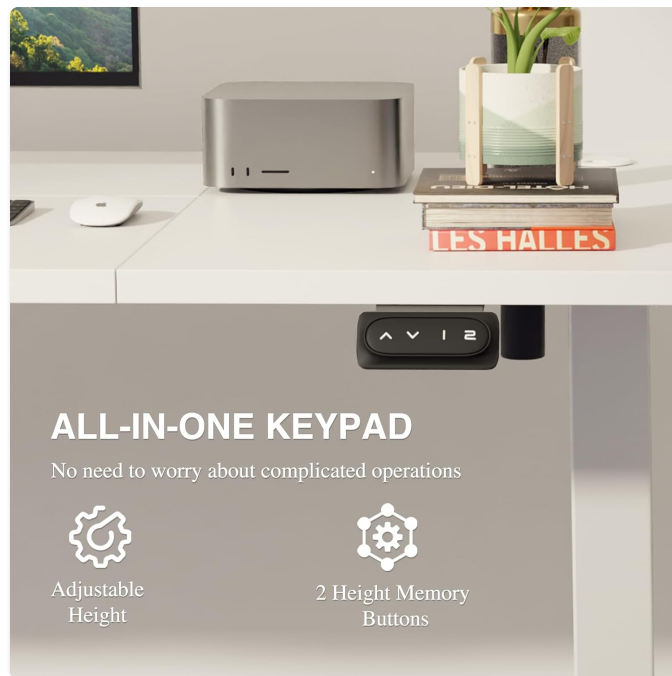


Image: The all-in-one keypad, highlighting the adjustable height feature and the two memory buttons for saving preferred desk positions.

Height Adjustment:

- Use the **Up (▲)** and **Down (▼)** arrow buttons on the control panel to manually adjust the desk height.
- The desk can be adjusted between 73 cm and 119 cm.

Memory Presets:

The desk is equipped with two memory buttons to store your preferred sitting and standing heights.

1. Set a Memory Position:

- Adjust the desk to your desired height using the Up/Down buttons.
- Press and hold one of the memory buttons (**1** or **2**) until you hear a beep or see the display flash, indicating the height has been saved.

2. Recall a Memory Position:

- Simply press the corresponding memory button (**1** or **2**) once. The desk will automatically move to the saved height.

Different Heights For All Ideas

Height Adjustment From 71cm-119cm



Image: The desk shown at different heights, demonstrating its versatility for various working positions and user preferences.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your TRIUMPHKEY standing desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the surface.
- **Check Connections:** Periodically inspect all electrical connections and cables to ensure they are securely plugged in and free from damage.
- **Lubrication:** The lifting mechanism is generally maintenance-free. Do not attempt to lubricate internal components unless specifically instructed by the manufacturer.
- **Weight Capacity:** Do not exceed the desk's maximum weight capacity.

Troubleshooting

If you encounter any issues with your desk, please refer to the following common troubleshooting steps:

- **Desk Not Moving:**
 - Ensure the power cable is securely plugged into both the desk and a working wall outlet.
 - Check if any cables are pinched or damaged.
 - Verify that the control panel cable is properly connected to the control box.
- **Uneven Movement or Noise:**
 - Ensure the desk is placed on a level surface.
 - Check that all assembly screws are tightened.
 - Remove any obstructions under or around the desk.
- **Reset Procedure (General):** If the desk is unresponsive, try unplugging the power cord from the wall outlet for 30 seconds, then plug it back in. This may reset the system.

If the problem persists after attempting these steps, please contact customer support for further assistance.

Specifications

Feature	Detail
Brand	TRIUMPHKEY
Model	DT-0427-182WT-IT-New
Desktop Dimensions (L x W)	180 cm x 80 cm
Height Adjustment Range	73 cm - 119 cm
Color	White
Desktop Material	Wood
Base Material	Alloy Steel
Special Features	Electric Height Adjustable, 2 Memory Presets, Cable Management Hole, Headphone Hook

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your product or contact the seller directly. The seller, Triumphkey Store, can provide details regarding product warranty, returns, and technical assistance.

You can visit the [TRIUMPHKEY Store on Amazon](#) for more information or to contact their support team.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DD7CY343>

More documents and user manuals: <https://manuals.plus/>