

Decerk Leaf Blower Cordless

Decerk Cordless Leaf Blower User Manual

Model: Leaf Blower Cordless

Brand: Decerk

1. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before operating the leaf blower. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

General Safety Warnings

- **Wear appropriate personal protective equipment (PPE):** Always wear eye protection (safety glasses or goggles) and hearing protection (earmuffs or earplugs) when operating the blower. Long pants, gloves, and sturdy footwear are also recommended.
- **Keep bystanders away:** Do not allow children or untrained individuals to operate the blower. Keep all bystanders, especially children and pets, at a safe distance (at least 50 feet/15 meters) from the operating area.
- **Inspect the work area:** Before starting, clear the area of objects that could be thrown by the air stream, such as rocks, broken glass, or metal pieces.
- **Avoid operating in wet conditions:** Do not use the blower in rain or wet conditions to prevent electric shock.
- **Maintain a firm grip:** Always hold the blower firmly with both hands during operation.
- **Battery safety:** Use only the specified battery packs and charger. Do not modify the battery or charger.
- **Proper storage:** Store the blower and batteries in a dry, secure location out of reach of children.

Battery Charging Safety Tip

For optimal safety and battery longevity, fully charge the battery before its first use. After operation, wait 5-10 minutes before recharging to prevent overheating. If the battery is not used for an extended period,

keep it fully charged and recharge every 3-6 months to maintain its optimal condition.

2. PACKAGE CONTENTS

Verify that all items are present and in good condition:

- Decerk Cordless Leaf Blower Unit
- Blower Nozzle
- 2 x 21V 4.0Ah Lithium-ion Batteries
- Fast Charger
- Adjustable Shoulder Strap
- User Manual

3. ASSEMBLY

The Decerk Cordless Leaf Blower is designed for quick and easy assembly.

1. **Attach the Nozzle:** Align the blower nozzle with the main unit's air outlet. Push and twist until it locks securely into place.
2. **Insert the Battery:** Ensure the battery is fully charged. Slide the battery pack into the battery slot on the blower unit until it clicks into place.
3. **Attach the Shoulder Strap (Optional):** If desired, attach the adjustable shoulder strap to the designated attachment points on the blower for added comfort during extended use.



Image: Decerk Cordless Leaf Blower with nozzle attached and battery inserted, ready for use.



Image: Visual guide demonstrating the simple steps for assembling the leaf blower.

Video: A demonstration of the quick and easy assembly process for the Decerk Leaf Blower.

4. CHARGING THE BATTERY

The Decerk Leaf Blower comes with two 21V 4.0Ah Lithium-ion batteries and a fast charger featuring GAN-PRO innovative technology for efficient charging.

1. **Connect the Charger:** Plug the fast charger into a standard electrical outlet.
2. **Insert the Battery:** Slide the battery pack into the charger. The power indicator on the battery will show the charging status.
3. **Charging Time:** A fully depleted 4.0Ah battery typically charges in approximately 1.5 to 2 hours.
4. **Full Charge Indication:** The power indicator will show a solid light when the battery is fully charged.

A fully charged battery provides up to 60 minutes of continuous operation in low-speed mode.



Image: Detailed view of the 21V 4.0Ah battery and charger, highlighting charging features.

5. OPERATING INSTRUCTIONS

The Decerk Cordless Leaf Blower offers variable speed control and a turbo boost function for efficient debris clearing.

Starting the Blower

1. Ensure the battery is securely inserted.
2. Press the ON/OFF button to power on the unit.

Variable Speed Control

Use the variable speed dial to adjust the airflow from 300 CFM to 650 CFM, allowing you to match the power to the task at hand.

- Rotate the speed dial to increase or decrease the airflow.
- The lock-on button can be engaged to maintain a desired speed without continuously holding the trigger.

Turbo Boost Function

For maximum power, press the Turbo button. This activates the blower's full capacity, delivering 650 CFM air volume and 200 MPH wind speed for stubborn debris.

**ADJUSTABLE
SPEED CONTROL
ELECTRONIC SPEEDS**

Hands-Free Control With Maximum Power

80-120-200MPH

**SPEED
LOCK DIAL**

**ON/OFF
BUTTON**

Lock your desired wind speed with the SPEED LOCK DIAL for easier use. Activate TURBO BOOST for max power at 200 CFM with the push of a button

Image: Controls for adjustable speed, including the speed lock dial and ON/OFF button.

Video: A short demonstration of the Decerk Leaf Blower's Turbo Button in action.

Applications

This lightweight and portable blower is suitable for various tasks:

- Clearing leaves and debris from sidewalks, driveways, and patios.
- Cleaning garages and workshops.
- Light snow removal (recommended for fresh, light snow; not suitable for packed or deep snow).



Image: The leaf blower in use for general yard cleanup.



Image: Clearing pathways with the leaf blower, demonstrating its effectiveness for pedestrian areas.

Image: The leaf blower being used for removing light snow from vehicles.

Video: Demonstration of the Decerk Leaf Blower's operation, including use with noise reduction earmuffs.

Video: Showcasing the 650 CFM Max Air Volume and 200 MPH Wind Speed for patio cleaning.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Decerk Leaf Blower.

Cleaning

- Always remove the battery before cleaning.
- Wipe the exterior of the blower with a clean, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the air intake and exhaust vents are free from debris to prevent overheating.

Storage

- For compact storage, the nozzle can be detached from the main unit.
- Store the blower and batteries in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep batteries charged every 3-6 months if not in regular use to maintain their health.

7. TROUBLESHOOTING

If you encounter issues with your Decerk Leaf Blower, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blower does not start	Battery not inserted correctly Battery is depleted ON/OFF button not pressed	Ensure battery is fully seated Charge the battery Press the ON/OFF button firmly
Low airflow/power	Battery low on charge Nozzle partially blocked Not using Turbo mode for heavy debris	Recharge the battery Clear any obstructions from the nozzle Activate the Turbo button for maximum power
Battery not charging	Charger not plugged in Battery not seated in charger Faulty battery or charger	Check power connection Ensure battery is fully inserted into charger Contact customer support if issue persists
Blower overheats	Continuous heavy use Blocked vents	Allow the blower to cool down Clear air intake and exhaust vents

If the problem persists after trying these solutions, please contact Decerk customer support.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Decerk
Model Number	Leaf Blower Cordless
Air Flow Capacity	Up to 650 Cubic Feet Per Minute (CFM)
Wind Speed	Up to 200 Miles per Hour (MPH)
Battery Type	21V 4.0Ah Lithium-ion (2 included)
Charging Time	1.5 - 2 hours (with fast charger)
Runtime	Up to 60 minutes (low speed)
Item Weight	Approximately 4.3 lbs (unit only)
Noise Level	65 Decibels
Special Features	Adjustable Speed, Battery Charge Indicator, Compact Design, Lightweight, Turbo Button, Cruise Control

9. WARRANTY AND SUPPORT

Decerk is committed to providing high-quality products and excellent customer service.

Customer Support

If you have any issues, questions, or require assistance with your Decerk Leaf Blower, please contact us through Amazon's internal messaging system. Simply go to your Amazon order page, click "Contact Seller," and we will assist you promptly. We offer a hassle-free exchange, no return required.