

SUNNYJANE T50

SUNNYJANE Wireless Video Doorbell Camera User Manual

Model: T50

1. INTRODUCTION

Thank you for choosing the SUNNYJANE Wireless 1080p Video Doorbell Camera. This manual provides detailed instructions for setting up, operating, and maintaining your new doorbell camera. Please read this manual thoroughly before use to ensure proper functionality and safety.



Image 1.1: The SUNNYJANE Wireless Video Doorbell Camera, showing the doorbell unit, the included indoor chime, and a smartphone displaying the live video feed.

2. PRODUCT OVERVIEW

2.1. Package Contents

- Wireless Video Doorbell Camera
- Indoor Chime
- Mounting Bracket
- Mounting Screws and Wall Anchors

- Adhesive Tape
- USB Charging Cable
- User Manual

2.2. Key Features

- **1080p HD Video:** Clear and sharp video resolution.
- **Two-Way Audio:** Communicate with visitors in real-time.
- **AI Human Detection:** Advanced motion detection to reduce false alerts.
- **Smart Night Vision:** Enhanced visibility in low-light conditions.
- **Cloud Storage:** Secure storage for recorded events (subscription may apply after trial).
- **IP65 Weather Resistance:** Durable design for outdoor use in various weather conditions.
- **Wireless Connectivity:** Operates on 2.4G Wi-Fi for flexible placement.
- **Battery Powered:** Long-lasting rechargeable battery.
- **Included Chime:** Hear doorbell rings inside your home.



Image 2.1: Overview of the Smart Doorbell Camera's key features, including Night Vision, 2.4GHz Wi-Fi, Two-way Audio, AI Human Detection, IP65 Weather Resistance, and Cloud Storage.

3. SETUP GUIDE

3.1. App Download and Account Creation

1. Scan the QR code provided in the packaging or search for the designated app (e.g., 'CloudEdge' or similar, refer to packaging) in your smartphone's app store (App Store for iOS, Google Play Store for Android).
2. Download and install the app.
3. Open the app and follow the on-screen instructions to create a new account.


3.2. Device Pairing

1. Ensure your doorbell camera is fully charged before pairing.
2. Open the app and tap 'Add Device' or the '+' icon.
3. Select 'Video Doorbell' from the device list.
4. Follow the in-app instructions to connect the doorbell to your 2.4G Wi-Fi network. Ensure your Wi-Fi signal is strong at the installation location.
5. The doorbell's indicator light will change to confirm successful pairing.

3.3. Installation

Choose an ideal installation spot, typically near your front door, ensuring a clear view and good Wi-Fi signal.


SETUP IS A BREEZE! QUICK & USER-FRIENDLY!

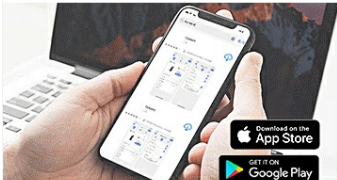

Download & Launch the App



Follow the In-App Instructions to Link the Doorbell to 2.4GHz Wi-Fi

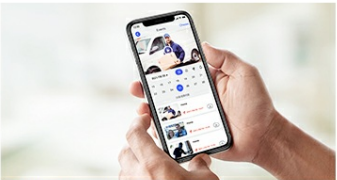

Enjoy Your Intelligent Video Doorbell!!



Choose Your Ideal Installation Spot

MOUNTING IS SMOOTH!



1



2

Adhesive Tape: Attach swiftly with provided adhesive tape.



1



2

Screws: Utilize the included screws for a long-lasting fix.

Image 3.1: Visual guide for setting up the doorbell camera, including app download, device linking, and two mounting options: adhesive tape or screws.

Option 1: Adhesive Tape (Temporary/Smooth Surfaces)

1. Clean the desired surface thoroughly.
2. Peel off the protective film from the provided adhesive tape.
3. Attach the tape to the back of the doorbell's mounting bracket.

4. Firmly press the doorbell with the attached bracket onto the wall for at least 30 seconds.

Option 2: Screws (Permanent/All Surfaces)

1. Mark the desired drilling points on the wall using the mounting bracket as a template.
2. Drill holes at the marked points. Insert wall anchors if necessary.
3. Align the mounting bracket with the drilled holes and secure it with the provided screws.
4. Slide the doorbell camera onto the mounted bracket until it clicks into place.

4. OPERATING INSTRUCTIONS

4.1. Live View

Open the app to access the live video feed from your doorbell camera at any time. This allows you to monitor your doorstep remotely.

4.2. Two-Way Audio

When viewing the live feed or receiving a call from the doorbell, tap the microphone icon in the app to speak to the person at your door. Tap it again to end communication.

Two-way Audio

Watch live video from anywhere and communicate instantly with the built-in mic and speakers

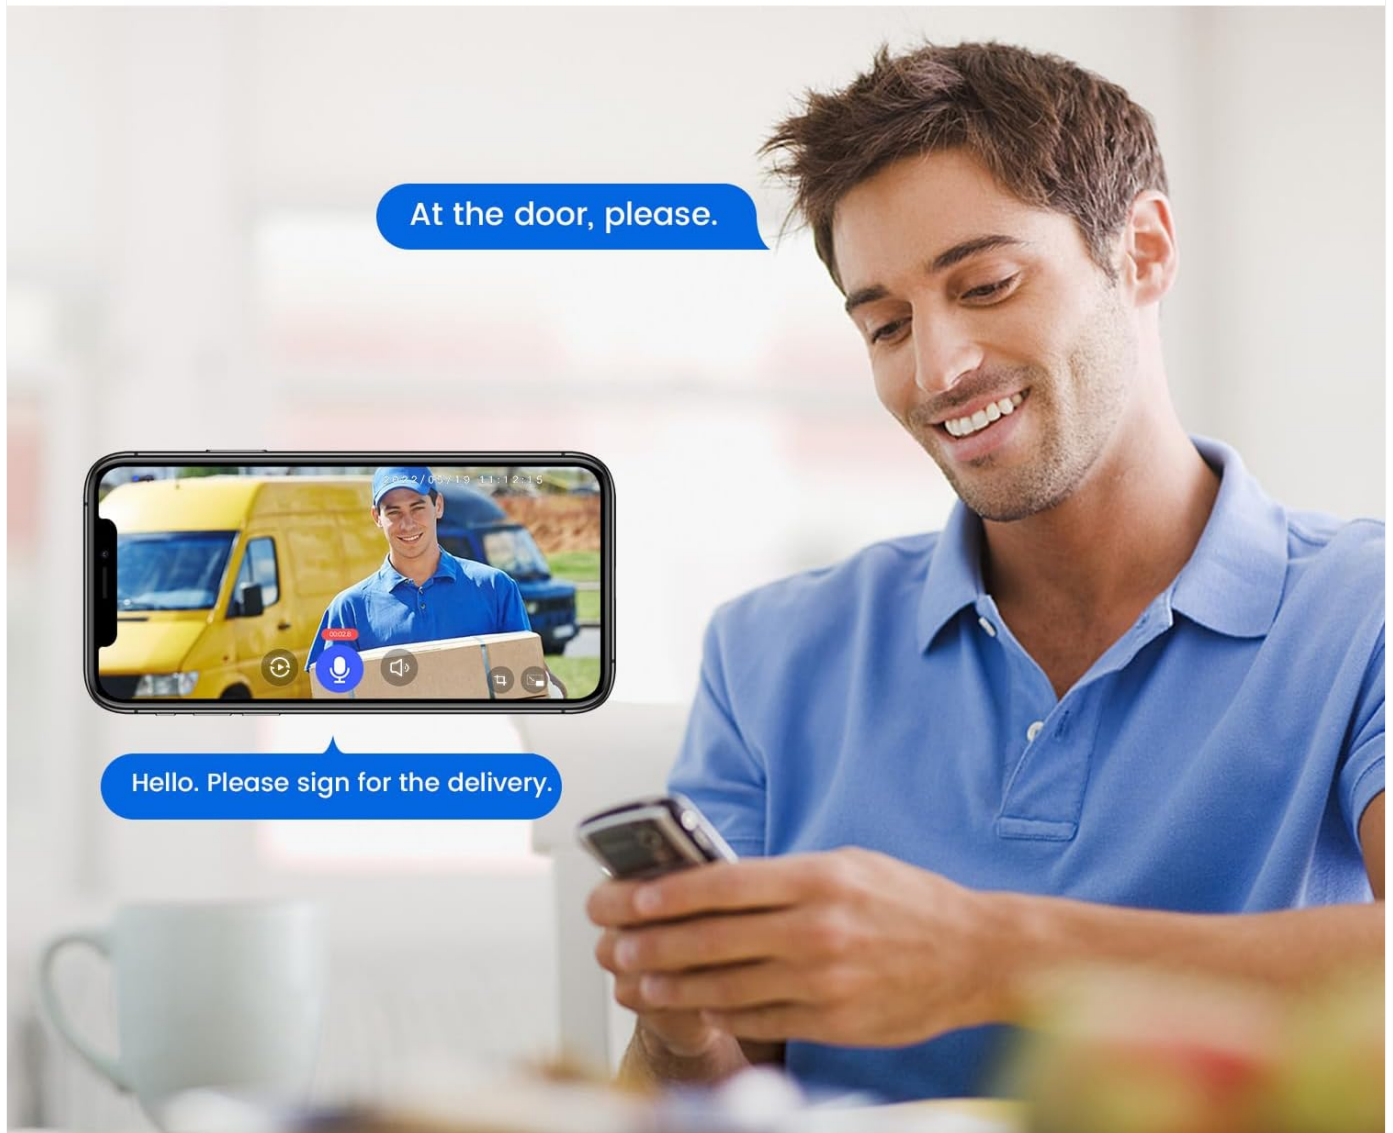


Image 4.1: A user interacting with a delivery person via the two-way audio feature on their smartphone, demonstrating remote communication.

4.3. AI Human Detection

The doorbell camera utilizes AI to intelligently detect human motion, minimizing false alarms from pets or passing vehicles. You will receive real-time notifications on your smartphone when human motion is detected.

Smart AI Human Detection

Quickly captures motion and alerts in real time

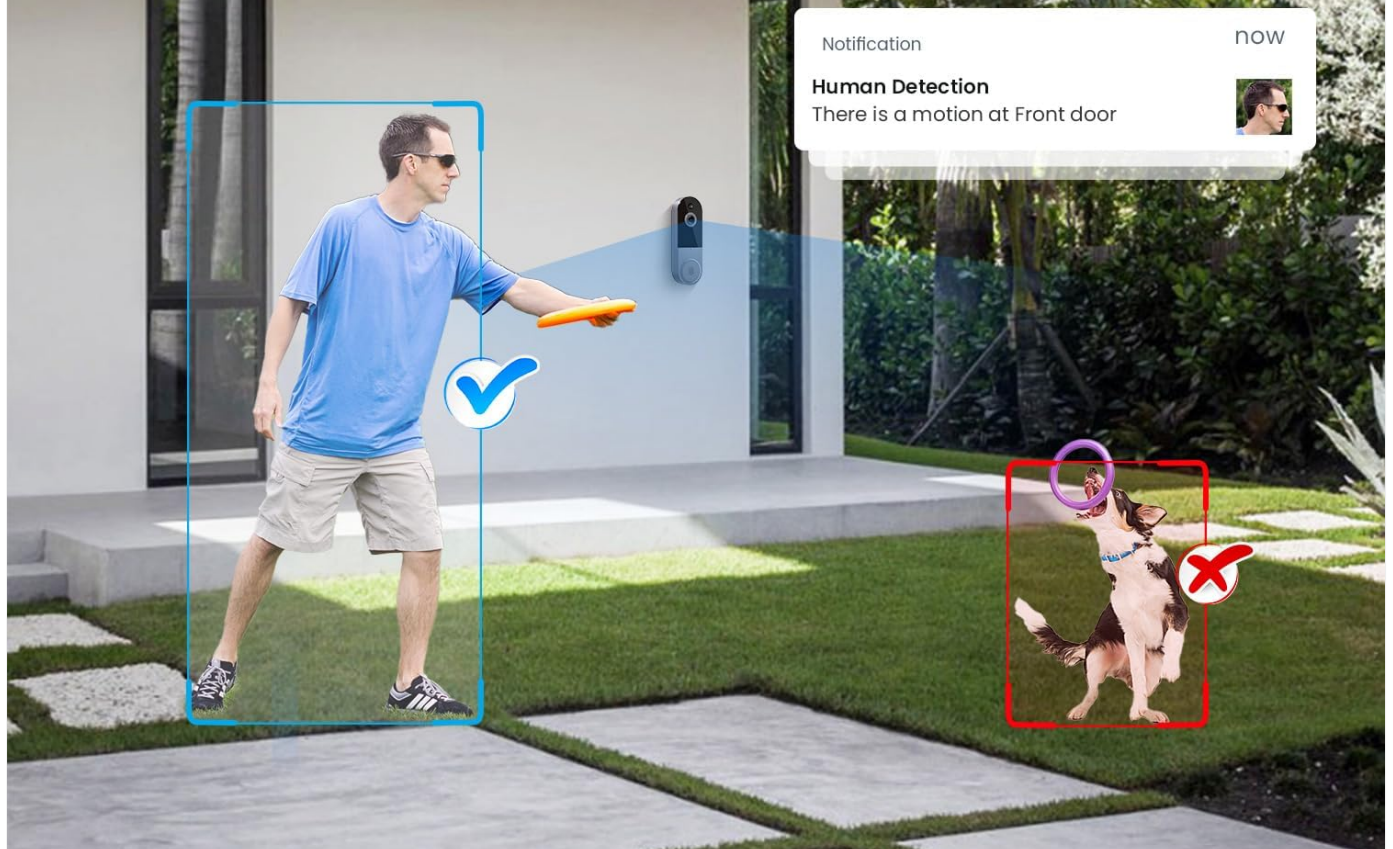


Image 4.2: Illustration of the Smart AI Human Detection feature, showing the camera accurately identifying a person while ignoring a pet.

4.4. Smart Night Vision

The doorbell camera automatically switches to night vision mode in low-light conditions, providing clear black-and-white video footage to ensure you don't miss any details, day or night.

Smart Night Vision

Never miss any details even in the darkness



Image 4.3: A split image demonstrating the clarity of the doorbell camera's view during the day versus its effective night vision capabilities in darkness.

4.5. Cloud Storage

Recorded events are securely stored in the cloud, accessible via the app. The service typically includes AES 128 encryption and 30-day loop recording. A 30-day trial is often provided with the first subscription.

Cloud Storage

Cloud storage to protect your privacy



AES 128
encryption



30-Day
loop recording



30-day trial on
first subscription



Image 4.4: A smartphone screen displaying the cloud storage interface, showing a calendar view of recorded events and video thumbnails.

4.6. Chime Usage

The included indoor chime will sound when someone presses your doorbell, ensuring you hear notifications even if your phone is not nearby. The chime can be paired with the doorbell and its volume adjusted via the app.

Free Chime

Hear notifications anywhere in your home
when someone presses your doorbell



Image 4.5: A person pressing the doorbell button, with an inset showing the indoor chime plugged into an outlet, indicating its function.

4.7. Group Sharing

The app allows you to share access to your doorbell camera with family members or trusted individuals. This enables multiple users to receive notifications, view live feeds, and communicate through the doorbell.



Image 4.6: An illustration depicting the group sharing feature, showing multiple views of a home, suggesting shared access to the doorbell camera.

5. MAINTENANCE

5.1. Battery Charging

The doorbell camera is powered by two Lithium Polymer batteries. When the battery level is low, you will receive a notification via the app. Remove the doorbell unit from its mounting bracket and charge it using the provided USB cable. A full charge typically takes several hours.

5.2. Cleaning

To maintain optimal performance, periodically clean the camera lens and the doorbell's exterior with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the surface or lens.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell offline in app	Weak Wi-Fi signal, low battery, or network issue.	Check Wi-Fi signal strength at installation location. Recharge battery. Restart your Wi-Fi router. Re-pair the device if necessary.
No motion detection alerts	Motion detection sensitivity too low, or feature is disabled.	Adjust motion detection sensitivity in the app settings. Ensure AI Human Detection is enabled.
Poor video quality	Dirty lens, weak Wi-Fi signal, or insufficient lighting.	Clean the camera lens. Ensure strong Wi-Fi connection. Verify night vision is active in low light.
Two-way audio issues	Microphone/speaker muted in app, or network latency.	Check audio settings in the app. Ensure stable internet connection.
Chime not ringing	Chime not paired, out of range, or power issue.	Ensure chime is plugged in and powered. Re-pair chime with doorbell if needed. Move chime closer to doorbell.

7. SPECIFICATIONS

Feature	Detail
Model Name	T50
Video Resolution	1080p

Feature	Detail
Connectivity	2.4G Wi-Fi
Power Source	Battery Powered (2 Lithium Polymer batteries included)
Weather Resistance	IP65
Material	Acrylonitrile Butadiene Styrene (ABS)
Dimensions (L x W x H)	6.54 x 2.61 x 1.61 inches
Item Weight	9.6 ounces
Control Method	App (Smartphone)
Included Components	Chime



Image 7.1: Icons illustrating the IP65 weather resistance, indicating protection against shine, snow, rain, and dust.

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided on the product packaging or visit the official SUNNYJANE website. Keep your purchase receipt as proof of purchase for warranty claims.

© 2025 SUNNYJANE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question