



[Manuals.plus](#) /

› [Hatteker](#) /

› Hatteker HT-6188 Hair Trimmer User Manual

## Hatteker HT 6188

# Hatteker HT-6188 Hair Trimmer User Manual

Model: HT-6188

### PRODUCT OVERVIEW

The Hatteker HT-6188 is a premium metal body hair trimmer designed for precise outlining and shaping. It features a 0-gapped T-blade, a powerful 3-speed motor, IPX6 waterproofing, and convenient USB Type-C charging. The integrated LED display provides real-time information on battery life and motor speed.



Image: The Hattaker HT-6188 hair trimmer in black, displayed with its full set of accessories including four guide combs, cleaning brush, oil bottle, and USB-C charging cable.



Image: A gold Hatteker HT-6188 hair trimmer with callouts pointing to its key features: T-Blade Head, LED Display, USB Charging, Speed Control Button, IPX6 Waterproofing, and 4 Guide Combs.

## PACKAGE CONTENTS

Ensure all items are present in the package:

- Hatteker HT-6188 Hair Trimmer
- 4 Attachment Guide Combs (1mm, 3mm, 5mm, 7mm)
- USB Type-C Charging Cable
- Cleaning Brush
- Lubricating Oil Bottle
- User Manual



Image: The Hatteker HT-6188 hair trimmer in gold, showcasing all included accessories and examples of its use for hair and beard trimming.

## SAFETY INSTRUCTIONS

- Do not immerse the entire unit in water, only the blade head is designed for rinsing.
- Keep out of reach of children.
- Do not disassemble the unit. Contact customer service for repairs.
- Use only the provided charging cable.
- Avoid extreme temperatures.
- Ensure the charging port is dry before connecting the cable.

## SETUP

### Initial Charge

Before first use, fully charge the trimmer. Connect the USB Type-C cable to the trimmer's charging port and the other end to a compatible USB power source (e.g., laptop, power bank, car charger, or wall adapter). The LED display will show charging progress.

- Charging Time: Approximately 1.5 hours for a full charge.
- Runtime: Up to 180 minutes on a full charge.



Image: The Hattaker HT-6188 hair trimmer being charged via its USB Type-C port, connected to a laptop. The image highlights the 1.5 hours charging time and 180 minutes working time.

### Attaching Guide Combs

To attach a guide comb, align the comb with the trimmer blade and push it firmly until it clicks into place. To remove, gently pull the comb away from the blade.

# ZERO GAPPED DETAIL TRIMMERS

T-blade Head / Comb Row 1/3/5/7mm



Image: A detailed view of the Hatterker HT-6188's T-blade and the four included guide combs, indicating their respective lengths: 1mm, 3mm, 5mm, and 7mm.

## OPERATING INSTRUCTIONS

### Power On/Off

Press the power button to turn the trimmer on. Press again to turn it off.

### Adjusting Speed

The trimmer features a 3-speed motor (6000 RPM, 6500 RPM, 7000 RPM). Use the speed control buttons (+ and -) to cycle through the available speeds. The current RPM will be displayed on the LED screen.



Image: A close-up of the Hattaker HT-6188's LED digital display, showing indicators for speed (RPM), power percentage, a maintenance reminder icon, and a travel lock icon.

### Using the Trimmer

1. Ensure hair is clean and dry for best results.
2. Select the desired guide comb for your preferred cutting length (0mm, 1mm, 3mm, 5mm, 7mm). For a 0mm close trim, use without a comb.
3. Hold the trimmer with the blade flat against the skin.
4. Move the trimmer slowly against the direction of hair growth.
5. For detailing and outlining, use the T-blade without a comb.



Image: A person using the Hatteker HT-6188 hair trimmer to trim the hair around the ear of another person, demonstrating its use for precise hair cutting.

# VARIOUS HAIR CUTTING LENGTH OPTIONS



Image: A composite image showing the Hattaker HT-6188's T-blade and guide combs (1mm, 3mm, 5mm, 7mm), alongside examples of the trimmer being used for various hair and beard styles.

## Travel Lock Function

To activate the travel lock, press and hold the power button for 3 seconds. The travel lock icon will appear on the LED display. To deactivate, press and hold the power button for 3 seconds again.

## MAINTENANCE

### Cleaning the Trimmer

The Hattaker HT-6188 is IPX6 waterproof, allowing for easy cleaning. After each use:

1. Turn off the trimmer.
2. Remove the guide comb (if attached).
3. Use the cleaning brush to remove any loose hairs from the blade and trimmer body.
4. Rinse the blade head under running water. Do not submerge the entire trimmer.
5. Shake off excess water and allow the trimmer to air dry completely before storing or recharging.

# IPX6 WATERPROOF



Image: The Hatteker HT-6188 hair trimmer's blade head being rinsed under a faucet, demonstrating its IPX6 waterproof feature for easy cleaning.

## Lubricating the Blades

Regular lubrication ensures optimal performance and blade longevity. Apply a few drops of the provided lubricating oil to the blades after every few uses, or when the maintenance reminder appears on the LED display. Turn the trimmer on for a few seconds to distribute the oil.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted. Travel lock is activated.	Charge the trimmer. Deactivate travel lock by pressing and holding the power button for 3 seconds.
Blades are pulling or snagging hair.	Blades are dirty or not lubricated. Hair is too thick or wet.	Clean and lubricate the blades. Ensure hair is dry before trimming.

Problem	Possible Cause	Solution
Trimmer is unusually noisy.	Blades require lubrication.	Apply lubricating oil to the blades.
Charging indicator not working.	Charging cable or adapter issue.	Try a different USB port or adapter. Ensure cable is securely connected.

## SPECIFICATIONS

- **Model:** HT-6188
- **Blade Material:** Stainless Steel
- **Body Material:** Metal
- **Motor Speed:** 6000-7000 RPM (3 speeds)
- **Cutting Lengths:** 0mm (without comb), 1mm, 3mm, 5mm, 7mm (with guide combs)
- **Battery Type:** Lithium Ion
- **Charging Time:** Approx. 1.5 hours
- **Runtime:** Up to 180 minutes
- **Waterproof Rating:** IPX6
- **Charging Interface:** USB Type-C
- **Display:** LED Digital Display (Battery, RPM, Travel Lock, Maintenance Reminder)
- **Dimensions:** 20.1 x 9.7 x 6.7 cm
- **Weight:** 470 g



Image: The Hatteker HT-6188 hair trimmer displayed next to a smartphone to illustrate its approximate size and dimensions (16.5cm/6.4in length, 4cm/1.5in blade width).

## WARRANTY AND SUPPORT

The Hatteker HT-6188 Hair Trimmer comes with a **12-month quality warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

For any product inquiries, technical support, or warranty claims, please contact Hatteker customer service. Our team aims to respond within 24 hours to provide a satisfactory resolution.

Please retain your purchase receipt as proof of purchase for warranty purposes.