

[Manuals.plus](#) /

› [ONIKUMA GAMING](#) /

› ONIKUMA GAMING CW932 Vertical Ergonomic Wireless Mouse User Manual

ONIKUMA GAMING CW932

ONIKUMA GAMING CW932 Vertical Ergonomic Wireless Mouse User Manual

Model: CW932

1. INTRODUCTION

The ONIKUMA GAMING CW932 is a vertical ergonomic wireless mouse designed to provide a comfortable and natural hand position, reducing strain during extended use. It features multiple connectivity options (2.4G USB and Bluetooth) and adjustable DPI settings for precise control across various devices.

Ergonomic Vertical Design

Less muscle strain, comfort for extended use



Vertical Mouse



Traditional Mouse

Image: The ergonomic vertical design promotes a natural handshake position, reducing hand and wrist stress.

This manual provides detailed instructions for setting up, operating, and maintaining your CW932 mouse.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x ONIKUMA GAMING CW932 Vertical Ergonomic Wireless Mouse
- 1 x USB-C Charging Cable
- 1 x 2.4G USB Receiver
- 1 x User Manual (this document)



Image: Package contents including the CW932 mouse, charging cable, USB receiver, and manual.

3. PRODUCT OVERVIEW

Familiarize yourself with the buttons and features of your ONIKUMA GAMING CW932 mouse.

8 Button Design



1.Left Button

2.Right Button

3.Scroll Wheel

4.DPI Switch Button

5.Mode Switch Button

6.Page Forward Button

7.Page Back Button

8.Switch Function Gear

9.USB-C Fast Recharging

Sensing Knob

Image: Detailed diagram of the mouse buttons and their functions.

1. **Left Button:** Standard left-click function.
2. **Right Button:** Standard right-click function.

3. **Scroll Wheel:** For vertical scrolling.
4. **DPI Switch Button:** Adjusts mouse sensitivity (DPI).
5. **Mode Switch Button:** Toggles between 2.4G, BT1, and BT2 connection modes.
6. **Page Forward Button:** Navigates forward in web browsers or file explorers.
7. **Page Back Button:** Navigates backward in web browsers or file explorers.
8. **Switch Function Gear / Sensing Knob:** Multi-function button for window switching, zoom, and page navigation.
9. **USB-C Fast Recharging Port:** For charging the mouse.

4. SETUP

4.1. Charging the Mouse

Before first use, or when the battery is low, charge the mouse using the provided USB-C cable. Connect the USB-C end to the mouse's charging port (9) and the USB-A end to a computer's USB port or a USB wall adapter.

Long Battery Life

Built-in rechargeable battery for worry-free use.



Image: The mouse features a built-in rechargeable battery for extended use.

4.2. Connecting via 2.4G USB Receiver

1. Locate the 2.4G USB receiver in the package.

2. Plug the USB receiver into an available USB port on your computer.
3. Turn on the mouse.
4. Press the **Mode Switch Button** (5) until the indicator light shows **2.4G** mode.
5. Your computer should automatically detect and connect to the mouse.

4.3. Connecting via Bluetooth (BT1 / BT2)

The mouse supports two separate Bluetooth connections (BT1 and BT2), allowing you to connect to up to two Bluetooth-enabled devices simultaneously, in addition to the 2.4G connection.

1. Turn on the mouse.
2. Press the **Mode Switch Button** (5) to select either **BT1** or **BT2** mode. The corresponding indicator light will flash.
3. On your computer or device, open Bluetooth settings.
4. Search for new devices and select "ONIKUMA CW932" (or similar) from the list.
5. Once paired, the indicator light for BT1 or BT2 will stop flashing and remain solid.
6. Repeat these steps for a second Bluetooth device using the other BT mode (BT2 if you used BT1, or vice versa).

Connect Up to 3 devices

2.4G+CW932 Bluetooth 1+Bluetooth 2



Image: The mouse can connect to up to three devices simultaneously using 2.4G and two Bluetooth channels.

5. OPERATING INSTRUCTIONS

5.1. Switching Between Connected Devices

To switch between devices connected via 2.4G, BT1, or BT2, simply press the **Mode Switch Button** (5) until the desired mode's indicator light is active.

5.2. Adjusting DPI (Sensitivity)

The mouse offers four adjustable DPI levels: 800, 1200, 1600, and 2400. To change the DPI, press the **DPI Switch Button** (4). Each press will cycle through the available DPI settings, allowing you to select the sensitivity that best suits your task.

Optical Tracking

Delivers precise response and smooth performance.



Image: Optical tracking with adjustable DPI settings for precise control.

5.3. Using the Multi-Function Button (8)

The **Switch Function Gear / Sensing Knob**(8) provides quick access to several useful functions:

- **Window Switching:** Quickly switch between open application windows.
- **Zoom In and Out:** Adjust the zoom level of documents or web pages.
- **Move Page Left/Right:** Navigate horizontally on wide documents or spreadsheets.

Unique Multi-Function Button

Swicth easily,and more efficient



Image: The unique multi-function button allows for efficient navigation and control.

5.4. Power Saving Mode

To conserve battery life, the mouse will automatically enter power-saving mode after 30 minutes of inactivity. To wake the mouse, simply press any button.

6. MAINTENANCE

6.1. Cleaning

To clean your mouse, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the device. Avoid using harsh chemicals or abrasive cleaners.

6.2. Non-Slip Base Film

For optimal gliding performance, ensure you peel off any protective film from the non-slip base of the mouse before use.

7. TROUBLESHOOTING

- **Mouse is unresponsive:**
 - Ensure the mouse is turned on.
 - Check the battery level and charge the mouse if necessary.
 - Verify the correct connection mode (2.4G, BT1, or BT2) is selected using the Mode Switch Button (5).
 - For 2.4G connection, ensure the USB receiver is securely plugged into a working USB port. Try a different USB port.
 - For Bluetooth connection, ensure Bluetooth is enabled on your device and the mouse is paired correctly. Try re-pairing the mouse.
- **Difficulty switching between Bluetooth devices:**
 - While the mouse supports connecting to up to three devices, switching between Bluetooth channels (BT1 and BT2) may sometimes require re-establishing the connection on the previously used channel. If a connection is lost, re-pair the mouse with the device for that specific Bluetooth channel.
- **Cursor movement is erratic or imprecise:**
 - Clean the optical sensor on the bottom of the mouse.
 - Ensure you are using the mouse on a suitable surface. Avoid highly reflective or transparent surfaces.
 - Adjust the DPI setting using the DPI Switch Button (4) to find a comfortable sensitivity.
- **Buttons are not functioning:**
 - Ensure the mouse is properly connected and powered on.
 - Test the mouse on a different computer to rule out software or driver issues.

8. SPECIFICATIONS

Feature	Detail
Brand	ONIKUMA GAMING
Model	CW932

Connectivity Technology	Bluetooth, 2.4G USB Wireless
Movement Detection Technology	Optical
DPI Levels	800, 1200, 1600, 2400
Number of Buttons	8
Hand Orientation	Right
Special Features	Vertical Ergonomic Design, Rechargeable, Multi-Device Connectivity (up to 3 devices)
Compatible Devices	Desktops, Laptops, PCs, MacBooks, other devices
Batteries Required	Yes (Built-in rechargeable)
Material	Plastic
Item Weight	222 g
Package Dimensions	16.89 x 12.29 x 7.8 cm

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact ONIKUMA GAMING customer service through their official website or your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question