

Kitchen HQ 867331

Kitchen HQ Speed Drum Grater Model 867331 User Manual

Your guide to efficient food preparation

1. INTRODUCTION

Thank you for choosing the Kitchen HQ Speed Drum Grater. This innovative kitchen tool is designed to simplify your food preparation tasks, offering versatility for slicing, grating, crinkle cutting, julienning, and shredding various ingredients. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always keep hands and fingers away from the blades during operation and cleaning. Use the provided food pusher.
- Ensure the grater is securely attached to a clean, smooth, and dry countertop using the suction base before use.
- Do not attempt to grate or slice frozen foods or extremely hard items, as this may damage the blades or the unit.
- Keep the appliance out of reach of children.
- Exercise caution when handling and cleaning the sharp drums.
- Inspect the unit for any damage before each use. Do not operate if damaged.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Main Grater Unit (Base with Suction, Handle, Food Chute)
- Food Pusher
- 5 Interchangeable Stainless Steel Drums (Slicing, Grating, Crinkle Cut, Julienne, Shredding)
- Custom Drum Holder



Image: The five interchangeable stainless steel drums included with your grater.



Image: The custom holder designed for convenient storage of all five drums.

4. ASSEMBLY AND SETUP

1. **Attach the Base:** Place the grater base on a clean, smooth, and dry countertop. Press down firmly on the base and twist the locking mechanism clockwise until the suction cup is securely engaged. Test for stability before proceeding.
2. **Insert a Drum:** Select the desired drum for your task. Align the drum with the opening in the main unit and gently push it into place until it clicks securely.
3. **Attach the Handle:** Insert the handle into the designated slot on the side of the drum. Ensure it is fully engaged and turns smoothly.
4. **Prepare Ingredients:** Wash and prepare your ingredients. Cut larger items into pieces that fit comfortably into the food chute.

5. OPERATING INSTRUCTIONS

1. Ensure the grater is assembled correctly and securely attached to the countertop.
2. Place a bowl or container beneath the grater's output chute to collect the processed food.
3. Place your ingredient into the food chute.
4. Gently press down on the food with the food pusher.
5. Turn the handle clockwise with steady pressure. The food will be processed and exit through the chute.
6. Continue until all ingredients are processed.
7. To change drums, turn the handle counter-clockwise to release, then carefully remove the current drum and insert a new one.

6. INTERCHANGEABLE DRUMS

The Kitchen HQ Speed Drum Grater comes with five distinct drums, each designed for a specific task:

- **Slicing Drum:** Ideal for thin slices of vegetables like cucumbers, carrots, or potatoes.
- **Grating Drum:** Perfect for fine grating of hard cheeses, chocolate, or nuts.
- **Crinkle Cut Drum:** Creates decorative crinkle-cut slices for vegetables, adding visual appeal to dishes.
- **Julienne Drum:** Produces thin, matchstick-like strips of vegetables for salads or stir-fries.
- **Shredding Drum:** Suitable for coarse shredding of cheeses, cabbage, or other firm vegetables.

7. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your grater.

- **Disassembly:** After each use, disassemble the unit by removing the handle, drum, and releasing the suction base.
- **Washing:** All removable parts, including the drums, food pusher, and main unit, are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive brush or sponge. Exercise extreme caution when cleaning the sharp blades of the drums.
- **Drying:** Ensure all parts are thoroughly dried before reassembling or storing to prevent rust on stainless steel components.
- **Storage:** Store the drums in the provided custom holder. Store the entire unit in a dry place.

8. TROUBLESHOOTING

Issue: The suction base does not hold securely.

Solution: Ensure the countertop surface is completely clean, smooth, and dry. Press down firmly on the base while twisting the locking mechanism clockwise until it is fully engaged. Avoid porous or textured surfaces.

Issue: Food is not processing efficiently or gets stuck.

Solution: Ensure the food pieces are cut to an appropriate size to fit the chute and the drum. Do not overfill the chute. Apply steady, even pressure with the food pusher. Check that the correct drum is installed for the type of food being processed.

Issue: Handle is difficult to turn.

Solution: This may indicate that the food is too hard or the drum is not properly seated. Do not force the handle. Remove the food, check the drum's installation, and ensure you are not attempting to process overly hard ingredients.

9. PRODUCT SPECIFICATIONS

Model Number	867331
Brand	Kitchen HQ
Material	ABS plastic, polypropylene plastic, POM thermoplastic, AS plastic, SS430 stainless steel, SS304 stainless steel
Color	Red
Item Weight	3 pounds
Package Dimensions	11 x 9 x 6 inches
Dishwasher Safe	Yes

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact Kitchen HQ customer service through their official website. Please have your model number (867331) and purchase details available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

