

Speed Drum Grater Instruction Manual

Model: 867331 | **Brand:** Kitchen HQ

1. INTRODUCTION

Thank you for choosing the Kitchen HQ Speed Drum Grater. This versatile kitchen tool is designed to simplify your food preparation tasks, allowing you to effortlessly slice, grate, crinkle cut, julienne, and shred a variety of ingredients. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. PACKAGE CONTENTS

Please verify that all components are present in your package:

- 1 x Main Grater Unit (with handle and suction base)
- 1 x Food Pusher
- 5 x Interchangeable Drums (Slicing, Grating, Crinkle Cut, Julienne, Shredding)
- 1 x Custom Drum Holder



Image: All components of the Speed Drum Grater, including the main unit, five drums, and the storage holder.



Image: A detailed view of the five distinct interchangeable drums for various cutting tasks.



Image: The custom-designed holder for convenient storage of the five drums.

3. SAFETY INSTRUCTIONS

To prevent injury or damage, please observe the following safety precautions:

- **Sharp Blades:** The drums contain sharp blades. Handle them with extreme care. Always hold drums by their plastic ends.
- **Use Pusher:** Always use the provided food pusher to guide ingredients into the drum. Never use your fingers or other utensils to push food.
- **Children:** Keep the grater and its components out of reach of children.
- **Stable Surface:** Ensure the grater is securely attached to a clean, smooth, and dry countertop using the suction base before operation.
- **Intended Use:** Use the grater only for its intended purpose of processing food.
- **Damage:** Do not use the grater if any part is damaged. Contact customer support for assistance.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.

2. **Clean:** Before first use, wash all parts that will come into contact with food in warm, soapy water. Rinse thoroughly and dry.
3. **Assemble Base:** Place the main grater unit on a clean, smooth, and dry countertop. Twist the knob on the suction base clockwise until it firmly adheres to the surface. Ensure it is stable and does not wobble.
4. **Insert Drum:** Select the desired drum for your task. Align the drum with the opening in the main unit and gently push it in until it clicks into place. Ensure the drum is fully seated.
5. **Attach Handle:** Insert the handle into the designated slot on the side of the drum. Turn the handle clockwise until it locks securely.

5. OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Cut food items into pieces that fit comfortably into the grater's feeding chute.
2. **Secure Grater:** Ensure the suction base is firmly locked onto a stable, flat surface.
3. **Insert Food:** Place the prepared food item into the feeding chute.
4. **Use Pusher:** Place the food pusher on top of the food item. Apply gentle, even pressure with the pusher while simultaneously turning the handle clockwise.
5. **Collect Output:** Position a bowl or container beneath the grater's output chute to collect the processed food.
6. **Change Drums:** To change drums, first unlock the handle by turning it counter-clockwise and remove it. Then, gently pull the installed drum out. Insert the new drum and reattach the handle as described in the Setup section.

Drum Functions:

- **Slicing Drum:** Ideal for thin slices of vegetables like cucumbers, carrots, or potatoes.
- **Grating Drum:** Perfect for cheese, nuts, chocolate, or harder vegetables.
- **Crinkle Cut Drum:** Creates decorative crinkle-cut slices for salads or garnishes.
- **Julienne Drum:** Produces thin, matchstick-like strips of vegetables.
- **Shredding Drum:** For coarser shredding of cabbage, carrots, or soft cheeses.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Speed Drum Grater.

1. **Disassemble:** After each use, disassemble the grater by removing the handle and the drum. Unlock the suction base by twisting the knob counter-clockwise and lift the main unit.
2. **Rinse Immediately:** Rinse all parts under running water to remove any food residue.
3. **Dishwasher Safe:** All removable parts (drums, pusher, main unit) are dishwasher safe. Place them on the top rack for best results.
4. **Hand Washing:** If hand washing, use warm, soapy water and a non-abrasive brush or sponge. Exercise caution when cleaning the sharp blades of the drums.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing to prevent rust on metal components and maintain hygiene.
6. **Storage:** Store the grater and its drums in a dry place. The custom drum holder is designed for convenient and safe storage of the drums.

7. TROUBLESHOOTING

Problem: Suction base does not hold firmly.

Solution: Ensure the countertop surface is clean, dry, and smooth. Twist the suction knob firmly clockwise until it is fully engaged. Avoid porous or textured surfaces.

Problem: Food gets stuck or is difficult to process.

Solution: Ensure the food pieces are appropriately sized for the feeding chute. Do not overfill. Apply steady, even pressure with the food pusher. For very hard foods, consider pre-softening if appropriate (e.g., slightly chilling cheese for easier grating).

Problem: Drum is difficult to insert or remove.

Solution: Ensure the handle is removed before attempting to insert or remove a drum. Align the drum correctly with the slot. If it's still difficult, check for any food residue or obstruction.

8. SPECIFICATIONS

Attribute	Detail
Brand	Kitchen HQ
Model Number	867331
Color	Black
Material	ABS plastic, polypropylene plastic, POM thermoplastic, AS plastic, SS430 stainless steel, SS304 stainless steel
Style	Drum Grater
Shape	Cylindrical
Dishwasher Safe	Yes
Item Weight	3 pounds
Package Dimensions	11 x 9 x 6 inches

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the original purchase documentation or contact Kitchen HQ customer service. Keep your proof of purchase for any warranty claims.