

**CM-005**

# Power Vortex XL Digital 10 Quart Air Fryer Pro

## INSTRUCTION MANUAL

Model: CM-005

### INTRODUCTION

The Power Vortex XL Digital 10 Quart Air Fryer Pro is designed to provide healthy meal options for family feasts and other gatherings. Utilizing Rapid Vortex Air Circulation, this appliance cooks and crisps food with superheated hot air, achieving a golden-fried taste and texture without the need for added oil. Its versatile design allows for a wide range of cooking functions, making it an essential addition to any kitchen.

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.


### PACKAGE CONTENTS

Your Power Vortex XL Digital 10 Quart Air Fryer Pro package includes the following components:

- Main Air Fryer Unit
- Digital Control Panel with 10 Pre-set Programs
- Easy Grip Handle
- Large Visible Window
- Crisper Trays (typically 3)
- Drip Tray
- Rotisserie Set (spit, forks, and fetch tool)

## PRODUCT OVERVIEW

---

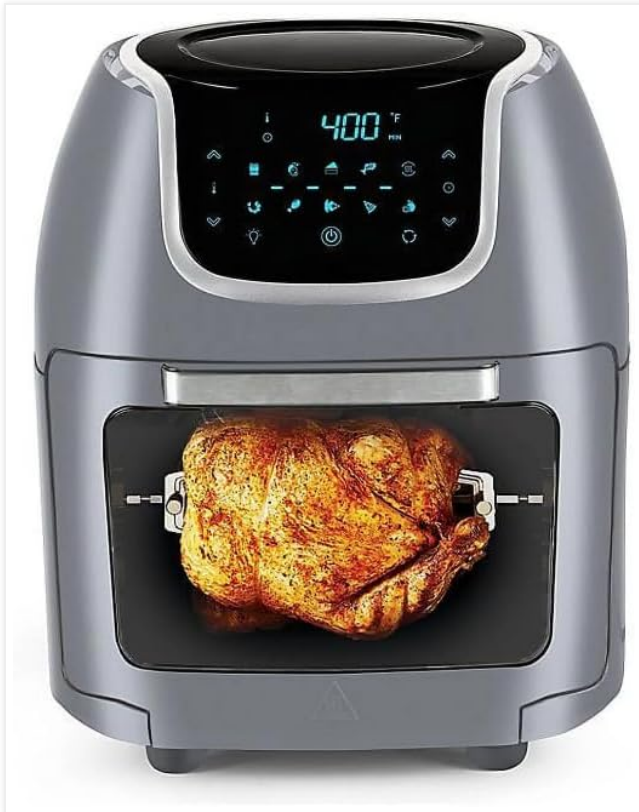

The Power Vortex XL Air Fryer Pro features a sleek design with a prominent digital control panel at the top, allowing for easy selection of cooking functions and precise temperature and time adjustments. The large visible window on the front door enables monitoring of food during cooking without opening the unit. Inside, multiple crisper trays can be utilized for various foods, while the drip tray collects excess oil and crumbs for easy cleanup. The rotisserie set provides the capability to roast whole chickens or other large items, ensuring even cooking.

- **Digital Touch Control Panel:** Intuitive interface for selecting presets, adjusting time and temperature.
- **Large Viewing Window:** Monitor cooking progress without opening the door.
- **Crisper Trays:** Perforated trays for optimal air circulation and crisping.
- **Drip Tray:** Catches grease and food particles for easy cleaning.
- **Rotisserie Spit:** For roasting whole poultry or larger cuts of meat.
- **Automatic Shut-Off:** Enhances safety by turning off the unit when cooking is complete or the door is opened.

## SETUP AND FIRST USE

---

1. **Unpack:** Carefully remove all components from the packaging.

2. **Clean:** Wash the crisper trays, drip tray, and rotisserie set in warm, soapy water or in the dishwasher. Wipe the interior and exterior of the main unit with a clean, damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
4. **Initial Run:** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 350°F (175°C) to burn off any manufacturing residues. A slight odor may be present, which is normal.

## OPERATING INSTRUCTIONS

---

The Power Vortex XL Air Fryer Pro offers 10 pre-programmed smart settings for various cooking needs. You can also manually adjust temperature and time.

### Basic Operation:

1. **Prepare Food:** Place food on the crisper trays or attach to the rotisserie spit as required. Do not overload the trays to ensure even cooking.
2. **Insert Trays/Spit:** Carefully slide the crisper trays into the desired slots or secure the rotisserie spit inside the unit. Ensure the drip tray is at the bottom.
3. **Close Door:** Close the front door securely. The unit will not operate if the door is open.
4. **Power On:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.
5. **Select Function:**
  - **Pre-set Programs:** Touch one of the 10 pre-programmed icons (e.g., Fries, Chicken, Fish, Steak, Shrimp, Roast, Bake, Dehydrate, Reheat, Pizza). The unit will automatically set the recommended time and temperature.
  - **Manual Settings:** Use the temperature and time adjustment buttons to set your desired cooking parameters. The temperature can be set up to 400°F (200°C).
6. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle. The internal light may turn on, and the fan will begin circulating hot air.
7. **Monitor Progress:** Use the large viewing window to monitor food. For best results, shake or flip food on crisper trays halfway through cooking.
8. **Completion:** The unit will beep and automatically shut off when the cooking cycle is complete.
9. **Remove Food:** Carefully open the door. Use oven mitts and the rotisserie fetch tool (if applicable) to remove hot food and trays.

### Cooking Functions:

- **Air Fry:** Ideal for crispy foods like fries, chicken wings, and vegetables.
- **Rotisserie:** Perfect for roasting whole chickens or roasts, ensuring even browning.
- **Bake:** Suitable for cakes, muffins, and other baked goods.
- **Roast:** For meats and larger vegetables.
- **Dehydrate:** Low-temperature setting for drying fruits, vegetables, and making jerky.
- **Reheat:** Quickly warms up leftovers.

## CLEANING AND MAINTENANCE

---

Regular cleaning will ensure optimal performance and extend the life of your air fryer.

- **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- **Dishwasher Safe Parts:** The crisper trays, drip tray, and rotisserie set are dishwasher safe for convenient cleaning.
- **Interior Cleaning:** Wipe the interior of the air fryer with a damp cloth and mild detergent. For stubborn food residue, soak the drip tray and crisper trays in warm, soapy water before scrubbing. Avoid abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; door not closed properly.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Ensure the door is fully closed.
Food is not cooked evenly.	Overcrowding of trays; insufficient shaking/flipping.	Cook food in smaller batches. Shake or flip food on crisper trays halfway through cooking.
White smoke coming from the unit.	Grease/oil residue from previous cooking; high-fat food.	Clean the drip tray and interior thoroughly after each use. For high-fat foods, drain excess fat from the drip tray during cooking.
Food not crispy.	Too much moisture; overcrowding; incorrect temperature/time.	Pat food dry before air frying. Do not overcrowd trays. Adjust temperature or cooking time as needed.

## SPECIFICATIONS

- **Model Name:** Power X Vortex AIR FRYER PRO
- **Model Number:** CM-005
- **Brand:** Generic
- **Capacity:** 10 Quarts
- **Output Wattage:** 1700 Watts
- **Voltage:** 110 Volts
- **Product Dimensions:** 15"D x 15.15"W x 12.68"H
- **Item Weight:** 20 pounds
- **Material:** Aluminum, Plastic
- **Control Method:** Touch
- **Special Features:** Temperature Control, Stain Resistant, Automatic Shut-Off, Programmable
- **Dishwasher Safe Parts:** Yes (Crisper Trays, Drip Tray, Rotisserie Set)

- **Country of Origin:** China

## **WARRANTY AND SUPPORT**

---

For information regarding product warranty, please refer to the warranty card included with your purchase or contact the manufacturer's customer support. Protection plans may also be available for extended coverage.

For technical assistance, troubleshooting, or parts inquiries, please contact the Generic customer support line or visit their official website. Keep your purchase receipt and model number (CM-005) handy for faster service.