

manuals.plus /

› [Innsky](#) /

› [Innsky 6L Air Fryer Instruction Manual - Compact 1500W LED Touch Screen Model](#)

Innsky AFT06009

Innsky 6L Air Fryer Instruction Manual

Model: AFT06009

1. INTRODUCTION

Thank you for choosing the Innsky 6L Air Fryer. This appliance is designed to provide a healthier way to cook your favorite meals, using significantly less oil than traditional frying methods. With its advanced 360° air circulation technology and powerful 1500W heating system, you can achieve crispy and delicious results with ease.

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new air fryer. Please read it thoroughly before first use and keep it for future reference.



Figure 1: InnSky 6L Air Fryer

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Innsky Air Fryer:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** LED touch screen for setting time, temperature, and selecting presets.
- **Frying Basket:** Removable basket for holding food.
- **Crisper Plate:** Inserted into the frying basket to allow air circulation around food and drain excess fat.

Pasti veloce e facile per la famiglia

7 preset personalizzabili per un avvio rapido



Figure 2: Control Panel with 7 Customizable Presets

Maggiore capacità, tanto da condividere

La capacità 6L è perfetta per un'intera famiglia



Figure 3: Large 6L Capacity for Family Meals

4. SETUP

4.1 Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Remove the frying basket and crisper plate from the air fryer.

4.2 Cleaning Before First Use

1. Wash the frying basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Ensure all parts are completely dry before use.

4.3 Placement

1. Place the air fryer on a stable, horizontal, and heat-resistant surface.

2. Ensure there is at least 10 cm (4 inches) of free space on the back and sides of the appliance, and 10 cm (4 inches) above it.
3. Do not place the appliance against a wall or other appliances.



Figure 4: Compact Design and Dimensions

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Plug the power cord into a grounded wall outlet. The air fryer will enter standby mode. Press the power button to turn the appliance on or off.

5.2 Preparing for Cooking

1. Carefully pull the frying basket out of the air fryer.
2. Place the crisper plate into the frying basket.

3. Place the ingredients into the frying basket, ensuring not to exceed the MAX fill line.
4. Slide the frying basket back into the air fryer. Ensure it is fully closed.

5.3 Manual Cooking

1. With the air fryer on, use the temperature control buttons to set your desired cooking temperature (e.g., 180°C).
2. Use the time control buttons to set your desired cooking time (e.g., 15 minutes).
3. Press the Start/Pause button to begin cooking.

5.4 Using Preset Programs

The air fryer features 8 preset programs for common dishes:

- Fries
 - Meat
 - Seafood
 - Fish
 - Pizza
 - Bake
 - Chicken Leg
 - DIY (Custom)
1. Press the Menu button to cycle through the preset programs.
 2. Once a program is selected, the default time and temperature will be displayed. You can adjust these settings manually if needed.
 3. Press the Start/Pause button to begin cooking.

5.5 Shake Reminder

For certain foods, the air fryer may prompt you to shake the basket halfway through the cooking process to ensure even cooking and crispiness. When the 'SHAKE' icon appears on the display, pull out the basket, gently shake the contents, and then reinsert the basket. The cooking will resume automatically.



Figure 5: Shake Reminder for Even Cooking

5.6 Automatic Pause and Resume

The air fryer will automatically pause cooking when the basket is pulled out. Once the basket is reinserted, cooking will resume with the remaining time and temperature settings.




Figure 6: Air Circulation for Even Cooking

6. MAINTENANCE

6.1 Cleaning

Clean the air fryer after every use.

1. Unplug the appliance and allow it to cool down completely before cleaning.
2. Wipe the outside of the air fryer with a damp cloth.
3. The frying basket and crisper plate are dishwasher safe. Alternatively, they can be cleaned with hot water, dish soap, and a non-abrasive sponge.
4. Clean the inside of the appliance with hot water and a non-abrasive sponge.
5. Clean the heating element with a cleaning brush to remove any food residue.

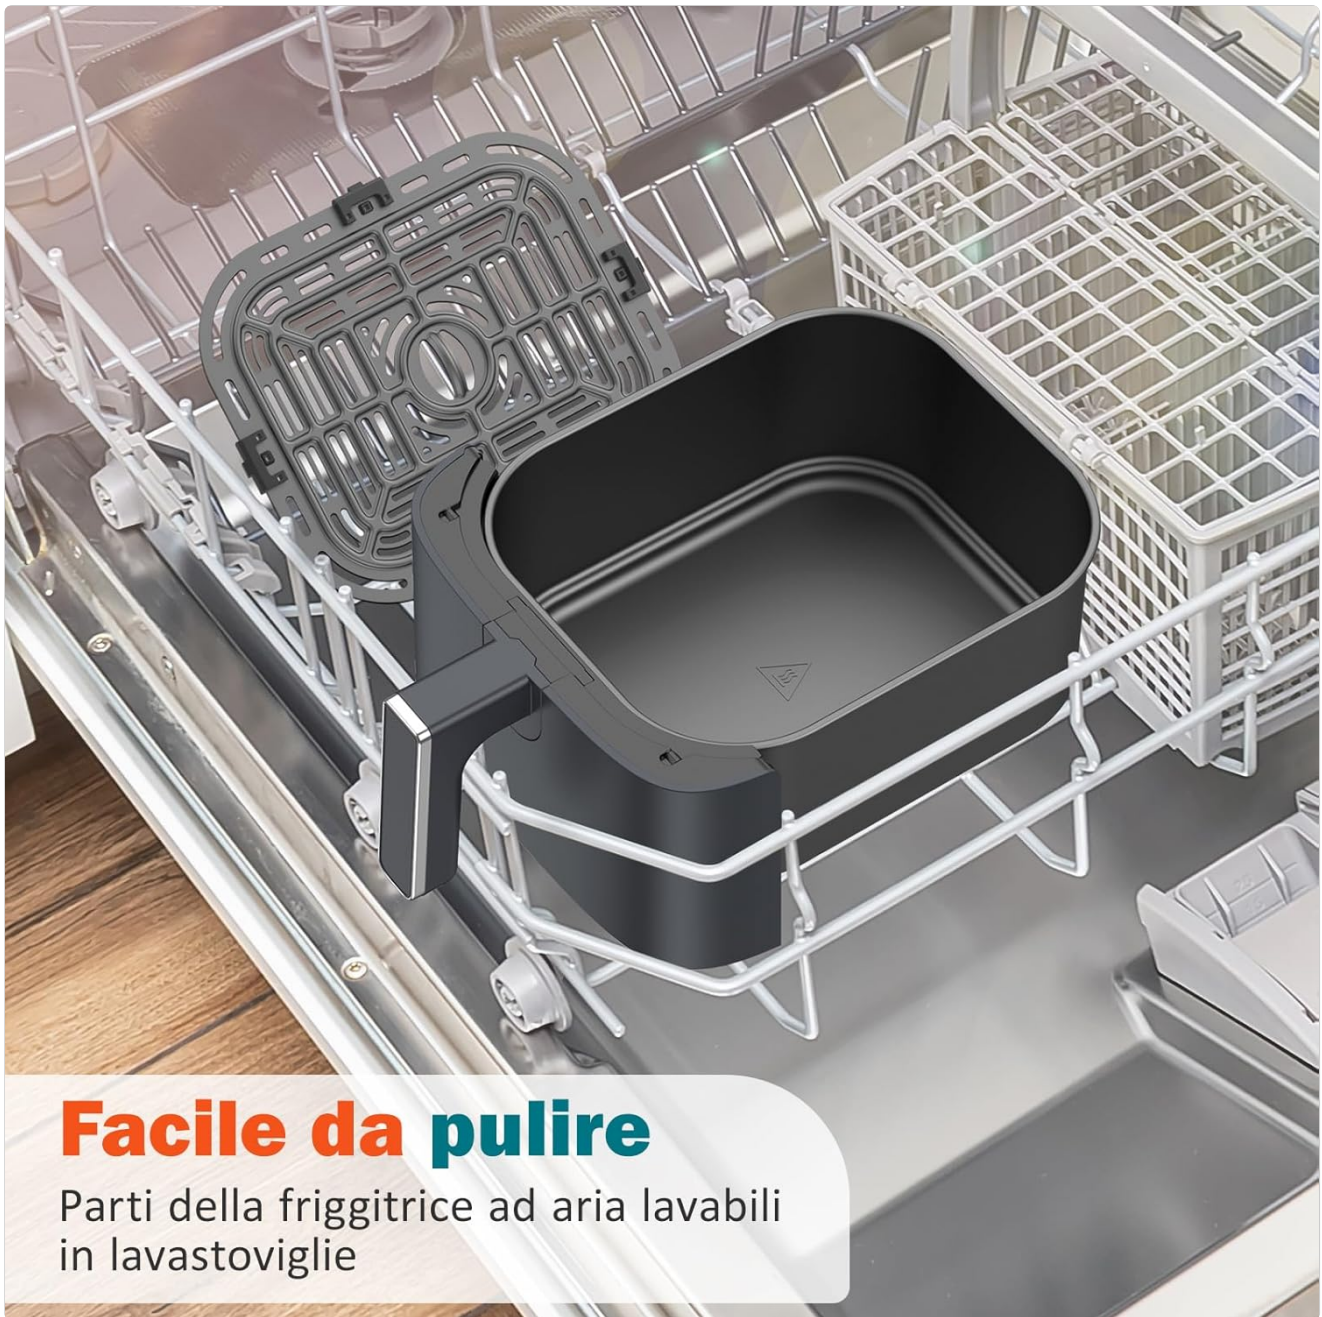

Facile da pulire

Parti della friggitrice ad aria lavabili in lavastoviglie

Figure 7: Dishwasher-Safe Components for Easy Cleaning

6.2 Storage

Unplug the appliance and let it cool down completely. Make sure all parts are clean and dry. Store the air fryer in a clean, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	The appliance is not plugged in.	Plug the power cord into a grounded wall outlet.
Food is not cooked evenly.	Too much food in the basket; food not shaken.	Reduce the amount of food; shake the basket halfway through cooking.

Problem	Possible Cause	Solution
Food is not crispy.	Temperature too low or cooking time too short.	Increase temperature or cooking time. Ensure food is dry before cooking.
White smoke comes from the appliance.	Fat residue from previous use; fatty ingredients.	Clean the basket and crisper plate thoroughly; remove excess oil from ingredients.

8. SPECIFICATIONS

- **Brand:** Innsky
- **Model:** AFT06009
- **Color:** Grey
- **Product Dimensions:** 31.8 x 29.5 x 26 cm
- **Capacity:** 6 Liters
- **Wattage:** 1500 watts
- **Voltage:** 230 Volts (AC)
- **Material:** Plastic
- **Special Features:** Temperature control, Programmable, Timer
- **Item Weight:** 6 Kilograms

9. WARRANTY AND SUPPORT

Innsky products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty from the date of purchase. For detailed warranty information, please refer to the warranty card included with your product or visit the official Innsky website.

For any questions, technical support, or warranty claims, please contact Innsky customer service through the contact information provided in your product packaging or on the official Innsky website.