

[Manuals.plus](#) /

> [SHARDOR](#) /

> SHARDOR JHB-158 6-in-1 Hand Blender Instruction Manual: 1200W, 20-Speed & Turbo Stick Blender with Chopper, Whisk, Dough Hooks, and Beaker

## SHARDOR JHB-158

# SHARDOR JHB-158 6-in-1 Hand Blender Instruction Manual

Model: JHB-158

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using your SHARDOR JHB-158 Hand Blender. Retain this manual for future reference.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Blades are sharp. Handle with extreme care when assembling, disassembling, or cleaning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Avoid contact with hot food or liquids. Allow hot ingredients to cool slightly before blending.
- Do not use outdoors. This appliance is for household use only.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

## 2. PRODUCT OVERVIEW

---

### Components

Your SHARDOR JHB-158 Hand Blender comes with the following components:

1. Motor Unit (with speed control dial and Turbo button)
2. Blending Shaft (Immersion Blender)

3. Whisk Attachment
4. Egg Beater Attachment
5. Dough Hooks Attachment
6. Whisk/Egg Beater/Dough Hook Adapter
7. 800ml Beaker with Lid
8. 600ml Chopper Bowl with Blade and Lid



Image: The SHARDOR JHB-158 6-in-1 Hand Blender system, showcasing the motor unit, blending shaft, whisk attachment, egg beater attachment, dough hooks, 800ml beaker, and 600ml chopper bowl with blade, surrounded by fresh ingredients.

## 3. ASSEMBLY

---

### 3.1 Attaching the Blending Shaft

1. Align the blending shaft with the motor unit.
2. Twist the blending shaft clockwise until it locks securely into place.
3. To detach, twist counter-clockwise and pull apart.

### 3.2 Attaching the Whisk, Egg Beater, or Dough Hook Adapter

1. Insert the desired whisk, egg beater, or dough hook into the adapter until it clicks.

2. Align the adapter with the motor unit.
3. Twist the adapter clockwise until it locks securely into place.
4. To detach, twist counter-clockwise and pull apart.

### 3.3 Attaching the Chopper

1. Place the chopper blade onto the central pin inside the chopper bowl.
2. Add ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl, ensuring it is properly seated.
4. Align the motor unit with the chopper lid.
5. Twist the motor unit clockwise until it locks securely into place.
6. To detach, twist counter-clockwise and pull apart.

## 4. OPERATION

---

### 4.1 General Use

Ensure the appliance is correctly assembled and plugged into a power outlet. Always hold the motor unit firmly during operation.

### 4.2 Speed Control and Turbo Function

The SHARDOR JHB-158 features 20 variable speed settings and a Turbo mode for maximum power.

- **Variable Speed:** Rotate the dial on top of the motor unit to select your desired speed from 1 to 20. Lower speeds are suitable for soft ingredients, while higher speeds are for harder ingredients or faster processing.
- **Turbo Mode:** Press and hold the 'TURBO' button for an instant burst of maximum power. This is ideal for tough ingredients or achieving a finer consistency quickly. Release the button to stop Turbo mode.

# 20 SPEED CONTROL & TURBO MODE

Different Speeds for Making Various Foods



Image: Close-up of the SHARDOR JHB-158 motor unit, highlighting the 20-speed control dial and the 'TURBO' button, with examples of ingredients suitable for low, medium, and high speeds.

## 4.3 Blending (Using Blending Shaft)

1. Attach the blending shaft to the motor unit.
2. Immerse the blending shaft into the ingredients in a beaker or pot. Ensure the blade guard is fully submerged to prevent splashing.
3. Press the power button to start blending. Adjust speed as needed.
4. Move the blender up and down gently to ensure even blending.
5. Release the power button to stop.



Image: Demonstrations of the SHARDOR JHB-158 hand blender and its various attachments in use, including blending with the immersion blender, whisking, chopping, and kneading.

#### 4.4 Chopping (Using Chopper Attachment)

1. Assemble the chopper attachment as described in Section 3.3.
2. Place ingredients into the chopper bowl. Do not overfill.
3. Attach the motor unit.
4. Press the power button in short pulses to chop ingredients to your desired consistency.
5. Release the power button to stop.

#### 4.5 Whisking / Egg Beating (Using Whisk or Egg Beater Attachment)

1. Assemble the whisk or egg beater attachment with the adapter and motor unit as described in Section

3.2.

2. Place the whisk/beater into the ingredients (e.g., eggs, cream) in a bowl.
3. Press the power button to start. Use appropriate speed settings for whisking or beating.
4. Release the power button to stop.

#### 4.6 Kneading (Using Dough Hooks Attachment)

1. Assemble the dough hooks attachment with the adapter and motor unit as described in Section 3.2.
2. Place the dough hooks into the ingredients in a bowl.
3. Press the power button to start. Use a low to medium speed for kneading.
4. Release the power button to stop.

## 5. CLEANING AND MAINTENANCE

---

Proper cleaning ensures the longevity and hygiene of your appliance.

- **Before Cleaning:** Always unplug the hand blender from the power outlet and allow it to cool down.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or other liquids.
- **Blending Shaft, Whisk, Egg Beaters, Dough Hooks, Chopper Blade:** These parts can be rinsed under running water or washed in warm, soapy water. Handle blades with extreme care.
- **Beaker and Chopper Bowl/Lid:** Wash in warm, soapy water or place on the top rack of a dishwasher.
- **Drying:** Ensure all parts are thoroughly dried before storing.
- **Storage:** Store the appliance and its accessories in a dry place, out of reach of children.

## 6. TROUBLESHOOTING

---

If you encounter issues with your SHARDOR JHB-158 Hand Blender, refer to the following table:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; motor unit not properly attached to accessory.	Check power connection; test outlet with another appliance; ensure motor unit is securely locked onto the attachment.
Motor stops during operation.	Overheating due to prolonged use or processing too hard ingredients; motor unit detached.	Unplug and let cool for 30 minutes; reduce load; ensure motor unit is securely attached.
Poor blending/chopping results.	Too much food; not enough liquid (for blending); incorrect speed setting.	Reduce quantity of ingredients; add more liquid; adjust to a higher speed or use Turbo mode.
Splashing during blending.	Blade guard not fully submerged; too high speed initially.	Ensure blade guard is fully immersed before starting; begin at a lower speed.

## 7. SPECIFICATIONS

---

Feature	Specification
Model Number	JHB-158

Feature	Specification
Power	1200W
Speed Settings	20 Variable Speeds + Turbo
Beaker Capacity	800 ml
Chopper Bowl Capacity	600 ml
Product Dimensions	2.5"D x 2.5"W x 7"H (Motor Unit)
Item Weight	3.94 pounds
Power Source	Electric
Special Feature	Auto Shut Off

## 8. WARRANTY AND SUPPORT

---

SHARDOR products are manufactured to high-quality standards. For warranty information, product support, or service inquiries, please refer to the warranty card included with your purchase or contact SHARDOR customer service through the official website or your retailer.