

[Manuals.plus](#) /

> [JOVELL](#) /

> JOVELL CD-X9C Portable CD Player Boombox Instruction Manual

## JOVELL CD-X9C

# JOVELL CD-X9C Portable CD Player Boombox Instruction Manual

Model: CD-X9C | Brand: JOVELL

## 1. PRODUCT OVERVIEW

The JOVELL CD-X9C is a versatile portable CD player boombox designed for clear stereo sound. It supports various audio formats and offers multiple playback options, including CD, FM radio, Bluetooth, USB, and auxiliary input. Its compact design and dual power modes (AC and battery) make it suitable for both home and outdoor use.



Image 1: The JOVELL CD-X9C boombox highlighting its multiple functions including CD player, FM radio, Bluetooth, USB player, AUX input, and headphone jack.

# Portable And Compact Design

Perfect for Outdoor Activities or Home Use



Image 2: The JOVELL CD-X9C boombox demonstrating its portable and compact design, suitable for various environments.

## 2. SETUP INSTRUCTIONS

### 2.1 Power Supply

The CD-X9C boombox can be powered by either AC power or batteries.

#### AC Power (Included Cable)

1. Insert the AC power cable into the AC IN jack located on the back of the unit.
2. Plug the other end of the AC power cable into a standard wall outlet (AC 100-240V, 50/60Hz).

#### Battery Power (6 x C Batteries, Not Included)

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 6 'C' size batteries (UM-2, 1.5V) into the compartment, ensuring correct polarity (+/-).

3. Close the battery compartment cover securely.

**Note: When using AC power, batteries are automatically disconnected. Remove batteries if the unit will not be used for an extended period to prevent leakage.**



Image 3: Illustration of the two power supply modes: AC power connection and the battery compartment for 6 C batteries.

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Controls

- **Power Button:** Press to turn the unit ON or OFF.
- **Volume Knobs:** Rotate to adjust the sound level.
- **MODE/EQ Button:** Press to switch between different playback modes (CD, FM, Bluetooth, USB, AUX). Long press to cycle through EQ modes.
- **Play/Pause Button:** Press to play or pause playback.
- **Skip/Search Buttons (<< / >>):** Press to skip tracks/stations. Hold to fast forward/rewind within a track or

search for stations.

- **REPEAT Button:** Press to repeat the current track or all tracks.
- **SCAN Button:** In FM mode, press to auto-scan and save available stations.

### 3.2 CD Player Operation

1. Press the **MODE/EQ** button to select CD mode. The display will show "CD".
2. Open the top-loading CD compartment cover.
3. Place a CD (CD/CD-R/CD-RW/MP3/WMA compatible) onto the spindle with the label side facing up.
4. Close the CD compartment cover. The unit will read the disc and begin playback automatically.
5. Use the **Play/Pause**, **Skip/Search**, and **REPEAT** buttons to control playback.



Image 4: A person inserting a CD into the top-loading compartment of the JOVELL CD-X9C boombox.

### 3.3 FM Radio Operation

1. Extend the telescopic FM antenna for better reception.
2. Press the **MODE/EQ** button to select FM radio mode. The display will show the FM frequency.
3. Use the **Skip/Search** buttons to manually tune to a station.

4. Press the **SCAN** button to automatically scan and save available FM stations.



Image 5: The JOVELL CD-X9C boombox displaying FM radio functionality with digital tuning and preset stations.

### 3.4 Bluetooth Wireless Connection

1. Press the **MODE/EQ** button to select Bluetooth mode. The display will show "BT" and flash, indicating it's ready for pairing.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "JOVELL CD-X9C" from the list of devices to pair.
4. Once paired, the "BT" indicator will stop flashing, and you can play audio from your device through the boombox.

# FM Stereo Radio

Built-in FM Tuner with Digital Tuning And 30 Preset Stations



Image 6: The JOVELL CD-X9C boombox wirelessly connected to a smartphone via Bluetooth 5.1.

## 3.5 USB Player Operation

1. Insert a USB flash drive (up to 128GB, MP3/WMA format only) into the USB port on the front of the unit.
2. Press the **MODE/EQ** button to select USB mode. The unit will automatically detect and play compatible audio files from the USB drive.
3. Use the **Play/Pause**, **Skip/Search**, and **REPEAT** buttons to control playback.

# USB Flash Drive Player

Supports USB Flash Drives Up to 128GB (MP3, WMA Format Only)



Image 7: A person inserting a USB flash drive into the JOVELL CD-X9C boombox, illustrating its USB playback capability for MP3 and WMA files.

## 3.6 AUX Input

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX IN jack on the front of the unit using a 3.5mm audio cable (not included).
2. Press the **MODE/EQ** button to select AUX mode.
3. Control audio playback directly from your connected external device.

# Bluetooth Wireless

With Bluetooth 5.1, The Boombox Connects to Your Bluetooth Devices Faster



## Aux Input

Enjoy Wired Music by Connecting Phone/Computer



Image 8: The JOVELL CD-X9C boombox connected to a smartphone via the 3.5mm AUX input for wired music playback.

### 3.7 Headphone Jack

Plug 3.5mm headphones into the HEADPHONE jack on the front of the unit for private listening. The main speakers will automatically mute when headphones are connected.

## 4. MAINTENANCE

### 4.1 Cleaning

- Wipe the unit with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- For the CD lens, use a specialized CD lens cleaner.

### 4.2 Storage

- Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove batteries if storing for extended periods.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC cable not connected; Batteries depleted/incorrectly inserted	Ensure AC cable is securely plugged in; Replace batteries or check polarity.
CD not playing/skipping	CD dirty/scratched; CD inserted incorrectly; Incompatible CD format	Clean or replace CD; Insert CD with label side up; Ensure CD is compatible (CD/MP3/WMA).
Poor FM reception	Antenna not extended; Weak signal area	Fully extend the telescopic antenna; Try repositioning the unit.
Bluetooth not pairing	Unit not in Bluetooth mode; Device too far; Bluetooth not enabled on external device	Switch to Bluetooth mode; Ensure devices are within 10m; Enable Bluetooth on your device.
USB not playing	USB format incompatible; USB drive corrupted; Incompatible file format	Ensure USB is FAT32 format; Check USB drive for errors; Ensure files are MP3/WMA.

## 6. SPECIFICATIONS

**Product Dimensions:** 1.57 x 1.57 x 1.57 inches

**Item Weight:** 2.79 pounds

**Brand:** JOVELL

**Model:** CD-X9C

**Connectivity Technology:** Auxiliary, Bluetooth 5.1, USB

**Speaker Type:** Stereo

**Supported Standards:** CD, CD-R, CD-RW, MP3, WMA

**Power Source:** AC (100-240V, 50/60Hz) or 6 x C Batteries (DC 9V)

**FM Radio:** Yes

**Headphone Jack:** 3.5mm

**USB Support:** Up to 128GB (MP3/WMA)

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty Information

This JOVELL CD-X9C Portable CD Player Boombox comes with a standard 18-month warranty from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

## 7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact JOVELL customer support through the retailer's platform or visit the official JOVELL website for contact details.

## 8. PRODUCT VIDEOS

No official seller-created videos specifically for the JOVELL CD-X9C model were found in the provided data. Please refer to the images and text instructions for product details and operation.