

[Manuals.plus](#) /

› [WLIVE](#) /

› WLIVE Farmhouse TV Stand (Model: B0DDC53GH4) Instruction Manual

WLIVE B0DDC53GH4

WLIVE Farmhouse TV Stand (Model: B0DDC53GH4) Instruction Manual

Comprehensive guide for assembly, operation, and maintenance of your WLIVE Farmhouse TV Stand.

1. PRODUCT OVERVIEW

The WLIVE Farmhouse TV Stand is designed to accommodate televisions up to 65 inches. It features a rustic brown finish, steel-mesh cabinet doors, adjustable shelving, and integrated LED lighting. This entertainment center provides storage solutions for media devices, accessories, and decorative items.



Image 1.1: WLIVE Farmhouse TV Stand in Rustic Brown with a television.

2. SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use.

- Always ensure the TV stand is securely placed on a flat, stable surface.
- Use the anti-tipping device to prevent the stand from tipping over due to external impacts or when a heavy TV is placed on it.
- Do not place heavy objects on the top shelf to avoid overloading and tipping.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Ensure all screws and fasteners are tightened properly during assembly. Periodically check for loose connections.

3. SPECIFICATIONS

Feature	Detail
Brand	WLIVE
Model	B0DDC53GH4
Color	Rustic Brown
Product Dimensions (D x W x H)	14"D x 59"W x 31.99"H
Recommended TV Size	Up to 65 inches
Special Features	Adjustable Shelf, Anti-Tipping, Removable Shelf, Scratch Resistant
Mounting Type	Floor Mount
Room Type	Bedroom, Living Room
Door Style	Flat Panel with Steel Mesh
Included Components	Shelves, Cabinet Doors, LED Lights
Finish Type	Polished
Number of Shelves	3 (adjustable)
Base Type	Legs
Installation Type	Freestanding
Top Material Type	Engineered Wood
Handle Material	Alloy Steel
Assembly Required	Yes
Item Weight	116.6 pounds

PRODUCT SIZE



Image 3.1: Product dimensions and TV size compatibility.

4. SETUP AND ASSEMBLY

This TV stand requires assembly. It is recommended that two adults perform the assembly to ensure safety and ease of construction. All necessary hardware and tools are included. Please follow the step-by-step instructions provided in the included manual. Clear a spacious area for assembly and keep all components organized.

4.1 Assembly Video Guide

For visual assistance during assembly, please refer to the video below:

Your browser does not support the video tag.

Video 4.1: This video demonstrates the unpacking and assembly process for the WLIVE Tall Farmhouse Entertainment Center. It shows components being removed from the box, screws being installed, and the frame being constructed, concluding with the fully assembled unit.

4.2 Key Assembly Steps

1. Unpack all components and verify against the parts list in your physical manual.
2. Attach cam locks and dowels to the designated panels.
3. Assemble the main frame of the TV stand, ensuring all connections are secure.
4. Install the cabinet doors, ensuring proper alignment and smooth operation.
5. Place the top shelf unit onto the main cabinet.
6. Install the adjustable shelves into the desired positions.
7. Attach the anti-tipping device to the back of the stand and secure it to a wall stud.

5. OPERATING INSTRUCTIONS

5.1 LED Lighting System

The TV stand includes a customizable 31-color LED lighting system. The LED strips are app-controlled, allowing you to select colors and modes from your smartphone.

- **Installation:** Carefully attach the LED strips to the designated areas on the TV stand. Ensure the adhesive is firm.
- **Power Connection:** Plug the LED power adapter into a standard electrical outlet.
- **App Control:** Download the specified mobile application (refer to your physical manual for app name/QR code). Connect your smartphone to the LED system via Bluetooth.
- **Customization:** Use the app to choose from 31 colors, adjust brightness, and select various flashing or fading modes to create your desired ambiance.



**Brightness
Adjustable**



**31 Color
Lights**



**4 Color Flashing
Modes**



Image 5.1: App-controlled LED lighting in operation.

Your browser does not support the video tag.

Video 5.1: This video demonstrates the LED lighting feature of the TV stand, showing various color changes and app control functionality. It highlights how the lights can enhance the viewing experience.

5.2 Adjustable Shelves

The internal shelves within the cabinets are adjustable, offering flexibility for storing items of various heights. Each cabinet features three different height options for the shelves.

- To adjust a shelf, carefully remove any items on it.
- Lift the shelf slightly and pull it out from its current support pins.
- Reinsert the support pins into the desired holes at the new height.
- Place the shelf back onto the support pins, ensuring it is level and secure.



3 Different Heights Adjustable or Remove the Shelf for Flexible Customizable Storage

Image 5.2: Adjustable shelf mechanism.

5.3 Cable Management

The TV stand is equipped with six rear cable ports to help organize and conceal wires from your media devices, maintaining a tidy appearance.

- Route all power and signal cables through the designated cable ports located on the back panel of the stand.
- Utilize cable ties or clips (not included) to bundle and secure cables, preventing tangles and improving airflow.

6. MAINTENANCE

To ensure the longevity and appearance of your WLIVE TV Stand, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the finish. The engineered wood surface is designed to be scratch-resistant and easy to clean.
- **Dusting:** Regularly dust the stand with a dry, soft cloth to prevent dust buildup.

- **Spills:** Immediately wipe up any spills to prevent staining or damage to the wood.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **LED Lights:** If the LED lights stop working, check the power connection and ensure the app is properly connected. If issues persist, contact customer support.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, please refer to the following common problems and solutions:

- **Issue:** The TV stand feels unstable or wobbly.
Solution: Ensure all assembly screws are fully tightened. Verify that the stand is placed on a level surface. If an anti-tipping device was included, ensure it is properly installed and secured to a wall stud.
- **Issue:** LED lights are not turning on or functioning correctly.
Solution: Check if the LED power adapter is securely plugged into a working electrical outlet. Ensure the LED strips are properly connected to the controller. If using the app, verify Bluetooth connection and that the app is updated.
- **Issue:** Cabinet doors are not closing properly or are misaligned.
Solution: Check the hinges for any loose screws and tighten them. Ensure the door stoppers are correctly positioned. Adjust the hinges if necessary (refer to your physical manual for detailed hinge adjustment instructions).
- **Issue:** Missing or damaged parts during assembly.
Solution: Do not proceed with assembly if parts are missing or damaged. Contact WLIVE customer support immediately for replacement parts.

8. WARRANTY AND CUSTOMER SUPPORT

WLIVE is committed to providing quality products and customer satisfaction. For any questions, concerns, or assistance with your TV stand, please contact our dedicated U.S. customer support team.

- **Contact Information:** Refer to the contact details provided in your product packaging or on the official WLIVE website.
- **Warranty:** Information regarding product warranty coverage can be found in your purchase documentation or by contacting customer support.