

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Spacekey](#) /

› [Spacekey Body Hair Trimmer TM-8007 User Manual](#)

Spacekey TM-8007

Spacekey Body Hair Trimmer TM-8007 User Manual

Model: TM-8007

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Spacekey Body Hair Trimmer TM-8007. Retain this manual for future reference.

- **Caution:** Keep away from water sources. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- Avoid use on infants. This device is not intended for use on children.
- Do not use while sleeping or in slippery conditions. Ensure a stable and dry environment during operation.
- Always unplug the trimmer before cleaning.
- In case of skin irritation, discontinue use and consult a doctor.
- Keep out of reach of children.
- Always follow recommended cleaning and maintenance procedures as outlined in this manual.
- Do not attempt to repair or disassemble the trimmer yourself. Contact authorized service personnel for any repairs.
- Use only the charging cable and adapter provided with the device.

2. PRODUCT OVERVIEW

The Spacekey Body Hair Trimmer TM-8007 is designed for efficient and comfortable body hair grooming. Familiarize yourself with its components:

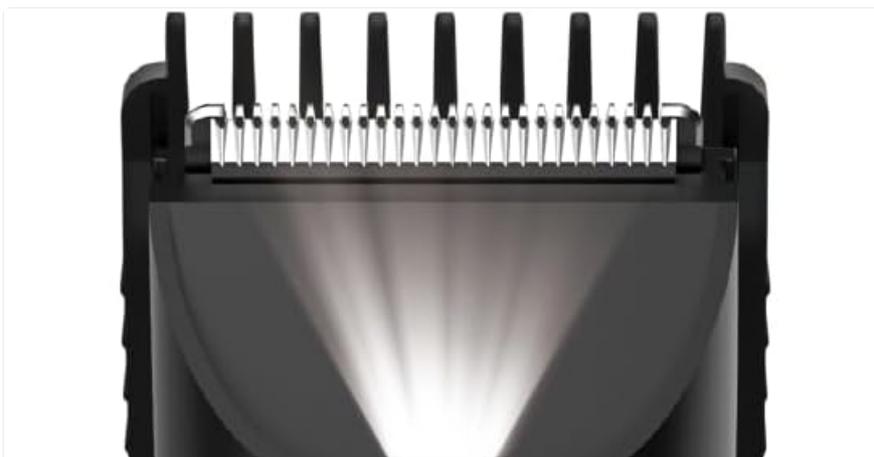




Image 1: Front view of the Spacekey Body Hair Trimmer TM-8007, showing the ceramic blade, power button, digital display indicating battery percentage and available time, and the charging base with the Spacekey logo.

Key Components:

- **Ceramic Blade:** Designed for precise and safe trimming.

- **Power Button:** Activates and deactivates the device.
- **Digital Display:** Shows battery level, available usage time, and potentially a travel lock indicator.
- **Charging Base:** Provides a stable stand and charges the trimmer.
- **Trimming Guards:** Various sizes for different hair lengths (typically included).
- **Charging Port:** For connecting the charging cable.

3. SETUP

1. **Initial Charge:** Before first use, fully charge the trimmer. Connect the charging cable to the trimmer's charging port or place it on the charging base. Plug the adapter into a power outlet. The digital display will indicate charging status. A full charge typically takes several hours. Refer to product packaging for specific charging time.
2. **Attach Trimming Guard:** Select the desired trimming guard based on your preferred hair length. Align the guard with the trimmer head and press firmly until it clicks into place. Ensure it is securely attached before use.
3. **Detaching Trimming Guard:** To remove, gently push the guard away from the trimmer head while holding the trimmer body.

4. OPERATING INSTRUCTIONS

1. **Turning On/Off:** Press and hold the power button for a few seconds to turn the trimmer on or off. A short press may activate/deactivate the travel lock. Refer to product details for specific button press durations.
2. **Checking Battery:** The digital display shows the current battery percentage and available usage time.
3. **Trimming:**
 - Ensure your skin is clean and dry before trimming.
 - Hold the trimmer at a slight angle against the skin.
 - Move the trimmer slowly and steadily against the direction of hair growth for best results.
 - For sensitive areas, use caution and consider using a longer guard setting initially.
4. **Travel Lock:** The digital display may show a lock icon. To activate/deactivate the travel lock, press and hold the power button for a specific duration. This prevents accidental activation during travel. Refer to product details for specific button press durations.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. **Power Off and Unplug:** Always ensure the trimmer is turned off and unplugged from any power source before cleaning.
2. **Remove Hair:** Detach the trimming guard. Use the provided cleaning brush to remove loose hairs from the blade and trimmer body.
3. **Rinse Blades:** The trimmer head is designed to be rinsed under running water. Do not submerge the entire trimmer unless explicitly stated as fully submersible in the product documentation.
4. **Dry Thoroughly:** Allow the blade head and trimmer to air dry completely before reattaching the guard or storing.
5. **Lubricate Blades (Optional):** Periodically apply a small drop of clipper oil (not included, but often recommended) to the blades to maintain smooth operation. Turn the trimmer on for a few seconds to distribute the oil.
6. **Storage:** Store the trimmer in a dry, cool place, away from direct sunlight and moisture.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery. Travel lock activated.	Charge the trimmer fully. Deactivate travel lock by pressing and holding the power button.
Poor trimming performance.	Blades are clogged with hair. Blades are dull. Insufficient charge.	Clean the blades thoroughly. Consider replacing the blade head (if available) or contacting support. Charge the trimmer.
Trimmer makes unusual noise.	Blades require lubrication. Foreign object lodged in blades.	Apply clipper oil to blades. Carefully inspect and remove any obstructions (ensure trimmer is off).

7. SPECIFICATIONS

Feature	Detail
Brand	Spacekey
Model Number	TM-8007
Power Source	Corded Electric
Batteries	1 AA batteries required (included)
Item Weight	11.46 Ounces
Color	Gray
Recommended Uses	Genital, Leg, Pubic, Under Arm
Package Dimensions	6.73 x 6.54 x 2.48 inches
Manufacturer	SPACEKEY

Note on Power Source: The product data lists both "Corded Electric" and "1 AA batteries required (included)". Typically, body trimmers are rechargeable (internal battery) and charged via a corded connection. The AA battery reference might be an error or refer to a specific internal component not user-replaceable. Please refer to the product packaging for definitive power source information.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Spacekey website. You may also contact Spacekey customer service directly through their official channels.

Online Support: [Visit the Spacekey Store on Amazon](#)


9. LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is a personal grooming appliance and should be used as intended.



© 2024 Spacekey. All rights reserved.

Related Documents - TM-8007

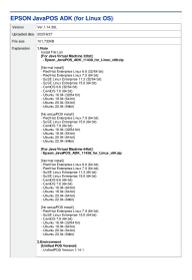	<p>Green Lion G-Blade Hair & Nose Trimmer/Shaver User Manual</p> <p>Comprehensive user manual for the Green Lion G-Blade Hair & Nose Trimmer/Shaver (Model No: GL-TM, SKU: GNGBLDTRIMGY). Includes device description, quick view, usage instructions, safety warnings, cleaning and maintenance, specifications, disposal guidelines, and warranty information.</p>
	<p>Epson DM-D500 Klantendisplay Installatiegids</p> <p>Deze installatiegids biedt gedetailleerde instructies voor het veilig en effectief installeren van de Epson DM-D500 klantendisplay, inclusief aansluiting op diverse Epson TM-printers en standalone configuraties. Bevat veiligheidsmaatregelen, benodigde onderdelen, assemblageprocedures, DIP-schakelaarinstellingen en specificaties.</p>
	<p>Epson JavaPOS ADK for Windows OS - Version 1.14.38W</p> <p>This document provides information about the Epson JavaPOS ADK (Application Development Kit) for Windows OS, version 1.14.38W. It details the installation process, supported operating systems, required components, and a list of supported Epson products.</p>
	<p>ePOS-Device XML User's Manual - Epson POS Peripheral Control Guide</p> <p>Discover the Epson ePOS-Device XML User's Manual, a comprehensive guide for developers on integrating Epson POS printers and peripherals. Learn about XML commands, system configurations, programming flows, and specifications for building advanced POS solutions with devices like the TM-DT Series, TM-H6000V, and more.</p>
	<p>EPSON JavaPOS ADK for Linux OS - Version 1.14.38L</p> <p>This document details the EPSON JavaPOS ADK for Linux OS, version 1.14.38L. It includes information on supported operating systems, development environments, and a comprehensive list of supported EPSON products.</p>

