

Seesii P6 Combo

SEESII 4-in-1 Pole Saw & Pruning Shears Combo Kit User Manual

Model: P6 Combo

[Overview](#)

[Safety](#)

[Components](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Specifications](#)

[Support](#)

1. PRODUCT OVERVIEW

The SEESII 4-in-1 Pole Saw & Pruning Shears Combo Kit offers a versatile solution for various pruning and trimming tasks. This battery-powered system combines a 6-inch mini chainsaw with an extendable pole and electric pruning shears, allowing for efficient and safe operation in diverse gardening and landscaping scenarios.

Key Features:

- **Ultimate 4-in-1 Pruning Solution:** Seamlessly transition between a 6-inch pole saw, precision electric pruning shears, handheld mini chainsaw, and handheld pruning shears.
- **Long-Lasting Power:** Equipped with high-capacity 21V 4000mAh batteries for extended operation and fast charging.
- **Extended Reach:** Adjustable pole extension allows safe trimming of branches up to 16 feet high from the ground.
- **Powerful Brushless Motor:** Features a 600W brushless motor for efficient cutting, reduced heat, and extended tool life.
- **Professional-Grade Cutting:** SK5 steel blades on pruning shears cut branches up to 1.2 inches thick.
- **Automatic Chain Lubrication:** Integrated oiler system ensures smooth chainsaw operation and prolongs chain life.

2. IMPORTANT SAFETY INFORMATION

Disclaimer: Please adhere to the following safety guidelines while using this product. The manufacturer is not liable for any personal injuries resulting from improper use of this product. Please ensure alertness

during use, proper operation, and safe storage to minimize any potential risks.

- Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and hearing protection.
- Ensure the work area is clear of bystanders, especially children and pets.
- Inspect the tool for any damage or loose parts before each use.
- Keep hands and feet away from the cutting chain and blades.
- Do not operate the tool in wet conditions or near flammable liquids or gases.
- Always use two hands when operating the pole saw for better control.
- Disconnect the battery before performing any maintenance, cleaning, or when changing accessories.
- Store the tool and batteries in a dry, secure place out of reach of children.

3. INCLUDED COMPONENTS

Your SEESII 4-in-1 Combo Kit comes with the following items:

- SEESII 6-Inch Chainsaw
- Telescopic Pole
- 2x 4000mAh Batteries
- Battery Charger
- Pruning Shear
- Scissor Blade
- 6-Inch Chain & Protective Cover for Guide Plate
- Safety Glasses
- Gloves
- Shoulder Strap
- Wrench
- Screwdriver
- Sharpening Stone
- Empty Oil Bottle
- User Manual

4-in-1 Yard Tool Combo

One Kit, All Yard Jobs Done!



- 1 × SEESII pruning shear
- 1 × SEESII 6-Inch mini chainsaw
- 1 × Telescopic pole
- 2 × 4000mAh batteries
- 1 × Protective cover for guide plate
- 1 × Charger
- 1 × Pair of gloves
- 1 × 6-Inch chain
- 1 × Shoulder Strap
- 1 × Empty oil bottle
- 1 × Sharpening stone
- 1 × User manual
- 1 × Screwdriver
- 1 × Safety glasses
- 1 × Wrench
- 1 × Scissor blade

Figure 1: All components included in the SEESII 4-in-1 Yard Tool Combo Kit.

4. SETUP

4.1 Battery Charging

Before first use, fully charge both 21V 4000mAh batteries using the provided charger. The charger typically indicates

charging status (e.g., red for charging, green for fully charged).

4.2 Mini Chainsaw Assembly & Chain Tension

The 6-inch mini chainsaw comes pre-assembled with a chain. Ensure the chain is properly tensioned. Use the provided wrench to adjust the chain tension knob if necessary. The chain should be snug but still able to move freely around the guide bar.



Tool-Free Design

Boost Productivity, Beginner-Friendly



Figure 2: The tool-free design allows for easy chain adjustment by turning the knob on the side of the chainsaw.

4.3 Attaching to Extension Pole

To convert the mini chainsaw or pruning shears into a pole tool, align the tool head with the extension pole connector and secure it firmly. Ensure all locking mechanisms are engaged before use.

Video 1: Demonstration of attaching the mini chainsaw to the extension pole for multi-functional use.

4.4 Adjusting Pole Length and Angle

The telescopic pole can be adjusted to various lengths for optimal reach. Use the quick-release latches to extend or retract the pole. The tool head can also be adjusted to different angles (0-180 degrees) by pressing the adjustment button, allowing for versatile cutting positions.



Figure 3: The adjustable extension pole allows for safe trimming of high branches, reaching up to 15-16 feet.

5. OPERATING INSTRUCTIONS

5.1 General Operation

To operate the tool, first ensure a charged battery is inserted. Press the safety button (usually located near the

trigger) and then squeeze the trigger to activate the cutting mechanism. Release the trigger to stop. Always maintain a firm grip and stable footing.



Tool-Free Design

Boost Productivity, Beginner-Friendly



Figure 4: The safety button must be pressed before the trigger can be engaged to prevent accidental startup.

5.2 Cutting with Mini Chainsaw (Handheld)

For smaller branches and logs, attach the battery directly to the mini chainsaw. Hold the tool firmly with both hands. Position the chain against the branch and engage the trigger. Allow the saw to do the work; do not force it.



4-in-1 Power Tool Combo



Figure 5: The handheld mini chainsaw is ideal for cutting smaller logs and branches with ease.

5.3 Cutting with Pole Saw

For high branches, attach the mini chainsaw to the telescopic pole. Adjust the pole length and cutting angle as needed. Use the shoulder strap for added support and balance. Position the saw against the branch, ensuring a clear path for falling debris, and engage the trigger.

Video 2: Demonstration of using the electric pole saw to trim high branches.

5.4 Operating Electric Pruning Shears

Attach the battery to the pruning shears for handheld use, or connect them to the telescopic pole for extended reach. The shears feature adjustable cutting diameters (0.6, 0.8, 1.2 inches) to suit various branch thicknesses. Press the safety button and squeeze the trigger to make clean, precise cuts.



Versatile Cutting Sizes



Figure 6: The electric pruning shears offer three adjustable cutting diameters for various tasks.

Video 3: Detailed demonstration of the three cutting size modes for the electric pruning shears.

6. MAINTENANCE

6.1 Chain Lubrication

The 6-inch pole saw includes a precision oiler. Regularly fill the oil reservoir with appropriate chain lubricant (not included) to ensure smooth operation and extend chain life. Give the oiler a few pumps during use to lubricate the chain.

6.2 Chain Sharpening and Replacement

Keep the chainsaw chain sharp for optimal performance. Use the provided sharpening stone to maintain the chain's edge. If the chain becomes dull or damaged beyond sharpening, replace it with the extra chain provided or a compatible replacement.

6.3 Cleaning and Storage

After each use, clean the tool to remove sawdust, sap, and debris. Ensure the battery is removed before cleaning. Store the tool in its protective case in a dry, cool place, away from direct sunlight and moisture. Ensure the protective cover is on the chainsaw guide plate.

Video 4: Instructions on how to properly store the product after use.

7. TROUBLESHOOTING

If you encounter issues with your SEESII 4-in-1 Pole Saw & Pruning Shears Combo Kit, please refer to the following common troubleshooting tips:

- **Tool not starting:** Ensure the battery is fully charged and properly inserted. Check that the safety button is pressed before engaging the trigger.
- **Poor cutting performance:** Inspect the chain/blades for sharpness and damage. Sharpen or replace as needed. Ensure the chainsaw chain is properly tensioned and lubricated.
- **Overheating:** Avoid continuous heavy use. Allow the tool to cool down between tasks. Ensure proper chain lubrication for the chainsaw.
- **Unusual noise or vibration:** Stop operation immediately. Check for loose parts, damaged components, or improper assembly. Refer to the user manual for detailed inspection steps.

For persistent issues, please contact SEESII customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Seesii
Model Number	P6 Combo

Feature	Detail
Power Source	Battery Powered (21V)
Horsepower	600 Watts
Product Dimensions (L x W x H)	125L x 20W x 13H Centimetres
Chainsaw Chain Length	6 Inches
Chainsaw Chain Speed	26.2 ft/s
Battery Capacity	2x 4000mAh
Pruning Shear Max Cut Diameter	1.2 Inches (33mm)
Max Pole Reach	Up to 16 Feet
Included Components	6-Inch Chainsaw, Telescopic Pole, 2x 4000mAh Batteries & Charger, Pruning Shear, Scissor Blade, 6-Inch Chain & Protective Cover, Safety Glasses, Gloves & Shoulder Strap, Wrench, Screwdriver, Sharpening Stone & Empty Oil Bottle, User Manual

9. WARRANTY & CUSTOMER SUPPORT

For any product inquiries, technical assistance, or warranty claims, please contact SEESII customer support directly.

Manufacturer Contact Information: support@seesiius.com

Please retain your proof of purchase for any warranty-related services.