

Hibriway K1

Hibriway K1 Portable Karaoke Machine User Manual

Model: K1

1. INTRODUCTION

The Hibriway K1 Portable Karaoke Machine is designed to deliver a high-quality audio experience with its 50W speaker and two wireless microphones. Featuring Bluetooth 5.0 connectivity, versatile input options (TF card, USB, AUX), and dynamic RGB lighting, this device is suitable for various indoor and outdoor entertainment settings. Its portable design with an integrated handle and long-lasting battery ensures convenience and extended use.



2. PACKAGE CONTENTS

- Hibriway K1 Portable Karaoke Machine (1 unit)
- Wireless Microphones (2 units)
- USB Type-C Charging Cable (1 unit)
- User Manual (this document)

3. SETUP

3.1 Charging the Karaoke Machine

1. Connect the provided USB Type-C charging cable to the charging port on the karaoke machine.
2. Connect the other end of the cable to a compatible USB power adapter (not included).
3. The charging indicator will illuminate. A full charge typically takes 2-4 hours.
4. The integrated 8000mAh battery provides approximately 6-8 hours of continuous playback on a full charge.

3.2 Charging the Wireless Microphones

1. Each microphone has a built-in 1200mAh rechargeable battery.
2. Connect the microphones to a USB power source using their respective charging ports.
3. Charging indicators on the microphones will show charging status.
4. Fully charged microphones provide up to 10 hours of working time.

High Capacity & Long Playing time

Enjoy your music anytime, anywhere

Rechargeable Battery **8000** mAh



Image 2: Dimensions and battery specifications for the Hibriway K1 Karaoke Machine and microphones.

3.3 Powering On/Off

- To power on the karaoke machine, press and hold the power button until the indicator lights illuminate.
- To power off, press and hold the power button again.
- For microphones, locate the power button (often labeled O/M) and press to turn on or off.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Connection

1. Ensure the karaoke machine is powered on and in Bluetooth pairing mode (indicated by a flashing Bluetooth light).
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "Hibriway K1" (or similar name) from the list to pair.
4. Once connected, the Bluetooth indicator light will become solid, and you can play audio through the speaker.

4.2 Other Connection Methods

The Hibriway K1 supports multiple audio input options:

- **TF Card:** Insert a Micro TF card into the designated slot. The machine will automatically switch to TF card mode and begin playing audio files.
- **USB Flash Drive:** Insert a USB flash drive into the USB port. The machine will switch to USB mode and play audio files.
- **AUX Input:** Connect an external audio device using a 3.5mm AUX cable (not included) to the AUX port. The machine will switch to AUX mode.

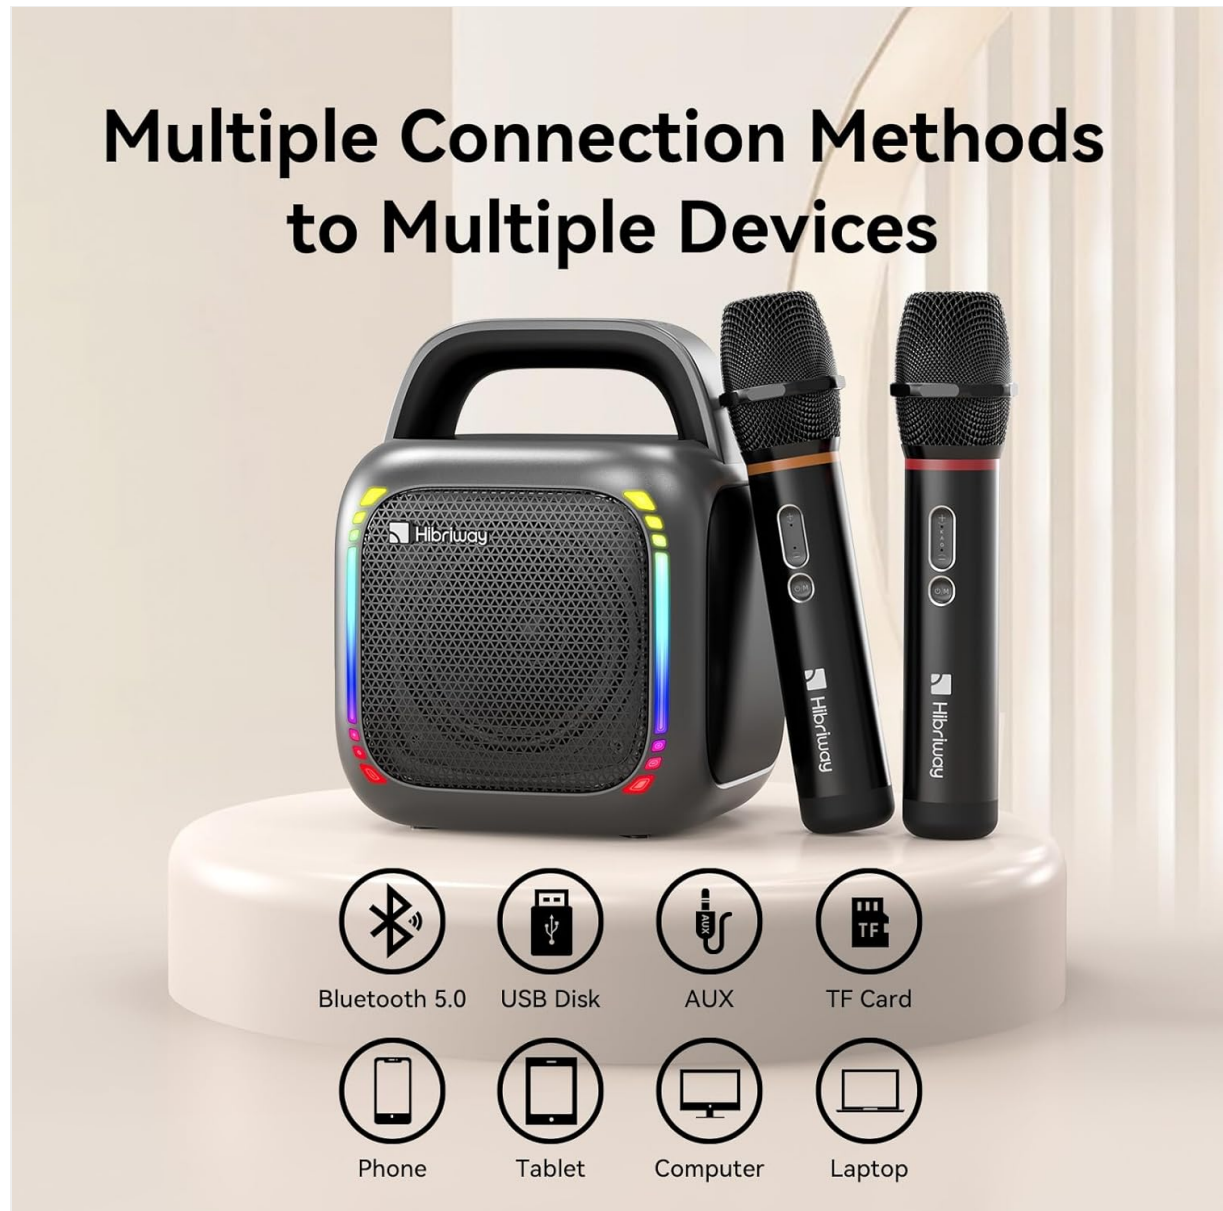


Image 3: Multiple connection methods supported by the Hibriway K1 Karaoke Machine.

4.3 True Wireless Stereo (TWS) Pairing

To achieve an immersive stereo sound experience, you can pair two Hibriway K1 karaoke machines together:

1. Ensure both Hibriway K1 machines are powered on and not connected to any other Bluetooth device.
2. On one machine (this will be the primary unit), press and hold the TWS pairing button (refer to device controls for exact button).
3. The primary unit will search for the secondary unit. Once connected, you will hear an audible confirmation.
4. Now, connect your audio source via Bluetooth to the primary unit. Audio will play simultaneously

through both speakers, creating a stereo effect.

True Wireless Stereo Pairing

Double the sound to create an immersive atmosphere



Image 4: True Wireless Stereo (TWS) pairing for enhanced sound.

4.4 Using the Wireless Microphones

2 High Performance Wireless Microphones



Image 5: Hibriway wireless microphones with mode indicators.

- Power on both microphones. They should automatically pair with the karaoke machine.
- **Volume Control:** Use the '+' and '-' buttons on the microphone to adjust microphone volume.
- **Echo/Reverb:** The 'M' button on the microphone can be used to cycle through or adjust echo/reverb effects. Pressing it may turn the echo on or off.
- **KTV Mode:** This mode is optimized for vocal performance with effects suitable for karaoke.
- **Outdoor Mode:** This mode may offer clearer vocal projection for open-air environments.

4.5 RGB Lighting Effects

The karaoke machine features dynamic RGB lighting with multiple modes:

- Locate the light effect button (often indicated by a sun or lightbulb icon) on the machine.
- Press the button to cycle through the 4 available RGB lighting modes:
 - a. Full-Color Rhythm
 - b. Beat-Synced Lights
 - c. Single-Color Transformation
 - d. Single-Color Breathing Light
- Choose the lighting effect that best suits your environment or mood.

Multiple Dynamic Light Effects

Click the  to switch different lighting effects



Image 6: Dynamic RGB lighting effects of the Hibriway K1 Karaoke Machine.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the karaoke machine and microphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge the unit regularly, even if not in use for extended periods.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

6. TROUBLESHOOTING

- **No Power:**
 - Ensure the device is fully charged.
 - Check the charging cable and adapter for damage.

- **No Sound:**

- Verify the volume on both the karaoke machine and your connected device is turned up.
- Ensure the correct input mode (Bluetooth, TF, USB, AUX) is selected.
- If using microphones, ensure they are powered on and paired.

- **Microphone Not Working:**

- Check if the microphone is charged and powered on.
- Ensure the microphone is within range of the karaoke machine.
- Re-pair the microphone if necessary (power off and on both devices).

- **Bluetooth Disconnection:**

- Ensure your device is within the Bluetooth range (typically 10 meters).
- Avoid obstacles that may interfere with the signal.
- Disconnect and re-pair the Bluetooth connection.

- **Echo Effect Issues:**

- If echo is too strong or absent, press the 'M' button on the microphone to adjust or toggle the effect.

7. SPECIFICATIONS

Model Number	K1
Brand	Hibriway
Speaker Output Power	50W
Audio Input	Bluetooth 5.0, TF Card, USB, AUX
Connectivity Technology	Bluetooth, TF Card, USB
Main Unit Battery	8000mAh Lithium-ion (Rechargeable)
Main Unit Playback Time	6-8 hours (approx.)
Microphone Battery	1200mAh (Rechargeable)
Microphone Working Time	Up to 10 hours
Dimensions (L x W x H)	15 x 15 x 20 cm
Weight	1.8 kg (approx. 3.96 lbs)
Material	Plastic
Color	Gunmetal Grey
Special Features	Stereo Pairing (TWS), Lightweight, Integrated Handle, Portable, RGB Lights
Compatible Devices	Computer, Smartphone, Tablet

Power Source	Battery Powered
Connector Type	USB Type-C
Number of Channels	2

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Hibriway customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.