

[manuals.plus](#) /

› [Panda Plus](#) /

› [Panda Plus Portable Electric 2-Burner Cooktop 220V Black 2000W User Manual](#)

## Panda Plus AMG2-220BLK

# Panda Plus Portable Electric 2-Burner Cooktop 220V Black 2000W User Manual

Model: AMG2-220BLK | Brand: Panda Plus

## 1. INTRODUCTION

---

Thank you for choosing the Panda Plus Portable Electric 2-Burner Cooktop. This compact, efficient, and versatile appliance is designed to provide convenient cooking solutions for various settings, including small kitchens, apartments, gourmet areas, travel, and camping. This manual provides essential information for safe and effective use, maintenance, and troubleshooting of your cooktop.

**Ideal** para camping



**Necessário ponto de energia**

The Panda Plus cooktop is ideal for various settings, including camping, offering portability and convenience.

# Controle individual de *temperaturas.*



Key advantages of the Panda Plus Electric Cooktop include enhanced safety, precise temperature control, and portability.

## 2. SAFETY INSTRUCTIONS

**WARNING: Read all safety warnings and instructions before using this appliance. Failure to follow the warnings and instructions may result in electric shock, fire, or serious injury.**

- Ensure the cooktop is connected to a 220V power outlet. Do not use with incompatible voltages.
- Place the cooktop on a stable, flat, and heat-resistant surface. Ensure adequate ventilation around the unit.
- Do not touch hot surfaces. Use handles or knobs. Allow the unit to cool completely before cleaning or storing.
- Do not immerse the cooktop, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- This cooktop features overheating protection, which automatically shuts off the unit if it gets too hot.

### 3. PRODUCT OVERVIEW

---

The Panda Plus Portable Electric Cooktop features two independent heating elements, each with its own temperature control knob and indicator light. Its compact design and durable construction make it a reliable cooking companion.



The Panda Plus 2-Burner Electric Cooktop offers a sleek design and efficient heating.

#### Components:

- **Heating Elements:** Two cast iron plates for rapid and uniform heating.
- **Temperature Control Knobs:** Individual knobs for each burner, allowing precise temperature adjustment across 5 levels.
- **Indicator Lights:** Illuminates when the burner is active, providing a visual safety cue.
- **Durable Casing:** Made with high-quality materials for longevity and easy cleaning.

**Alta potência para um  
aquecimento *rápido e uniforme***



**elegância e durabilidade**

**2000W 220V**

The cooktop is compatible with various types of cookware, including aluminum, stainless steel, ceramic, non-stick, iron, and glass.

## 4. SETUP

---

1. **Unpack:** Carefully remove the cooktop from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the cooktop on a dry, stable, non-combustible, and heat-resistant surface. Ensure there is sufficient space around the unit for proper ventilation (at least 10-15 cm from walls or other appliances).
3. **Power Connection:** Ensure your electrical outlet is 220V and compatible with the cooktop's plug. Insert the power plug firmly into the wall outlet.
4. **Initial Use:** During the first use, a small amount of smoke or odor may be emitted as the protective coating on the heating elements burns off. This is normal and will dissipate quickly. Operate the cooktop at maximum setting for about 5-10 minutes during the first use to complete this process.

## 5. OPERATING INSTRUCTIONS

---

Operating your Panda Plus cooktop is straightforward. Follow these steps for efficient cooking:

1. **Place Cookware:** Position your desired pot or pan centrally on the heating element. Ensure the cookware has a flat bottom for optimal heat transfer.
2. **Select Burner:** Turn the corresponding temperature control knob (located at the front of each burner) clockwise from the "OFF" position to your desired heat setting (1 to 5).
3. **Indicator Light:** The red indicator light for that burner will illuminate, indicating that the heating element is active. The light will cycle on and off as the cooktop maintains the selected temperature.
4. **Temperature Control:** Adjust the knob to increase or decrease the heat. Setting 1 is the lowest heat, and Setting 5 is the highest.
5. **Cooking:** Allow the burner to preheat for a few minutes before placing food in the pan for best results.
6. **Turn Off:** After cooking, turn the temperature control knob counter-clockwise back to the "OFF" position. The indicator light will turn off.
7. **Cool Down:** Allow the cooktop to cool completely before touching or cleaning. The heating elements will remain hot for some time after being turned off.



Each burner has an individual temperature control knob for precise heat adjustment.

**Demonstration Video:**

This video demonstrates the basic operation of the Panda Plus Electric Cooktop, including turning it on and boiling water.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your cooktop.

- **Always unplug the cooktop** from the power outlet and allow it to cool completely before cleaning.
- **Wipe Surfaces:** Use a soft, damp cloth with a mild detergent to clean the exterior surfaces and heating elements.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
- **Do Not Immerse:** Never immerse the cooktop in water or any other liquid.
- **Stubborn Stains:** For stubborn stains on the heating elements, a non-abrasive cleaner specifically designed for cooktops can be used, followed by wiping with a damp cloth.
- **Storage:** When not in use, store the cooktop in a dry place, away from moisture and direct sunlight.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Panda Plus cooktop, refer to the following common problems and solutions:

| Problem                                       | Possible Cause  | Solution  |
|---|---|---|
| Cooktop does not turn on / No indicator light | Not plugged in; Power outlet malfunction; Damaged power cord.                           | Ensure the plug is securely inserted into a working 220V outlet. Check the circuit breaker. Inspect the power cord for damage. If damaged, contact support.     |
| Burner is not heating sufficiently            | Incorrect temperature setting; Cookware not suitable; Overheating protection activated. | Increase the temperature setting. Ensure you are using flat-bottomed, compatible cookware. Allow the unit to cool down if overheating protection was triggered. |
| Smoke or odor during first use                | Protective coating burning off.   | This is normal. Operate at maximum setting for 5-10 minutes in a well-ventilated area until it dissipates.  |
| Cooktop automatically shuts off               | Overheating protection activated.   | Unplug the unit and allow it to cool down completely. Ensure proper ventilation and that the vents are not blocked.   |

## 8. SPECIFICATIONS

---

Detailed technical specifications for the Panda Plus Portable Electric 2-Burner Cooktop (Model AMG2-220BLK):

# Principais vantagens

Segurança maior  
do que gás

Controle de  
temperatura  
mais preciso

Ocupam  
pouco espaço

Fáceis de  
transportar

Funciona em  
qualquer tomada  
compatível

Prático na  
manutenção  
diária

Compact dimensions make the cooktop suitable for small spaces.

| Feature                | Detail   |
|------------------------|--|
| Model                  | AMG2-220BLK  |
| Brand                  | Panda Plus   |
| Voltage                | 220 Volts (Not Bivolt)                                     |
| Total Power            | 2000 Watts (1000W per burner)                              |
| Heating Elements       | 2 (Coil type, Cast Iron)                                   |
| Temperature Control    | Individual knobs, 5 levels                                 |
| Dimensions (L x W x H) | 43 cm x 25 cm x 5 cm (approximately 16.9 x 9.8 x 2 inches) |
| Weight                 | 2.2 kg (approximately 4.85 lbs)                            |
| Material               | Cast Iron (heating elements), Steel (casing)               |

| Feature          | Detail   |
|------------------|--|
| Color            | Black  |
| Special Features | Compact, Portable, Temperature Control, Overheating Protection |
| Certification    | INMETRO: 0174  |

## 9. WARRANTY AND SUPPORT

---

This Panda Plus cooktop comes with a factory warranty. For specific warranty terms, duration, and to register your product, please refer to the warranty card included in your product packaging or contact the manufacturer directly.

If you require technical assistance, have questions about your product, or need to claim warranty service, please contact Panda Plus customer support through their official channels. Keep your purchase receipt as proof of purchase.