

[manuals.plus](#) /

› [Cherry](#) /

› [Cherry MW 2200 Compact Laptop Mouse User Manual](#)

Cherry MW 2200

Cherry MW 2200 Compact Laptop Mouse User Manual

Model: MW 2200

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Cherry MW 2200 Compact Laptop Mouse. Please read this manual carefully to ensure proper use and to maximize the lifespan of your device.





Image: Top view of the Cherry MW 2200 Compact Laptop Mouse in white. This image highlights the sleek design, the central scroll wheel, and the Cherry brand logo.

SETUP INSTRUCTIONS

1. Battery Installation

1. Locate the battery compartment on the underside of the mouse.
2. Press the small button on the bottom of the mouse to release the top cover.
3. Insert one AA battery into the compartment, ensuring correct polarity (+/-). An AA battery is included with your purchase.
4. Replace the top cover, ensuring it clicks securely into place.

2. Connecting the Nano USB Receiver

1. The Nano USB receiver is stored inside the mouse, next to the battery compartment. Carefully remove it.
2. Plug the Nano USB receiver into an available USB port on your computer or laptop.
3. The mouse is designed for plug-and-play functionality and should be recognized automatically by your operating system. No additional drivers are typically required.

WIRELESS 2.4 GHz RF TECHNOLOGY:

Plug and Play with nano USB receiver (range up to 10 m)



USB dongle can be easily stowed away in the mouse when not in use

Image: The internal compartment of the Cherry MW 2200 mouse, revealing the AA battery slot and the dedicated storage for the Nano USB dongle. This design ensures the dongle is secure when not in use.

OPERATING INSTRUCTIONS

Basic Functions

- **Left Button:** Primary click function, typically used for selecting items or opening links.
- **Right Button:** Secondary click function, typically used for context menus or special actions.
- **Scroll Wheel:** Used for vertical scrolling through documents and web pages. The scroll wheel is chrome-plated with a non-slip rubber coating for precise control.

Wireless Connectivity

The Cherry MW 2200 utilizes reliable 2.4 GHz wireless technology, providing a stable connection with a range of up to 10 meters (approximately 33 feet). Ensure the Nano USB receiver is within this range for optimal performance.

COMPACT NOTEBOOK MOUSE:

Easy to transport and can be used almost anywhere



Image: The Cherry MW 2200 mouse positioned beside a laptop, illustrating its compact dimensions (100mm x 60mm x 38mm) and light weight (78g), making it ideal for portability.

Ergonomics and Design

The mouse features a symmetrical design, making it comfortable for both right-handed and left-handed users. Its compact and ergonomic shape is designed for extended use without discomfort, especially beneficial for laptop users on the go.

SYMMETRICAL SHAPE:

Ideal for right- and left-handers



Image: A visual representation of the mouse's symmetrical design, showing how it comfortably accommodates both right-handed and left-handed users for versatile operation.

Optical Sensor and Energy Saving

Equipped with an optical sensor, the mouse provides precise navigation with a resolution of 1300 DPI. It also features an automatic energy-saving mode to conserve battery life, allowing for up to 12 months of operation on a single AA battery.

PRACTICAL AND DURABLE:

Your reliable companion

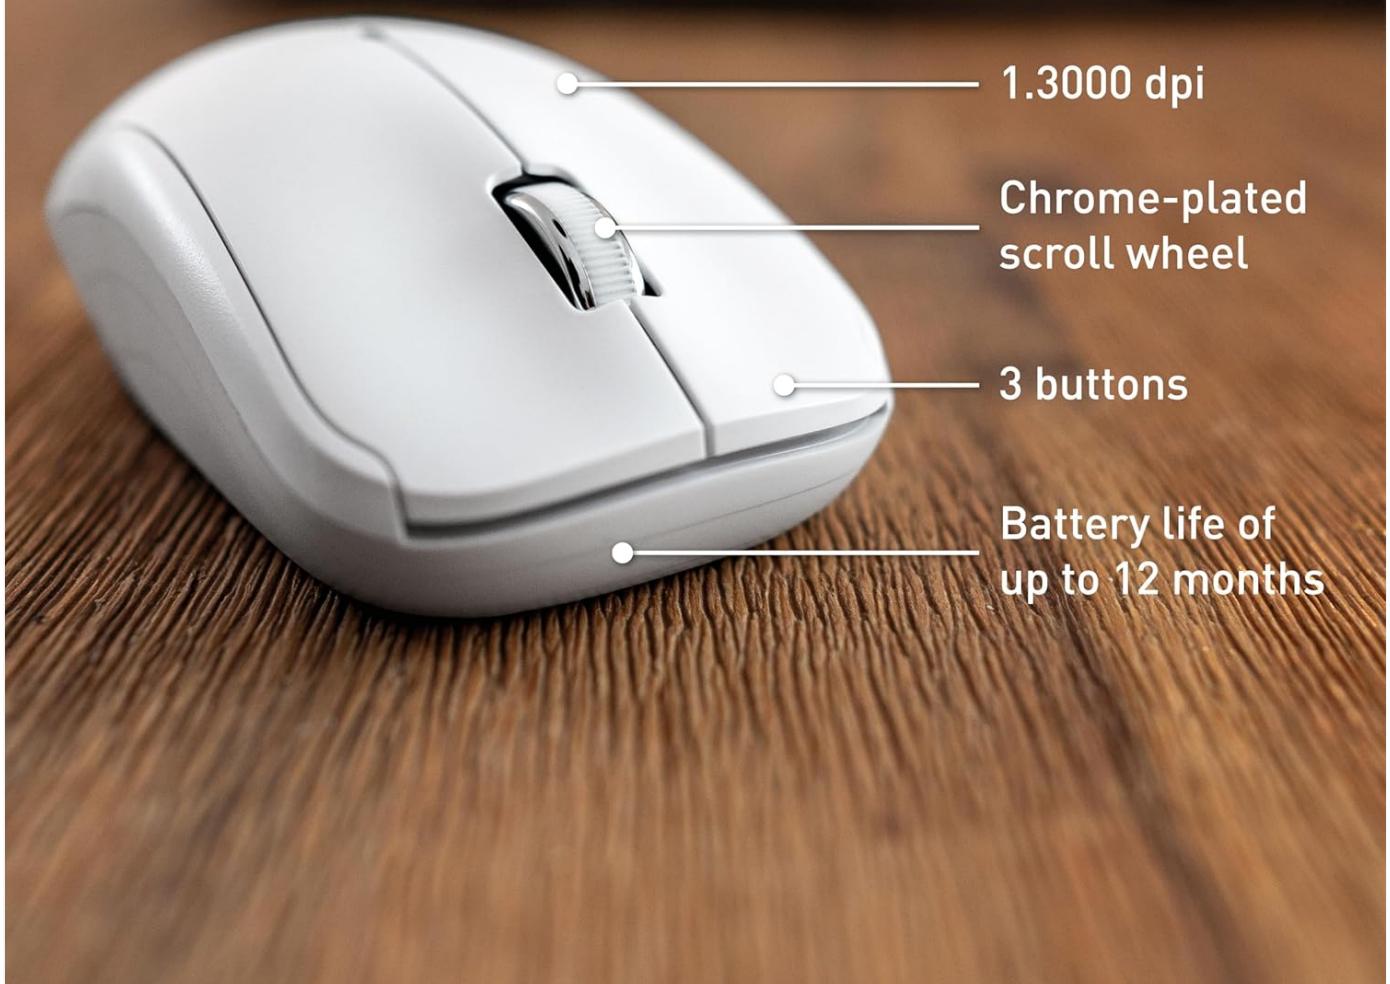


Image: A detailed diagram pointing out the key features of the Cherry MW 2200 mouse, including its 1300 DPI resolution, chrome-plated scroll wheel, three buttons, and impressive 12-month battery life.

MAINTENANCE

Battery Replacement

When the mouse's performance diminishes or it stops responding, it may be time to replace the AA battery. Follow the battery installation steps outlined in the "Setup Instructions" section.

Cleaning

To clean your mouse, gently wipe its surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the finish. Ensure no liquid enters the internal components.

Storage and Transport

For safe storage and transport, especially when traveling, always stow the Nano USB receiver inside its dedicated compartment within the mouse. The included carrying pouch provides additional protection against scratches and impacts.

INCLUDES TRANSPORT BAG:

For easy, secure transport



Image: The Cherry MW 2200 mouse, shown in both black and white variants, each nestled within its respective carrying pouch. This illustrates the convenient and protective storage solution provided for transport.

TROUBLESHOOTING

- **Mouse not responding:**

- Ensure the AA battery is correctly installed and not depleted. Replace if necessary.
- Verify the Nano USB receiver is securely plugged into a functioning USB port on your computer.
- Try plugging the receiver into a different USB port.
- Ensure the mouse is within the 10-meter operating range of the receiver.
- If the mouse has been idle, it may enter an energy-saving sleep mode. Moving the mouse or clicking a button should wake it up.

- **Erratic cursor movement:**

- Ensure the optical sensor on the underside of the mouse is clean and free from obstructions.
- Try using the mouse on a different surface. Highly reflective or uneven surfaces can sometimes affect optical sensor performance.

- **Connection drops frequently:**
 - Minimize interference from other wireless devices operating on the 2.4 GHz frequency.
 - Ensure there are no large metal objects or other obstructions between the mouse and the receiver.

SPECIFICATIONS

Brand	Cherry
Model Number	JW-T2200-0
Product Dimensions	3.94 x 2.36 x 0.04 inches (100 x 60 x 38 mm)
Item Weight	2.75 ounces (78g)
Batteries	1 AA battery (included)
Connectivity Technology	2.4 GHz Wireless (USB Nano Receiver)
Movement Detection Technology	Optical
DPI Resolution	1300 DPI
Special Feature	Compact Laptop Mouse, Automatic Energy-Saving Mode, Symmetrical Design
Wireless Range	Up to 10 meters (33 feet)

WARRANTY AND SUPPORT


For warranty information and technical support, please refer to the official Cherry website or contact their customer service department. Details can typically be found on the product packaging or on the manufacturer's support pages.

You can visit the [Cherry Store on Amazon](#) for more product information.

© 2024 Cherry. All rights reserved.

Related Documents - MW 2200

	<p><u>CHERRY MW 8 ADVANCED Wireless Mouse: User Manual and Guide</u></p> <p>Comprehensive user manual for the CHERRY MW 8 ADVANCED wireless mouse, covering setup, Bluetooth and RF connectivity, DPI settings, charging, troubleshooting, and technical specifications.</p>
---	--

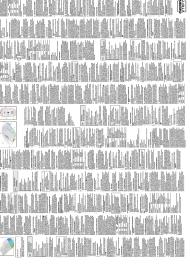	<p><u>Cherry M50 Wireless Gaming Mouse User Manual and Specifications</u></p> <p>Official user manual for the Cherry M50 Wireless Gaming Mouse (JW-5000). Includes setup guide, features, technical specifications, safety information, and troubleshooting tips.</p>
	<p><u>CHERRY XTRFY M50 Wireless Mouse User Manual and Specifications</u></p> <p>Comprehensive user manual for the CHERRY XTRFY M50 wireless mouse, covering setup, features, technical specifications, safety guidelines, and troubleshooting. Includes information on wireless connectivity, DPI settings, and RGB illumination.</p>
	<p><u>CHERRY MW 8C ERGO Wireless Mouse User Manual and Guide</u></p> <p>Comprehensive user guide for the CHERRY MW 8C ERGO wireless mouse, covering setup, connection (Bluetooth, RF), operation, DPI settings, charging, cleaning, troubleshooting, technical specifications, and compliance information.</p>
	<p><u>CHERRY STREAM MOUSE ULTIMATE User Manual</u></p> <p>Comprehensive user guide for the CHERRY STREAM MOUSE ULTIMATE wireless mouse, covering setup, features, troubleshooting, and technical specifications.</p>
	<p><u>CHERRY MW 4500 Wireless Ergonomic Mouse User Manual</u></p> <p>User manual for the CHERRY MW 4500 wireless ergonomic mouse, providing instructions on setup, usage, cleaning, and troubleshooting. Includes technical specifications and compliance information.</p>