

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Walker's](#) /

> [Walker's Disrupter Bluetooth Earbuds User Manual](#)

Walker's Disrupter

Walker's Disrupter Bluetooth Earbuds User Manual

Model: Disrupter

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Walker's Disrupter Bluetooth Earbuds. Please read this manual thoroughly before using your earbuds to ensure proper function and to maximize your experience with this hearing protection and enhancement device.

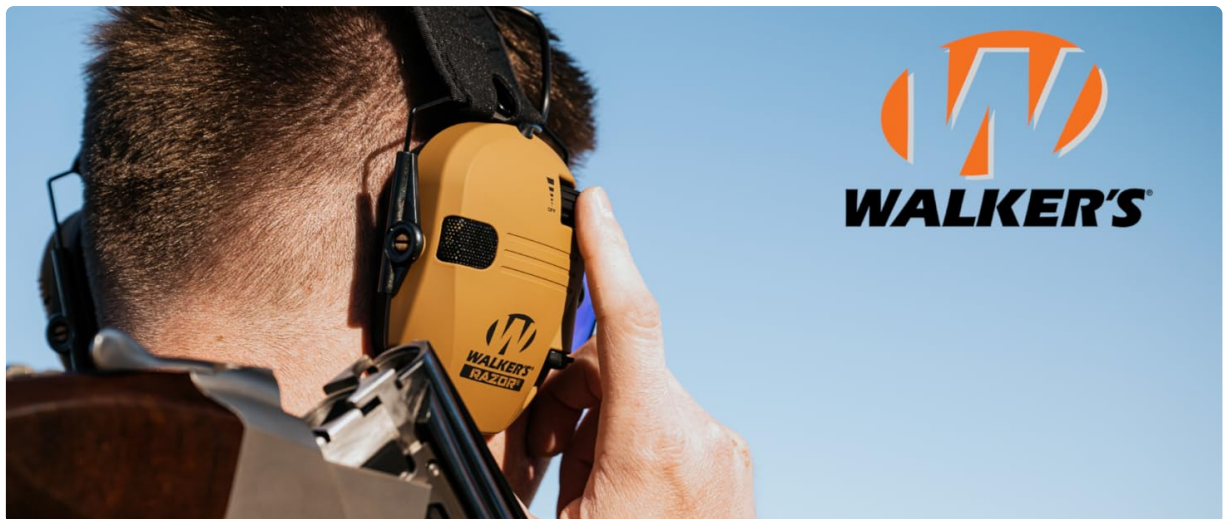


Image: Walker's Disrupter Bluetooth Earbuds in their charging case, showcasing the product design.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Walker's Disrupter Bluetooth Earbuds (Left and Right)
- USB Charging Case with Integrated Lithium Battery
- USB Charging Cable
- 3 Sizes of Foam Ear Tips (Small, Medium, Large)
- 3 Sizes of Silicone Ear Tips (Small, Medium, Large)



Image: All components included in the Walker's Disrupter Earbuds package: the earbuds, charging case, USB cable, and multiple sizes of foam and silicone ear tips.

SETUP

1. Charging the Earbuds and Case

1. Place both earbuds into the charging case. Ensure they are seated correctly.
2. Connect the USB charging cable to the charging case and a compatible USB power source.
3. The indicator lights on the case and earbuds will show charging status. A full charge typically takes approximately 2 hours.
4. Ensure the earbuds light up when removed from the case to confirm they are powered on.

Important: To prevent battery drain, ensure earbuds are properly disconnected and powered off when placed in the charging case. Wait for the earbuds to light up before removing them from the case to ensure they power on correctly.

2. Selecting and Installing Ear Tips

The Disrupter Earbuds come with two types of ear tips for different uses:

- **Foam Tips:** Designed for maximum hearing protection, ideal for shooting ranges or loud environments.
- **Silicone Tips:** Suitable for everyday use, providing comfort and a secure fit.

Choose the size that provides a snug and comfortable fit to ensure optimal sound quality and noise reduction. Improper fit can compromise performance.

Caution: When changing foam tips, be careful not to accidentally rip out the small plastic tubes inside them.

3. Bluetooth Pairing

1. Ensure the earbuds are charged and removed from the charging case. They should automatically enter pairing mode.
2. On your mobile device, navigate to the Bluetooth settings.
3. Select "Walker's Disrupter" from the list of available devices.

4. Once connected, you will hear an audio confirmation.

Note: If only one earbud connects, try placing both back in the case, closing it, then reopening and removing them simultaneously to re-establish the connection.

OPERATING INSTRUCTIONS

Walker's Link 4.0 App

The Walker's Disrupter Earbuds are fully supported by the Walker's Link 4.0 app, available for mobile devices and smartwatches. The app allows for advanced control and customization:

- Select between 5 sound settings.
- Adjust ambient volume levels.
- Monitor battery levels for each earbud.
- Update the auto shut-off time.
- Access Firmware Over The Air (FOTA) updates.

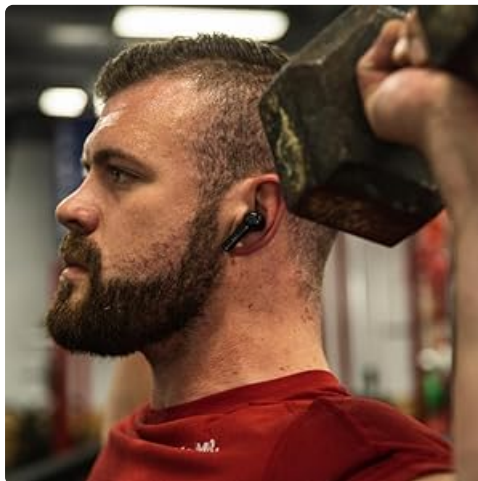


Image: The Walker's Link 4.0 app interface on a smartphone, showing controls for ambient volume and sound settings.

Sound Management Features

- **Hearing Protection:** Active Noise Cancellation (ANC) technology reduces unwanted background noise. Rapid Impulse Cancellation swiftly neutralizes harmful noise levels, protecting your hearing from sudden loud sounds.
- **Sound Enhancement:** The earbuds enhance environmental sounds, allowing you to remain aware of your surroundings.
- **Forward Focus Mode:** Prioritizes sounds directly in front of you, useful for directional awareness.
- **360° Directional Sound:** Helps identify the origin of sounds around you.
- **Five Programmed Ambient Sound Settings:** Choose the best listening mode for your activity and environment, including Universal, Clear Voice, Hi-Frequency Boost, Power Boost, and Custom settings.



Image: A person wearing Walker's Disrupter earbuds while engaged in shooting, highlighting their application for hearing protection.

Image: A person wearing Walker's Disrupter earbuds during a workout, illustrating their suitability for active lifestyles.

MAINTENANCE

Cleaning

To maintain optimal performance and hygiene, regularly clean your earbuds and ear tips.

- **Earbuds:** Gently wipe the earbuds with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Ear Tips:** Remove ear tips from the earbuds. The manufacturer recommends hand washing the ear tips. Ensure they are completely dry before reattaching them to the earbuds.

Caution: Do not submerge the earbuds or charging case in water. Ensure ear tips are fully dry before reattaching.

Battery Care

The integrated lithium battery in the charging case and earbuds provides:

- Approximately 6 hours of battery life with Bluetooth streaming.
- Approximately 11 hours of battery life in ambient-only mode.

For best battery longevity, avoid fully discharging the earbuds frequently and store them in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Earbuds not charging or only one earbud charging.	<ul style="list-style-type: none"> • Improper seating in the charging case. • Charging case battery is low. • Charging contacts are dirty. • Earbuds not fully powered off in case. 	<ul style="list-style-type: none"> • Ensure earbuds are firmly seated in their respective slots in the case. • Charge the charging case using the provided USB cable. • Clean the charging contacts on both earbuds and the case with a dry cotton swab. • Ensure earbuds are powered off (lights off) when placed in the case.
Earbuds not connecting via Bluetooth or only one earbud connects.	<ul style="list-style-type: none"> • Earbuds not in pairing mode. • Bluetooth interference. • Previous pairing issues. 	<ul style="list-style-type: none"> • Place both earbuds back in the charging case, close the lid for 5 seconds, then reopen and remove them simultaneously. • Ensure your mobile device's Bluetooth is enabled and "Walker's Disrupter" is selected. • Forget/unpair "Walker's Disrupter" from your device's Bluetooth settings and attempt to pair again. • Ensure earbuds light up when removed from the case to confirm they are powered on.
Poor sound quality or static in ambient mode.	<ul style="list-style-type: none"> • Improper ear tip fit. • Environmental interference. • Earbud malfunction. 	<ul style="list-style-type: none"> • Ensure ear tips are correctly sized and sealed in your ear canal. Try different sizes or types (foam/silicone). • Adjust ambient sound settings via the Walker's Link 4.0 app. • If the issue persists, contact customer support.
Earbuds disconnect frequently.	<ul style="list-style-type: none"> • Low battery. • Distance from paired device. • Bluetooth interference. 	<ul style="list-style-type: none"> • Ensure earbuds are fully charged. • Keep your paired device within the recommended Bluetooth range. • Avoid environments with strong wireless interference.

SPECIFICATIONS

- **Model:** Disrupter
- **Noise Reduction Rating (NRR):** 24dB (*Inferred from product image*)
- **Microphones:** 4 Hi-Gain Omnidirectional Microphones (*Inferred from product image*)
- **Connectivity:** Bluetooth
- **Battery Life (Bluetooth Streaming):** Approximately 6 hours
- **Battery Life (Ambient Only):** Approximately 11 hours
- **Ear Tip Types:** Foam and Silicone (3 sizes each)
- **App Support:** Walker's Link 4.0 App

- **Care Instructions:** Hand Wash Only (for ear tips)
- **Material:** Plastic



24DB
NOISE REDUCTION RATING

4 HI-GAIN
OMNIDIRECTIONAL MICROPHONES

FIVE PROGRAMMED AMBIENT SOUND SETTINGS

- Focus Microphone Amplification
- Adaptive Noise Reduction
- Powerful & Updated App

RIGGED USB CHARGING CASE

- Battery charge lasts up to six hours.
- Two Style in-ear-tips included

FEATURES

- Best listening mode for the activity and environment.
- Universal, Clear Voice, Hi-Frequency Boost, Power Boost, and Custom.
- Bluetooth Hearing Protection & Enhancement W/ Focus Microphone Amplification
- Adaptive Noise Reduction W/ Powerful & Updated App
- FOTA (Firmware Over The Air) Update Ability

Image: Visual representation of the Walker's Disrupter earbuds and charging case, detailing technical specifications such as Noise Reduction Rating and microphone features.

WARRANTY AND SUPPORT

For warranty information or technical assistance, please contact Walker's customer support. Details can typically be found on the official Walker's website or product packaging.

Walker's is committed to providing innovative solutions for hearing protection and enhancement. If you encounter any issues not covered in this manual, please reach out to our support team for further assistance.