

Lost Vape Centaurus E40 Max

Lost Vape Centaurus E40 Max User Manual

Model: Centaurus E40 Max | Brand: Lost Vape

1. INTRODUCTION

Thank you for choosing the Lost Vape Centaurus E40 Max. This device is a compact and powerful electronic device designed for an optimal user experience. It features a 1400mAh built-in battery and a maximum output of 40W, compatible with E Plus Cartridges. Please read this manual thoroughly before using the device to ensure proper operation and maintenance.

2. SAFETY INFORMATION

Please observe the following safety precautions:

- Keep the device away from water and other liquids.
- Do not expose the device to extreme temperatures (high or low) or direct sunlight.
- Do not drop, puncture, or disassemble the device.
- Use only original or recommended charging cables and accessories.
- Store the device out of reach of children and pets.
- If the device shows signs of damage or malfunction, discontinue use immediately.

3. PACKAGE CONTENTS

The Lost Vape Centaurus E40 Max package typically includes:

- 1x Lost Vape Centaurus E40 Max Device
- 1x E Plus Cartridge
- 1x User Manual (this document)
- 1x USB Type-C Cable (may vary by region/package)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Centaurus E40 Max device.



Image: Overview of the Lost Vape Centaurus E40 Max in multiple color variations. The image displays six different color options for the device, including solid colors like black, brown, blue, and green, as well as two versions with a gradient or speckled finish. Each device is shown with its pod attached, highlighting the compact design and the distinctive Centaurus branding on the main body.

- **Pod/Cartridge:** Contains the e-liquid and coil.
- **Device Body:** Houses the battery, chipset, and control buttons.
- **Fire Button:** Used to activate the device and navigate menus.
- **Adjustment Buttons:** Used to adjust wattage or other settings.
- **USB-C Port:** For charging the device.
- **Display Screen:** Shows device information such as wattage, battery level, and coil resistance.

5. SETUP

5.1. Charging the Device

1. Connect the USB Type-C cable to the charging port on the device.

2. Connect the other end of the cable to a suitable USB power source (e.g., wall adapter, computer USB port).
3. The display screen will indicate the charging status. The device is fully charged when the battery indicator shows full.

5.2. Filling the E Plus Cartridge

1. Remove the E Plus Cartridge from the device.
2. Locate the filling port on the cartridge (usually covered by a silicone stopper).
3. Carefully open the stopper and insert the nozzle of your e-liquid bottle into the filling port.
4. Fill the cartridge with e-liquid, ensuring not to overfill.
5. Securely close the silicone stopper.
6. **Important:** After filling a new cartridge or coil, wait at least 5-10 minutes before using the device to allow the e-liquid to fully saturate the coil. This prevents dry hits and extends coil life.

5.3. Installing the Cartridge

1. Ensure the cartridge is properly filled.
2. Align the cartridge with the pod slot on the device.
3. Push the cartridge firmly into the slot until it clicks into place or is securely seated.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

- To turn the device on or off, press the Fire Button 5 times rapidly. The screen will display "ON" or "OFF".

6.2. Adjusting Wattage

- Once the device is on, use the adjustment buttons (usually "+" and "-") to increase or decrease the wattage.
- The recommended wattage range for your E Plus Cartridge will typically be indicated on the coil or cartridge packaging. Do not exceed the recommended wattage.

6.3. Vaping

- With the device powered on and the cartridge installed, press and hold the Fire Button while inhaling from the mouthpiece.
- Release the Fire Button after inhaling.

6.4. Screen Information

The display screen provides important information:

- **Wattage:** Current power output.
- **Battery Level:** Indicates remaining battery charge.
- **Coil Resistance:** Displays the resistance of the installed coil.
- **Puff Counter:** Tracks the number of puffs taken (may be reset).

7. MAINTENANCE

7.1. Cleaning the Device

- Regularly wipe the device body with a soft, dry cloth to remove dust and fingerprints.
- Clean the pod connection area on the device and the bottom of the cartridge with a cotton swab lightly dampened with rubbing alcohol to ensure good contact.
- Ensure no e-liquid leaks into the device's internal components.

7.2. Replacing the Cartridge/Coil

- When you notice a burnt taste, reduced vapor production, or a change in flavor, it's time to replace your E Plus Cartridge or coil (if replaceable).
- Follow the instructions for "Filling the E Plus Cartridge" (Section 5.2) and "Installing the Cartridge" (Section 5.3) with a new cartridge/coil.

7.3. Storage

- When not in use for extended periods, store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- Ensure the device is turned off before storing.

8. TROUBLESHOOTING

- **Device Not Turning On:**

Ensure the device is charged. Press the Fire Button 5 times rapidly to power on. If still unresponsive, try charging for a longer period.

- **No Vapor Production:**

Check if the device is turned on. Ensure the cartridge is properly installed and filled with e-liquid. The coil might be burnt; replace the cartridge/coil. Clean the connection points between the cartridge and device. Ensure the battery is charged.

- **Burnt Taste:**

The coil is likely burnt and needs replacement. Ensure the cartridge is sufficiently filled with e-liquid before use and allow new coils to prime for 5-10 minutes after filling. Do not exceed the recommended wattage.

- **Leaking Cartridge:**

Ensure the silicone stopper is securely closed after filling. Avoid overfilling the cartridge. Check for any cracks or damage to the cartridge. Store the device upright when not in use.

- **Device Not Charging:**

Try a different USB-C cable and power source. Ensure the charging port is clean and free of debris. If the issue persists, contact customer support.

9. SPECIFICATIONS

- **Brand:** Lost Vape
- **Model:** Centaurus E40 Max
- **Dimensions:** 10 x 5 x 3 cm
- **Wattage Output:** Up to 40 Watts
- **Battery:** 1400mAh (Built-in)

- **Compatible Cartridges:** E Plus Cartridge
- **Special Feature:** Compact design

10. WARRANTY AND SUPPORT

The Lost Vape Centaurus E40 Max comes with a manufacturer's warranty. Please refer to the warranty card included in your package or visit the official Lost Vape website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Lost Vape customer service directly or the retailer from whom you purchased the device. You can typically find contact information on the official Lost Vape website: www.lostvape.com


© 2024 Lost Vape. All rights reserved.

Documents - Lost Vape – Centaurus E40 Max



[Lost Vape Centaurus E40 Max Pod Kit User Manual](#)

User manual for the Lost Vape Centaurus E40 Max Pod Kit, covering safety warnings, component overview, basic operation, and technical specifications.
lang:en score:31 filesize: 5.14 M page_count: 1 document date: 2024-05-06

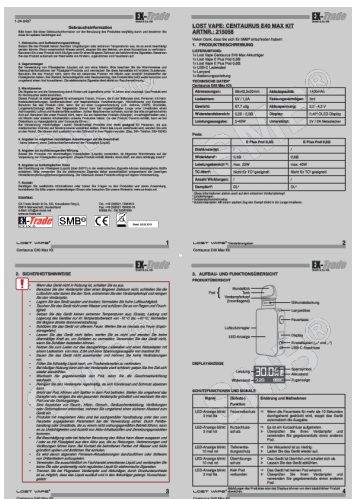

[Lost Vape Centaurus E40 Max Kit User Manual & Guide | EX-Trade](#)

Comprehensive user manual and technical specifications for the Lost Vape Centaurus E40 Max Kit, including safety instructions, operation guide, and maintenance tips from EX-Trade. Learn about product features, setup, and safe usage.
lang:en score:16 filesize: 3.42 M page_count: 2 document date: 2024-07-04