

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer Smart 2K QHD Indoor Security Camera User Manual

Energizer EIX1-1005

Energizer Smart 2K QHD Indoor Security Camera User Manual

Model: EIX1-1005

[Introduction](#)
[Package Contents](#)
[Product Overview](#)
[Setup](#)
[Operating Instructions](#)
[Maintenance](#)
[Troubleshooting](#)
[Specifications](#)
[Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the installation, operation, and maintenance of your Energizer Smart 2K QHD Indoor Security Camera (Model: EIX1-1005). Please read this manual thoroughly before using the product to ensure proper function and safety.

The Energizer Smart 2K QHD Indoor Security Camera offers high-resolution video monitoring, two-way audio communication, night vision, and motion detection capabilities. Its foldable design provides enhanced privacy when not in use.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Energizer Smart 2K QHD Indoor Security Camera (Foldable Camera)
- USB Power Cable
- Power Adapter

- Mounting Hardware (if applicable, e.g., screws, wall anchors, double-sided tape)
- User Manual (this document)

Energizer®

**SMART WIFI
FOLDABLE PRIVACY
INDOOR CAMERA**

2K
QUAD HD

**LIVE VIDEO
VIEWING**

**FOLDABLE FOR
YOUR PRIVACY**



**TWO-WAY
CONVERSATION**



**INSTANT
MOTION ALERTS
TO YOUR SMARTPHONE**



**SMART
CAMERA**

**WIRED
POWER ONLY**

**NOT
BATTERY
POWERED**



Energizer®

**SMART WIFI
FOLDABLE PRIVACY
INDOOR CAMERA**



EASY SETUP

Step 1

Download the **Energizer® Connect App**



Step 2

Install your Smart Indoor Camera

Step 3

Set up and control through the
Energizer® Connect App

System Requirements

- WiFi router with high speed internet connection
- WiFi 2.4GHz 802.11n (setup not available with 5GHz or mixed networks)
- Android 7.0 or higher / iOS 11 or higher
- **Energizer® Connect App** (on mobile device)
- Input: 5V1A

PACKAGE INCLUDES:
SMART INDOOR CAMERA
QUICK START GUIDE
USB POWER ADAPTER
6FT USB POWER CABLE
DOUBLE SIDED TAPE

**1 YEAR
LIMITED
WARRANTY**

Image: Retail packaging of the Energizer Smart 2K QHD Indoor Security Camera, showing the camera and key features.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your camera:



Image: Front view of the Energizer Smart 2K QHD Indoor Security Camera, showing the lens and base.

FOLDABLE FOR YOUR PRIVACY



 **INSTANT**
MOTION ALERTS
TO YOUR SMARTPHONE



INSTANT
MOTION ALERTS



VIDEO
VIEWING



REMOTE
ACCESS



TWO-WAY
CONVERSATION



RECORD
VIDEO & AUDIO
microSD card not included



NIGHT
VISION



CLOUD STORAGE
Free 30 Day Trial

Optional subscription plans available



NO HUB
REQUIRED



WiFi

Image: The Energizer Smart 2K QHD Indoor Security Camera in its folded position, demonstrating the privacy feature.

Key Features:

- **2K QHD Video Resolution:** Provides clear and detailed video footage.
- **Night Vision:** Ensures monitoring in low-light or dark conditions.
- **Two-Way Audio:** Allows for communication through the camera.
- **Motion Detection & Alerts:** Customizable zones and instant notifications to your smartphone.
- **Foldable Design:** For privacy when the camera is not actively monitoring.
- **Flexible Storage:** Supports Cloud Storage (with free trial) and Micro SD card (not included).
- **App Control:** Manage and view live feed via the Energizer Connect App.

4. SETUP INSTRUCTIONS

4.1 System Requirements

- Stable 2.4GHz Wi-Fi network (5GHz Wi-Fi is not supported).
- High-speed internet connection.
- Smartphone or tablet with iOS 10 or higher / Android 7.0 or higher.
- Energizer Connect App (available on App Store and Google Play).

4.2 Downloading the Energizer Connect App

1. Search for "Energizer Connect" in the Apple App Store (for iOS devices) or Google Play Store (for Android devices).
2. Download and install the app.
3. Register for a new account or log in if you already have one.



Image: Screenshot showing instructions to download the Energizer Connect App from Apple App Store and Google Play Store.

4.3 Powering On the Camera

1. Connect the USB power cable to the camera's power port.
2. Plug the other end of the USB cable into the provided power adapter.
3. Plug the power adapter into a standard wall outlet.
4. The camera will power on, and an indicator light will show its status (refer to the app for specific light indications during setup).



Image: The Energizer Smart 2K QHD Indoor Security Camera with its power cable connected, indicating it is wired power only.

4.4 Adding the Camera to the App

1. Open the Energizer Connect App.
2. Tap the "+" icon in the top right corner to add a new device.
3. Select "Camera" or "Security Camera" from the device list.
4. Follow the on-screen instructions to connect the camera to your Wi-Fi network. This typically involves scanning a QR code generated by the app with the camera lens.
5. Once connected, you can name your camera and begin live viewing.

5. OPERATING INSTRUCTIONS

5.1 Live View

From the Energizer Connect App, select your camera to access the live video feed. You can view your space in 2K QHD resolution.



Image: A smartphone displaying the live video feed from the Energizer Smart 2K QHD Indoor Security Camera, showing a dog on a couch.

5.2 Two-Way Audio

To use the two-way audio feature:

1. While in live view, tap the microphone icon in the app.
2. Speak into your smartphone's microphone. Your voice will be transmitted through the camera's speaker.
3. To listen, ensure the speaker icon in the app is enabled.

5.3 Night Vision

The camera automatically switches to night vision mode in low-light conditions, providing clear monochrome video. No manual adjustment is typically required.



Check In Live From Anywhere Using The ***Energizer***® Connect App

Image: A smartphone displaying the night vision feed from the Energizer Smart 2K QHD Indoor Security Camera, showing a baby in a crib in a dark room.

5.4 Motion Detection and Alerts

Configure motion detection settings within the Energizer Connect App:

- **Enable/Disable Motion Detection:** Turn this feature on or off.
- **Sensitivity Adjustment:** Adjust the sensitivity level to reduce false alerts.
- **Motion Detection Zones:** Define specific areas within the camera's view where motion will trigger an alert. This helps focus monitoring on critical areas.
- **Instant Alerts:** Receive push notifications on your smartphone when motion is detected.

MONITORING WITHOUT COMPROMISING Foldable For Your Privacy



Image: A smartphone screen showing an instant motion alert notification from the Energizer Connect App, with a baby in a suitcase.

5.5 Storage Options (Cloud & Micro SD)

- **Cloud Storage:** The camera supports cloud storage for recorded footage. A free trial may be available, with optional subscription plans for extended storage. Access cloud recordings via the app.
- **Micro SD Card:** For local storage, insert a Micro SD card (up to 128GB, Class 10 or higher, not included) into the camera's Micro SD card slot. The camera will automatically record footage to the card. You can view playback through the app.

5.6 Privacy Feature (Foldable Design)

When you wish to disable video monitoring for privacy, simply fold the camera head down into its base. This physically covers the lens, ensuring no video is captured.



Image: The Energizer Smart 2K QHD Indoor Security Camera demonstrating its foldable design for privacy, with an arrow indicating the folding motion.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and body. Do not use liquid cleaners or aerosols.
- **Firmware Updates:** Regularly check the Energizer Connect App for available firmware updates to ensure optimal performance and security.
- **Placement:** Ensure the camera is placed in a stable location, away from direct sunlight, heat sources, and moisture.

7. TROUBLESHOOTING

Problem	Possible Solution
Camera not connecting to Wi-Fi	◦ Ensure your Wi-Fi network is 2.4GHz. 5GHz networks are not supported. ◦ Check Wi-Fi signal strength at the camera's location. ◦ Restart your Wi-Fi router and the camera. ◦ Verify correct Wi-Fi password entry in the app. ◦ Move the camera closer to the router during setup.
No live video feed	◦ Check if the camera is powered on and connected to Wi-Fi. ◦ Ensure your smartphone has a stable internet connection. ◦ Restart the Energizer Connect App. ◦ If the camera is folded, unfold it to reveal the lens.

Problem	Possible Solution
Motion alerts not received	◦ Verify motion detection is enabled in the app settings. ◦ Check app notification settings on your smartphone. ◦ Adjust motion detection sensitivity. ◦ Ensure motion detection zones are correctly configured.
Two-way audio not working	◦ Check microphone and speaker permissions for the Energizer Connect App on your smartphone. ◦ Ensure volume levels are adequate on both the camera (via app) and your smartphone. ◦ Verify internet connection stability.

8. SPECIFICATIONS

Feature	Detail
Model Number	EIX1-1005
Video Resolution	2K QHD
Connectivity	2.4GHz Wi-Fi (IEEE 802.11 b/g/n)
Power Source	Corded Electric (USB)
Indoor/Outdoor Usage	Indoor Only
Storage Options	Cloud Storage, Micro SD Card (up to 128GB, not included)
Audio	Two-Way Audio
Special Features	Night Vision, Motion Detection, Foldable Privacy Design, App Control
Dimensions (L x W x H)	2.75 x 2.75 x 4.75 inches
Item Weight	5.6 ounces
Compatible Devices	Apple (iOS 10+), Android (7.0+)

9. WARRANTY & SUPPORT

This product comes with a **1-Year Limited Warranty** from the date of purchase. For warranty claims or technical support, please contact Energizer customer service.

For the most up-to-date support information, FAQs, and contact details, please visit the official Energizer Connect website or refer to the Energizer Connect App's help section.

Manufacturer: Jem Connected IOT

Brand: Energizer

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question