



Manuals.plus /

› HiMont /

› HiMont KC02 Kids Instant Print Camera User Manual

HiMont KC02

HiMont KC02 Kids Instant Print Camera User Manual

Model: KC02

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your HiMont KC02 Kids Instant Print Camera. Please read this manual thoroughly before operating the device and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- HiMont KC02 Instant Print Camera
- 3 Rolls of Thermal Print Paper
- 32GB MicroSD Card (pre-installed)
- USB Charging Cable
- Neck Strap
- Color Pens (for drawing on prints)
- User Manual (this document)



Image: The HiMont KC02 Instant Print Camera shown with its included accessories: three rolls of thermal paper, a 32GB microSD card, a USB charging cable, and a neck strap.

3. PRODUCT OVERVIEW

The HiMont KC02 is a digital camera designed for children, featuring instant thermal printing capabilities. It captures 1080P HD videos and 12MP photos, offering various creative modes.

Key Features:

- **Instant Thermal Printing:** Prints black and white photos without ink.
- **HD Photo & Video:** 12MP photo resolution and 1080P video recording.
- **2.4-inch LCD Screen:** For viewing photos, videos, and navigating menus.
- **32GB Memory Card:** Pre-installed for ample storage.
- **Built-in Battery:** Provides approximately 4 hours of usage on a full charge.
- **Creative Modes:** Includes various frames, filters, and puzzle games.

- **Print Modes:** Dot matrix and grayscale printing options.



Image: The HiMont KC02 camera highlighting its multifunctional features such as instant printing, 2.4-inch screen, MP3 & games, 1080P HD video, 16x zoom, fun frames, and 32GB card.

4. SETUP

4.1 Charging the Camera

1. Connect the included USB charging cable to the camera's charging port.
2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. The camera is fully charged when the light changes or turns off (refer to camera display for battery status).
4. A full charge typically takes 2-3 hours and provides approximately 4 hours of use.

4.2 Inserting Thermal Print Paper

1. Locate the paper slot door on the side of the camera.
2. Gently open the paper slot door.
3. Insert a roll of thermal print paper into the compartment, ensuring the paper feeds out from the top and is aligned correctly. Leave approximately 1-2 inches of paper extending from the slot.
4. Close the paper slot door firmly until it clicks into place.

Wonderful Gift For Kids

5 PUZZLE GAMES

Image: A three-step visual guide demonstrating how to open the paper slot, insert the thermal paper roll with a small length extending, and close the door.

4.3 Memory Card (Pre-installed)

The camera comes with a 32GB MicroSD card pre-installed. This card is essential for storing photos and videos. Do not remove it unless necessary for data transfer or replacement. Ensure it is securely seated in its slot.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on, press and hold the Power button for a few seconds.
- To power off, press and hold the Power button again until the screen turns off.

5.2 Taking Photos

1. Ensure the camera is in photo mode (indicated by an icon on the screen).
2. Frame your shot using the 2.4-inch LCD screen.
3. Press the Shutter button to capture the photo.
4. The camera will automatically print the photo if instant print mode is active.



Image: The HiMont KC02 camera in use, showing a family photo being captured and examples of the grayscale and dot matrix print modes.

5.3 Recording Videos

1. Switch the camera to video recording mode.
2. Press the Shutter button once to start recording.
3. Press the Shutter button again to stop recording.

4. Videos are saved to the 32GB MicroSD card.

5.4 Print Modes

The camera offers two thermal print modes:

- **Grayscale Mode:** Provides a smoother image with continuous tones.
- **Dot Matrix Mode:** Offers a more textured, pixelated look, sometimes capturing finer details.

Select your preferred print mode through the camera's menu settings.

5.5 Filters and Frames

Enhance your photos with various built-in filters and decorative frames. Navigate through the camera's menu to select and apply these effects before taking a picture or to existing photos for reprinting.



Image: A child holding the HiMont KC02 camera, with a display of various colorful frames and filters that can be applied to photos.

5.6 Puzzle Games and Music Player

The camera includes 5 pre-installed puzzle games for entertainment. It also features a basic music player function. Refer to the on-screen menu for accessing these features.

6. MAINTENANCE

6.1 Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth. Avoid abrasive materials.
- Do not use liquid cleaners or solvents directly on the camera.

6.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- When not in use for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

6.3 Thermal Paper Handling

- Keep thermal paper rolls sealed in their packaging until ready for use to protect them from light and moisture.
- Printed thermal photos can fade over time, especially when exposed to heat, light, or certain chemicals. For long-term preservation, consider scanning or digitizing important prints.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery.	Charge the camera for at least 2-3 hours.
Photos are not printing.	No thermal paper, paper incorrectly loaded, or print mode off.	Check paper supply and re-load if necessary. Ensure paper is facing the correct direction. Verify instant print mode is enabled in settings.
Poor print quality (too light/dark).	Print density settings, old paper, or environmental factors.	Adjust print density in camera settings. Use fresh thermal paper. Avoid printing in very cold environments.
Cannot save photos/videos.	Memory card full or not detected.	Transfer files to a computer to free up space. Ensure the 32GB MicroSD card is properly inserted.
Camera freezes or becomes unresponsive.	Software glitch.	Press and hold the Power button for 10-15 seconds to force a restart. If issues persist, ensure the battery is charged.

8. SPECIFICATIONS

Feature	Detail
Brand	HiMont
Model Name	KC02
Photo Resolution	Up to 12 MP
Video Resolution	1080P (30 FPS)
Screen Size	2.4 Inches LCD
Storage	32 GB MicroSD Card (included)
Battery Type	Lithium Polymer
Battery Life	Approx. 4 hours
Connectivity	USB
Printing Technology	Thermal (Inkless)
Item Weight	0.43 Kilograms
Age Range	Kid (3-14 years recommended)

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The HiMont KC02 Kids Instant Print Camera comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your HiMont KC02 camera, please contact HiMont customer support through the retailer's platform or the official HiMont website. Provide your model number (KC02) and a detailed description of the issue for faster service.

