

HiMont KC02

HiMont KC02 Instant Print Camera for Kids HD/1080P User Manual

Model: KC02 | Brand: HiMont

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your HiMont KC02 Instant Print Camera. Please read this manual thoroughly before operating the device and retain it for future reference. The HiMont KC02 is designed to capture photos and videos, offering instant thermal printing capabilities for children aged 3-12.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- HiMont KC02 Instant Print Camera (Pink)
- 32GB Memory Card (pre-installed)
- USB Charging Cable
- Neck Lanyard
- 3 Rolls of Thermal Printing Paper
- Color Pen Set
- User Manual (this document)



Image 2.1: The HiMont KC02 Instant Print Camera in pink, shown with included accessories: a 32GB memory card, USB charging cable, neck lanyard, and three rolls of thermal printing paper. A printed photo is shown exiting the camera.

3. PRODUCT OVERVIEW

Familiarize yourself with the various components of your camera:

- **Lens:** High-definition lens for capturing images and videos.
- **Display Screen:** 2.4-inch LCD for viewing photos, videos, and navigating menus.
- **Shutter Button:** To take photos or start/stop video recording.
- **Power Button:** To turn the camera on or off.
- **Navigation Buttons:** Up, Down, Left, Right, OK for menu navigation.
- **Print Output Slot:** Where printed photos emerge.
- **Paper Compartment:** Holds the thermal printing paper.
- **USB Port:** For charging and data transfer.
- **MicroSD Card Slot:** For memory card (32GB card pre-installed).



Image 3.1: An illustration highlighting the multifunctional aspects of the HiMont KC02 camera, including print photos, 2.4-inch screen, MP3 & games, 1080P HD video, 16x zoom, fun frames, 32GB card, and playback.

4. SETUP

4.1. Charging the Battery

1. Connect the small end of the USB charging cable to the camera's USB port.
2. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged (approximately 2-3 hours), the light will change or turn off.
4. A full charge provides approximately 4 hours of continuous use.



Image 4.1: This image illustrates the camera's large capacity battery and the USB charging port. It also provides a three-step visual guide for loading thermal printing paper into the camera.

4.2. Inserting/Managing the Memory Card

The camera comes with a 32GB memory card pre-installed. If you need to access or replace it:

1. Locate the MicroSD card slot on the side of the camera.
2. Gently push the existing card to eject it, or insert a new card with the gold contacts facing down until it clicks into place.
3. Ensure the camera is powered off before inserting or removing the memory card to prevent data corruption.

4.3. Loading Thermal Printing Paper

The camera uses special thermal paper for instant prints. Follow these steps:

1. Open the paper slot cover on the side of the camera as indicated by the arrow.
2. Insert a roll of thermal paper into the compartment, ensuring the paper feeds out correctly. The end of the paper should extend about 1-2 inches from the slot.
3. Close the paper slot cover firmly until it clicks.

Refer to Image 4.1 for a visual guide on loading thermal printing paper.

2. Press the Shutter button once to start recording. The camera records in 1080P HD.
3. Press the Shutter button again to stop recording.

5.4. Instant Printing

The camera offers ink-free thermal printing with two modes:

- **Grayscale Mode:** Prints photos with varying shades of gray.
- **Dot Matrix Mode:** Prints photos using a pattern of dots.

1. After taking a photo, or when viewing a photo in playback mode, select the print option from the menu.
2. Choose your desired print mode (Grayscale or Dot Matrix).
3. Confirm to print. The photo will emerge from the print output slot.
4. You can use the included color pens to color your printed photos.



Image 5.2: This image demonstrates the "Capture the Moment" feature of the HiMont KC02 camera, showcasing both Grayscale Mode and Dot Matrix Mode for instant photo printing.

5.5. Other Functions

- **Music Player:** Navigate to the music player option in the menu to play audio files (if loaded onto the memory card).

- **Puzzle Games:** The camera includes 5 built-in puzzle games for entertainment. Access them via the main menu.
- **Continuous Shooting:** Allows taking multiple photos in quick succession. Refer to the camera's on-screen menu for activation.
- **Time-lapse Photography:** Set the camera to capture photos at predefined intervals. Consult the camera's settings menu for configuration.
- **Playback:** View captured photos and videos on the 2.4-inch screen.



Image 5.3: This image highlights the HiMont KC02 camera as a "Wonderful Gift for Kids" and displays five different puzzle games available on the device.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.
- **Paper Replacement:** Always use HiMont-approved thermal printing paper for optimal print quality and

to prevent damage to the printer mechanism.

- **Data Backup:** Regularly back up photos and videos from the memory card to a computer to prevent data loss. Connect the camera to a computer using the USB cable to access the memory card contents.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery.	Charge the camera for at least 2 hours.
Cannot take photos/record videos.	Memory card full or not inserted correctly.	Check memory card insertion. Delete unnecessary files or replace the card.
Printer not working / Blank prints.	Thermal paper incorrectly loaded or depleted.	Ensure paper is loaded correctly with the printable side facing the print head. Replace paper roll if empty.
Poor print quality.	Low battery, dirty print head, or non-compatible paper.	Charge battery. Gently clean the print head with a soft, dry cloth. Use only HiMont thermal paper.
Camera freezes.	Software glitch.	Press and hold the Power button for 10 seconds to force a restart.

8. SPECIFICATIONS

Feature	Detail
Brand	HiMont
Model	KC02
Color	Pink
Product Type	Compact Digital Instant Print Camera
Effective Still Resolution	12 Megapixels
Video Resolution	1080p HD
Display Screen	2.4 inches LCD
Optical Zoom	16x
Connectivity Technology	USB
Memory Card	32GB MicroSD (included)
Battery Type	Lithium-polymer (included)
Battery Life	Approx. 4 hours of continuous use

Feature	Detail
Image Format	JPEG
Video Format	MP4
Sensor Technology	CMOS
ISO Range	100-3200
Aperture Modes	F4.0
Focus Type	Autofocus
Water Resistance Level	Not waterproof
Model Year	2024

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official HiMont website. Keep your proof of purchase for any warranty claims.