

Claiks P1.01.016.0001.JP

Claiks Electric Standing Desk User Manual

Model: P1.01.016.0001.JP

1. INTRODUCTION

Thank you for purchasing the Claiks Electric Standing Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- Do not exceed the maximum weight limit of 70 kg (154 lbs) on the desktop.
- To ensure optimal stability, especially when the desk is at its maximum height or carrying heavy equipment, wall mounting is recommended.
- Keep children and pets away from the desk during operation to prevent accidents.
- Ensure no obstacles are in the path of the desk's movement (up or down) to avoid damage or injury.
- Do not sit or stand on the desk.
- Only use the provided power adapter.
- Disconnect power before cleaning or maintenance.

3. PRODUCT FEATURES

- **Large Workspace:** The desk features an increased depth of 70cm, providing ample space for keyboards, notebooks, and multiple monitors.
- **Height Adjustable:** Electric height adjustment from 72cm to 118cm (28.3 to 46.5 inches) at a speed of 20mm/s.
- **Memory Presets:** Save up to three preferred height settings for quick one-touch adjustments between sitting and standing positions.
- **Quiet Operation:** Designed for minimal noise during height adjustments, ensuring a peaceful work environment.
- **Durable Desktop:** Environmentally friendly desktop made with melamine resin, resistant to water, heat, and stains for easy maintenance.

- **High Load Capacity:** Robust frame constructed from high-strength, durable SPCC steel, supporting up to 70 kg (154 lbs).
- **Integrated Cable Management:** Features a system to keep cables organized and out of sight.
- **360° Rotating Side Hooks:** Two convenient hooks for hanging headphones or bags.

4. SPECIFICATIONS

Brand	Claiks
Model Number	P1.01.016.0001.JP
Desk Type	Electric Standing Computer Desk
Dimensions (D x W x H)	70 cm x 140 cm x 72-118 cm
Minimum Height	72 cm (28.3 inches)
Maximum Height	118 cm (46.5 inches)
Lifting Speed	20 mm/s
Load Capacity	70 kg (154 lbs)
Desktop Material	Melamine Resin Laminated
Desktop Thickness	1.5 cm
Base Material	Metal (SPCC Steel)
Color	Black Frame / Black Top
Assembly Required	Yes
UL Certified	Yes

5. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the detailed instructions provided in the separate assembly guide included in the packaging. Ensure all components are present before beginning assembly. An electric drill may be required for certain steps.

5.1. Unpacking and Component Check

1. Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Verify that all parts listed in the assembly guide are present. If any parts are missing or damaged, contact customer support.

5.2. Frame Assembly

Assemble the desk frame according to the step-by-step diagrams in the assembly guide. Ensure all screws are tightened securely, but do not overtighten.

5.3. Desktop Installation

Attach the desktop panels to the assembled frame. Pay close attention to the alignment of the panels to ensure a smooth and even surface. Secure the desktop using the provided fasteners.

5.4. Controller and Cable Management

Install the control panel and connect all necessary cables as shown in the guide. Utilize the integrated cable management system

to organize wires neatly.

サイズ【単位：cm】

幅140cm



幅160cm




- 天板厚さ：1.5CM
- 耐荷重：70KG
- 昇降範囲：72~118cm

Image: Size comparison of the 140cm and 160cm desk models, showing dimensions and load capacity.

SPEC LIST




重いものも安心して収納

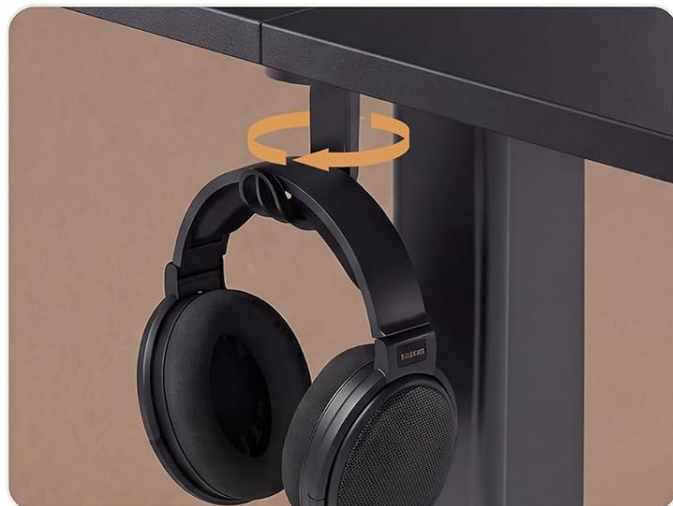

360°回転サイドフック*2



配線をすっきり整理

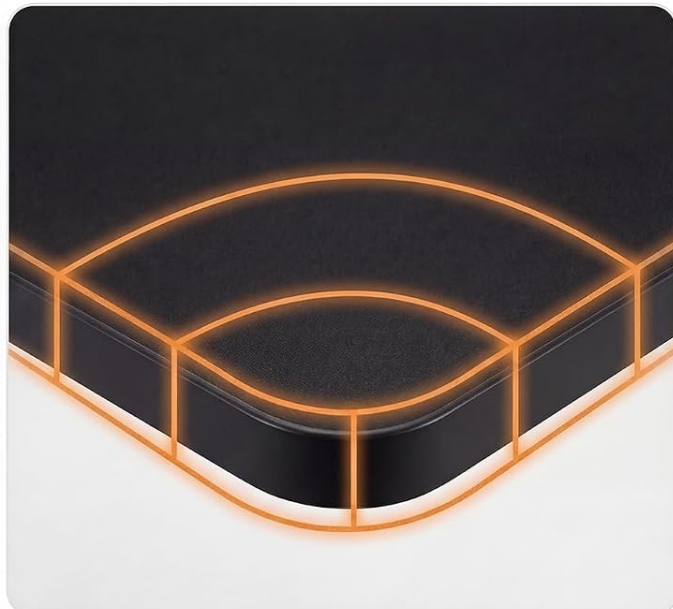

見た目すっきり安心設計

Image: Detailed view of desk features including 70kg load capacity, 360° rotating side hooks, cable management, and rounded corner design.

6. OPERATING INSTRUCTIONS

The Claiks Electric Standing Desk features an intuitive control panel for height adjustment and memory functions.

6.1. Initial Setup and Calibration

1. Connect the power cable to a suitable power outlet.
2. The desk may perform an initial calibration cycle upon first power-up. Allow it to complete this process.

6.2. Adjusting Height

1. Use the **Up (▲)** and **Down (▼)** arrow buttons on the control panel to manually adjust the desk height.
2. Release the button when the desired height is reached.

6.3. Setting Memory Presets

The desk allows you to save up to three preferred height settings.

1. Adjust the desk to your desired height using the Up/Down buttons.
2. Press the **M** button. The LED display will show 'S'.
3. Within 3 seconds, press one of the number buttons (**1**, **2**, or **3**) to save the current height to that preset. The display will show 'S-1', 'S-2', or 'S-3' to confirm.

6.4. Using Memory Presets

To move the desk to a saved height:

1. Simply press the corresponding number button (**1**, **2**, or **3**). The desk will automatically move to the saved position.



Image: Illustration of a user utilizing the desk in both standing (up to 118cm) and sitting (down to 72cm) postures.

多機能コントローラー

いつでも自由にコントロール



LEDディスプレイ



セッティング



タイミングモード



3つメモリーボタン



アップ/ダウンボタン

Image: Close-up of the multi-function control panel with LED display, M (memory) button, 3 memory preset buttons, and up/down arrows.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Claiks Electric Standing Desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Cable Management:** Periodically check and reorganize cables to prevent tangling or damage.
- **Fasteners:** Occasionally check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Motor Care:** The electric motor is designed for maintenance-free operation. Do not attempt to open or lubricate the motor housing.

8. TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
---------	----------------	----------

Desk does not move	Power cable disconnected; Motor overload; Control panel error.	Check power connection. Reduce weight on desk. Disconnect and reconnect power to reset.
Uneven movement	Obstruction; Unbalanced load; Loose connections.	Remove any obstructions. Distribute weight evenly. Check assembly screws.
Desk stops mid-movement	Overload protection activated; Overheating.	Reduce weight. Allow motor to cool down for 20 minutes before resuming operation.
Memory presets not working	Incorrect saving procedure.	Refer to Section 6.3 to correctly save memory presets.

If the problem persists after attempting these solutions, please contact Claiks customer support.

9. WARRANTY AND SUPPORT

Claiks is committed to providing high-quality products. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions.

For any questions, technical assistance, or warranty claims, please contact Claiks customer support. Our support team is available in multiple languages, including English and Japanese.

Website: [Claiks Official Store](#)

Email: Refer to your product packaging or official website for contact email.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

