

Saved from [manuals.plus](#).

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [YESHOMY](#) /

› YESHOMY Dresser for Bedroom, 6 Drawer Dressers, Wide Storage Organizer Chest and TV Stand for Bedroom, Living Room, Hallway, Dormitory, Dark Black

YESHOMY YH-WD23-0158

YESHOMY Dresser for Bedroom

USER MANUAL

1. Introduction

This user manual provides detailed instructions for the assembly, operation, and maintenance of your YESHOMY 6-Drawer Dresser. Designed for versatility, this modern piece functions as a spacious storage organizer, a bedroom dresser, and can even serve as a TV stand for screens up to 65 inches. Its robust construction and elegant dark black finish make it a suitable addition to bedrooms, living rooms, hallways, or dormitories.



Figure 1.1: The YESHOMY 6-Drawer Dresser, showcasing its sleek design and ample storage capacity.

2. Safety Information

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Anti-Tip Kit:** Always install the included anti-tip kit to prevent the dresser from tipping over, especially in households with children or pets. This is crucial for safety.
- **Weight Capacity:** The top surface of the dresser has a maximum weight capacity of 200 lbs. Each drawer can hold up to 30 lbs. Do not exceed these limits.
- **Assembly:** Assemble the dresser on a soft, clean surface (e.g., a blanket or carpet) to prevent scratches. Ensure all hardware is securely tightened before use. Periodically check and re-tighten all connections.
- **Placement:** Place the dresser on a level surface to ensure stability.
- **Care:** Wipe the dresser with a dry cloth for cleaning. Avoid using harsh chemicals or abrasive cleaners that may damage the finish.

3. Package Contents

Before beginning assembly, verify that all parts and hardware are present and undamaged. If any parts are missing or damaged, please contact customer support.

Item	Description	Quantity
Dresser Panels	Top, bottom, side, back panels, and drawer components.	Various
Drawers	Six (6) complete drawer sets.	6
Hardware Kit	Screws, cam locks, dowels, drawer slides, handles, anti-tip kit.	1 set
Assembly Manual	Step-by-step assembly instructions.	1

4. Setup and Assembly

Assembly is required for this dresser. It is recommended to have two people for assembly. You will need a Phillips head screwdriver and potentially power tools for faster assembly, though a basic screwdriver is provided.

- 1. Prepare Workspace:** Clear a spacious area and lay down a blanket or soft material to protect the dresser components from scratches during assembly.
- 2. Identify Parts:** Unpack all components and identify them using the provided parts list in the separate assembly manual. Pay attention to part numbers and orientations.
- 3. Assemble Frame:** Follow the step-by-step diagrams in the assembly manual to construct the main frame of the dresser. Ensure all cam locks and screws are fully tightened. *Note: Some pre-drilled holes may require extra attention to ensure hardware fits correctly.*
- 4. Install Drawer Slides:** Attach the drawer slides to the dresser frame and to the drawer sides as indicated in the manual. Ensure they are level and aligned for smooth drawer operation.
- 5. Assemble Drawers:** Construct each of the six drawers. Attach the metal handles securely to the front of each drawer.
- 6. Insert Drawers:** Carefully slide the assembled drawers into their respective slots on the dresser frame. Test each drawer for smooth opening and closing. Adjust drawer tracks if necessary to ensure proper alignment.
- 7. Attach Back Panel:** Secure the back panel to the dresser frame.*Note: In some cases, the back panel may need minor adjustments to fit perfectly.*
- 8. Install Anti-Tip Kit:** Securely attach the anti-tip kit to the back of the dresser and to a wall stud using the provided hardware. This step is critical for safety.



Figure 4.1: Key components of the dresser, including the anti-tip kit for safety, slide rails for drawers, metal handles, and the solid base structure.

5. Operating and Usage

Your YESHOMY dresser is designed for versatile use and efficient storage.

- **Drawer Functionality:** The six drawers provide ample space for organizing clothing, accessories, linens, or other household items. Pull drawers out smoothly using the metal handles.
- **TV Stand Capability:** The sturdy top surface can accommodate televisions up to 65 inches, with a weight capacity of 200 lbs. Ensure the TV's base fits securely on the dresser top.
- **Versatile Placement:** This dresser is suitable for various rooms, including bedrooms, living rooms, hallways, and dormitories, offering both storage and a display surface.



Figure 5.1: The dresser effectively functions as a TV stand, supporting a large television.



Figure 5.2: The dresser's spacious drawers offer significant storage capacity for various items.

6. Maintenance

Proper care will ensure the longevity and appearance of your dresser.

- **Cleaning:** Wipe the surface of the dresser with a soft, dry cloth. Avoid using liquid cleaners, abrasive pads, or harsh chemicals, as these can damage the finish.
- **Hardware Check:** Periodically check all screws, bolts, and connections to ensure they remain tight. Re-tighten as necessary to maintain stability.
- **Protect Surface:** Use coasters or protective mats under items placed on the dresser top to prevent scratches or water marks.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or damage to the wood finish.

7. Troubleshooting

If you encounter any issues with your dresser, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Drawers do not open or close smoothly.	Misaligned drawer slides or tracks; obstruction in the drawer path; loose hardware.	Ensure drawer slides are correctly installed and aligned. Check for any objects blocking the drawer. Tighten all screws on the drawer and slide mechanisms.
Dresser feels unstable or wobbly.	Loose assembly hardware; uneven floor; anti-tip kit not installed.	Re-tighten all assembly screws and cam locks. Ensure the dresser is on a level surface. Install the anti-tip kit securely to the wall.

Problem	Possible Cause	Solution
Pre-drilled holes do not align or are not deep enough.	Manufacturing variation.	Carefully re-check the orientation of the parts. If a hole is too shallow, gently deepen it with a drill bit (use caution to avoid drilling through). If alignment is off, contact customer support for assistance.
Back panel does not fit correctly.	Misalignment during assembly; slight size variation.	Ensure the main frame is square and all panels are correctly oriented. Minor trimming of the back panel may be required in rare cases, but contact support first if significant adjustment is needed.

8. Specifications

Detailed specifications for the YESHOMY 6-Drawer Dresser.

Feature	Detail
Brand	YESHOMY
Model Name	Dresser for Bedroom (Model: YH-WD23-0158)
Product Dimensions (D x W x H)	58.27"D x 15.16"W x 26.57"H
Color	Dark Black
Mounting Type	Freestanding
Room Type	Closet, Bedroom, Living Room, Dining Room
Special Feature	Durable
Furniture Finish	Black (Matte Finish)
Assembly Required	Yes
Item Weight	89 Pounds
Number of Pieces	1 (Dresser unit)
Top Weight Capacity	200 lbs
Drawer Weight Capacity	30 lbs per drawer



Figure 8.1: Detailed product dimensions, including overall size and individual drawer measurements.

9. Warranty and Support

For any questions, concerns, or assistance with your YESHOMY dresser, please contact our customer support team. While specific warranty details are not provided in this manual, YESHOMY is committed to customer satisfaction. Please have your model number (YH-WD23-0158) and purchase information ready when contacting support to expedite assistance.

You can visit the official YESHOMY store for more information and contact options: [YESHOMY Store](#)

© 2025 YESHOMY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DDKJBPVS>

More documents and user manuals: **<https://manuals.plus/>**