

[Manuals.plus](#) /

› [LUXOAK](#) /

› LUXOAK 70" Woodgrain High Gloss Floating TV Stand Instruction Manual

LUXOAK CTS015-Black

LUXOAK 70" Woodgrain High Gloss Floating TV Stand Instruction Manual

Model: CTS015-Black

1. INTRODUCTION

Thank you for purchasing the LUXOAK 70" Woodgrain High Gloss Floating TV Stand. This modern floating TV stand features a visible wood grain UV high gloss finish, smart LED lights, and a convenient charging station. Designed for TVs up to 80 inches, it offers ample storage and a space-saving wall-mounted design. Please read this manual carefully before assembly and use to ensure proper installation and safe operation.

2. SAFETY INFORMATION

Your safety is paramount. Please adhere to the following guidelines:


- Do not exceed the weight capacity of **250 lbs**.
- Ensure your TV does not exceed **80 inches** in size.
- Be cautious of sharp edges during assembly and handling.
- Keep electrical components (LED lights, charging station) dry and away from heat sources.
- Follow all assembly instructions carefully to prevent injuries and ensure structural integrity.
- The floating TV shelf is suitable for **wooden walls, concrete walls, and solid brick walls**. It is *not suitable for cavity walls and plaster walls*.

3. PRODUCT OVERVIEW

The LUXOAK Floating TV Stand is designed to enhance your living space with its modern aesthetic and practical features.

3.1. Dimensions and Capacity

Product Dimensions

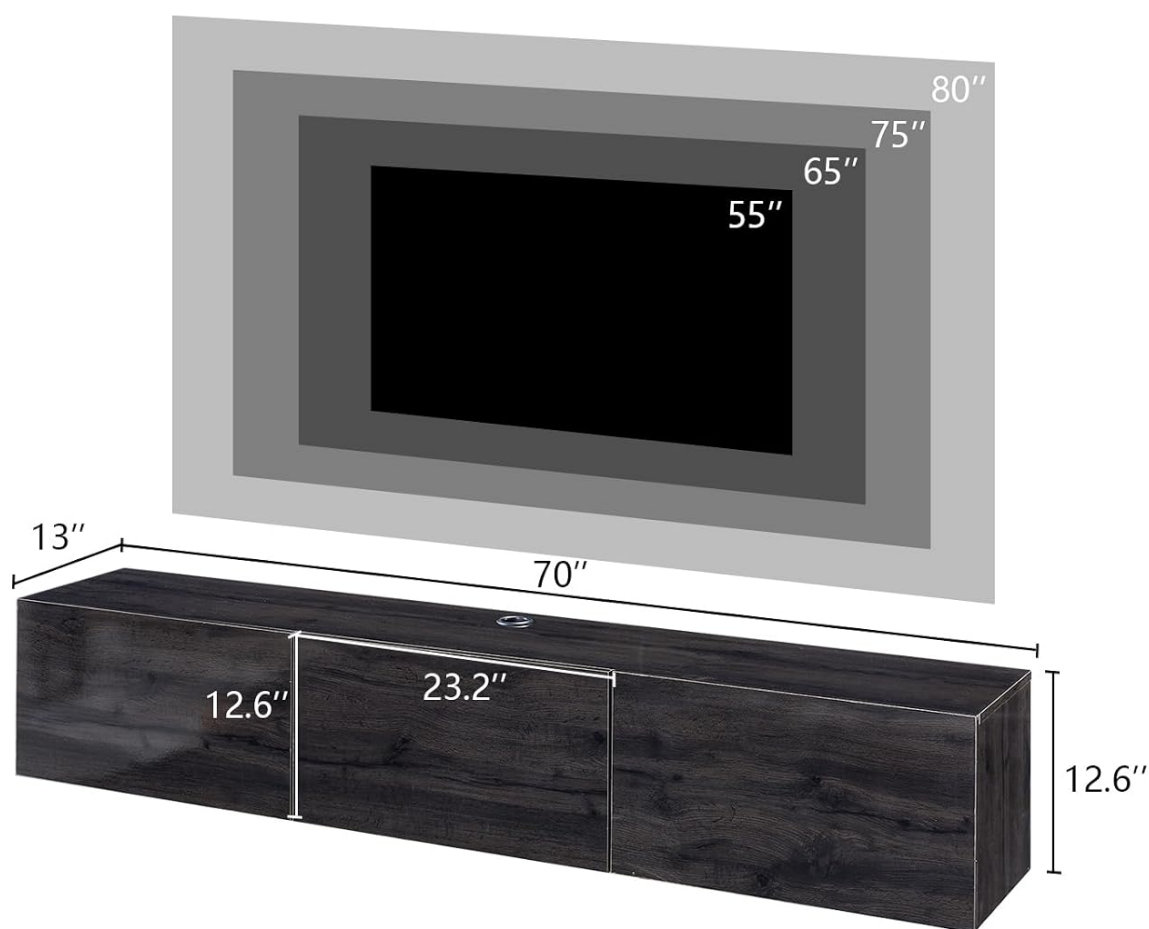

Material

High Gloss Acrylic
MDF Board
Changing LED Lights

Dimensions

70"L x 13"W x 12.6"H
TVs Up to 80"

Capacity

250 lbs

Figure 3.1: Product Dimensions and TV Compatibility. The stand measures 70" L x 13" W x 12.6" H and supports TVs up to 80 inches with a maximum weight of 250 lbs.

- **Product Dimensions:** 70 x 13 x 12.6 inches (L x W x H)
- **Item Weight:** 51 pounds
- **Material:** Engineered Wood with High Gloss Acrylic finish
- **Maximum TV Size:** Up to 80 inches
- **Weight Capacity:** 250 lbs

3.2. Key Features

- **High Gloss Floating Design:** Modern aesthetic with visible wood grain UV high gloss finish, easy to clean.
- **Smart LED Lights:** Thousands of LED light colors and multiple customized modes, controllable via APP or remote.
- **Convenient Charging Station:** Integrated power outlet with 3 standard plug outlets and 2 USB plugs.
- **Space Saving Design:** Wall-mounted with 3 tipping drawers for storage.
- **Wire Management:** Includes a rubber wire hole for organized cable routing.



Figure 3.2: Front view of the LUXOAK Floating TV Stand with integrated LED lighting and a visible charging station diagram.



Figure 3.3: Detail of the overall woodgrain high gloss surface, highlighting its luxurious and elegant appearance.

AMPLE STORAGE & CONVENIENT CHARGING STATIONS

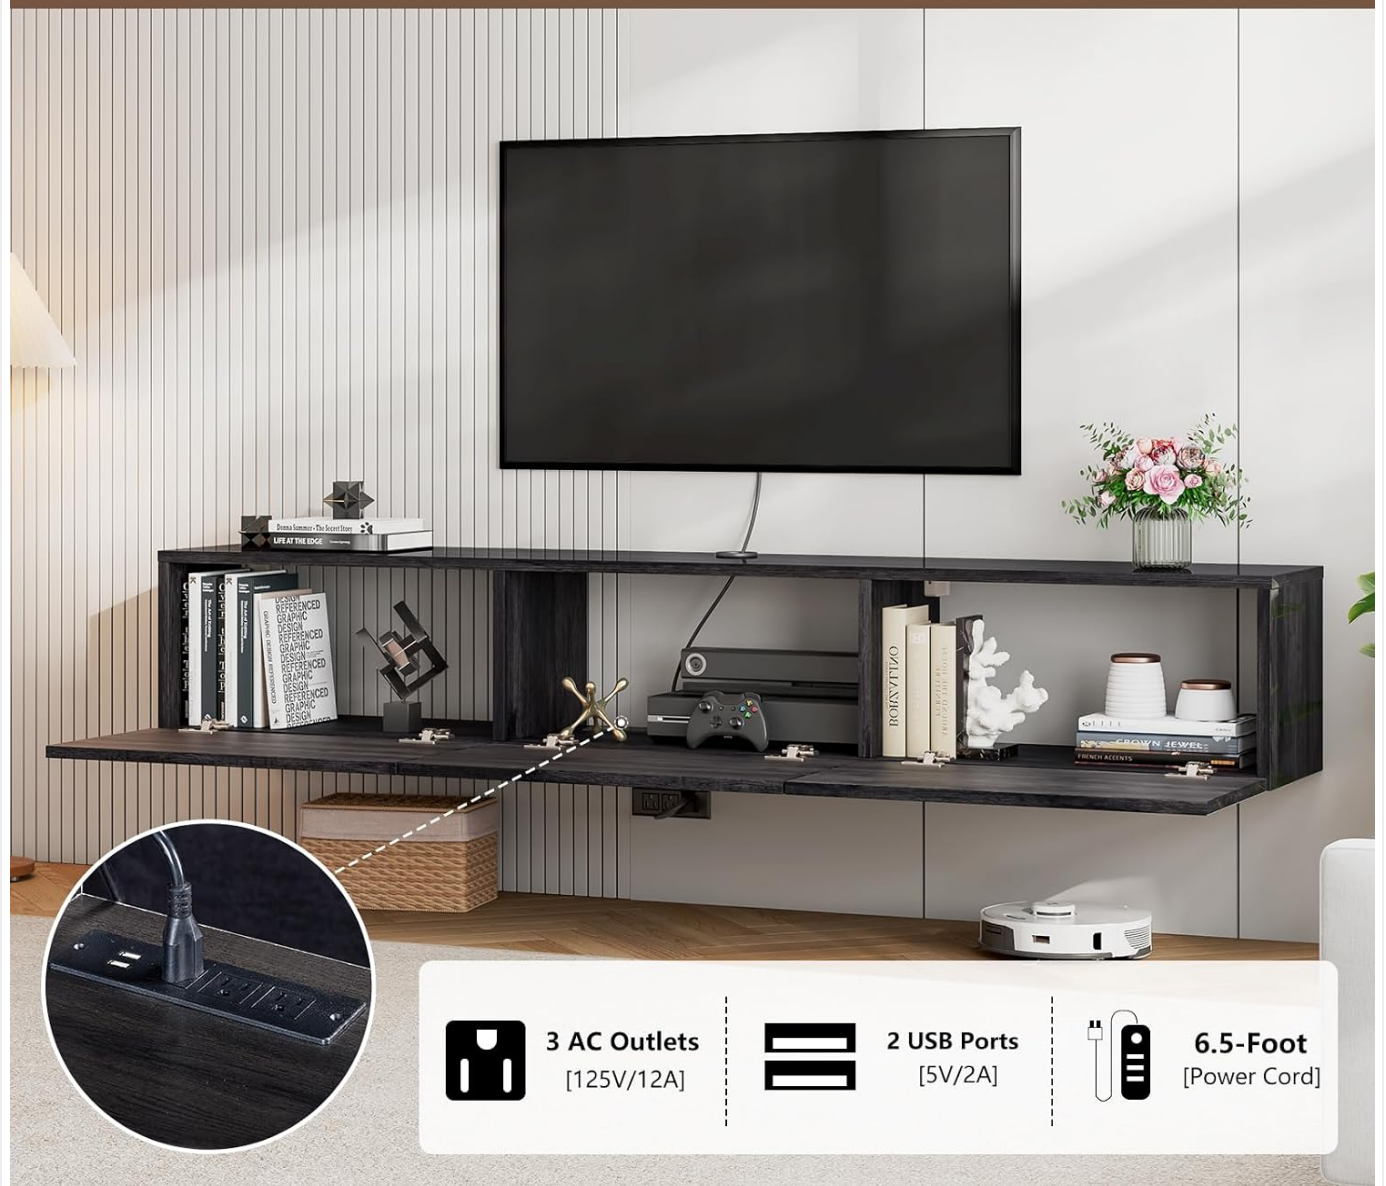


Figure 3.4: Ample storage space with three tipping drawers and a convenient charging station with 3 AC outlets and 2 USB ports.



Figure 3.5: Details of the tipping drawer mechanism, rubber wire hole for cable management, and high-quality hinges.

4. SETUP AND INSTALLATION

This floating TV stand requires wall mounting. Please ensure you have the necessary tools and assistance for safe installation. The package includes all hardware parts and a clear instruction manual for assembly.

4.1. Wall Type Compatibility

The floating TV shelf is suitable for:

- Wooden Walls
- Concrete Walls
- Solid Brick Walls

It is **NOT suitable** for cavity walls and plaster walls.



Figure 4.1: Compatible wall types for installation.

4.2. Assembly Steps

Refer to the included detailed instruction manual for step-by-step assembly. Ensure all parts are present before beginning. It is recommended to have at least two people for assembly and wall mounting.

1. Unpack all components and verify against the parts list in the manual.
2. Assemble the main frame of the TV stand according to the diagrams.
3. Install the tipping drawers and hinges.
4. Identify the ideal mounting location on a compatible wall, considering TV height and viewing angles.
5. Mark drilling points accurately using a level.
6. Drill pilot holes and install wall anchors (if required for your wall type).
7. Securely mount the TV stand to the wall using the provided hardware.
8. Install the LED light strip into its designated slot.
9. Connect the charging station power cord to a suitable wall outlet.

5. OPERATING INSTRUCTIONS

5.1. LED Lights Operation

The smart LED lights offer thousands of colors and multiple customized modes. They can be controlled via a mobile application or the included remote control.

- **Remote Control:** Use the provided remote to power on/off, change colors, adjust brightness, and select preset modes (e.g., Music Mode, Timing Function, Mic Mode).
- **Mobile APP:** Download the designated mobile application (refer to the LED light manual for QR code or app name) to access advanced customization, color wheel selection, and additional features.
- Ensure the LED light strip is properly connected to its dedicated socket power port.



Figure 5.1: LED light features, showing control via remote and mobile app.

Your browser does not support the video tag.

Video 5.1: Demonstration of the LUXOAK Floating High Gloss TV Stand, showcasing its features including LED lighting, storage, and

5.2. Charging Station Usage

The integrated charging station provides convenient power access for your devices.

- The charging station includes 3 standard AC outlets (125V/12A) and 2 USB ports (5V/2A).
- Use the AC outlets for powering TVs, DVD players, game consoles, and other electronics.
- Use the USB ports to charge smartphones, tablets, and other USB-powered devices.
- Utilize the rubber wire hole on the top surface for neat cable management, guiding wires from your TV or other devices down to the charging station.

6. MAINTENANCE

To maintain the appearance and longevity of your LUXOAK TV stand, follow these simple care instructions:

- **Cleaning:** Wipe with a dry cloth. Avoid abrasive cleaners or harsh chemicals that may damage the high gloss finish.
- **Spills:** Immediately wipe up any liquid spills to prevent water damage to the engineered wood. The high gloss surface is designed to be easy to clean.
- **Dusting:** Regularly dust the surface with a soft, dry, lint-free cloth.
- **Inspection:** Periodically check all mounting hardware and connections to ensure they remain secure.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, please refer to the following common troubleshooting tips:

- **LED Lights Not Working:**
 - Check if the LED light strip is securely plugged into its power port and the wall outlet.
 - Ensure the remote control has working batteries and is pointed directly at the receiver.
 - Verify the mobile app connection (Bluetooth/Wi-Fi) is active and stable.
- **Charging Station Not Providing Power:**
 - Check if the main power cord for the charging station is firmly plugged into a live wall outlet.
 - Test the wall outlet with another device to ensure it is functional.
 - Avoid overloading the outlets; ensure the total power draw does not exceed the station's capacity.
- **Stand Feels Unstable:**
 - Re-check all wall mounting screws and anchors to ensure they are tightened securely.
 - Confirm that the wall type is compatible (wooden, concrete, solid brick) and not a cavity or plaster wall.
 - Ensure the weight on the stand does not exceed 250 lbs.
- **Drawers Not Opening/Closing Smoothly:**
 - Check for any obstructions inside the drawers or along the hinge mechanism.
 - Ensure the hinges are properly aligned and tightened.

If problems persist, please contact LUXOAK customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	LUXOAK
Model Number	CTS015-Black
ASIN	B0DDKQW67P
UPC	199169068782
Product Dimensions (L x W x H)	70 x 13 x 12.6 inches
Item Weight	51 pounds
Material	Engineered Wood
Color	Black
Max TV Size Supported	80 inches
Weight Capacity	250 lbs
Product Care Instructions	Wipe with Dry Cloth
Special Feature	Weatherproof (Note: This feature is listed in product specs, but for an indoor TV stand, it likely refers to material durability rather than outdoor use.)

9. WARRANTY AND SUPPORT

LUXOAK is committed to providing high-quality products and customer satisfaction.

9.1. Return Policy

This product is eligible for a **30-day easy returns** policy, which covers refund or replacement. Please refer to your purchase platform's return policy for detailed terms and conditions.

9.2. Customer Support

For any questions, concerns, or assistance with assembly or product operation, please contact LUXOAK customer support. You can typically find contact information on the seller's page or through the platform where you made your purchase.

Seller: [boliyangnet](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DDKQW67P>

More documents and user manuals: <https://manuals.plus/>