

RYER Portable Spot Cleaner

RYER Spot Cleaner & Carpet Cleaner Machine User Manual

Model: Portable Spot Cleaner

1. INTRODUCTION

Thank you for choosing the RYER Spot Cleaner & Carpet Cleaner Machine. This portable and compact cleaning solution is designed to effectively remove spots, stains, and odors from various surfaces, including carpets, upholstery, car seats, and mattresses. With its powerful suction and dual-tank system, it provides efficient and convenient deep cleaning for your home and vehicle.

Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- **Electrical Safety:**

- Do not immerse the appliance in water or other liquids.
- Do not operate with a damaged cord or plug.
- Unplug from outlet when not in use and before cleaning or servicing.

- **Water and Cleaning Solution:**

- Use only recommended cleaning solutions for spot cleaners.
- Do not use flammable or combustible liquids.
- Ensure tanks are properly sealed before operation to prevent leaks.

- **General Use:**

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without tanks in place.
- Supervise children and pets when the appliance is in use.

3. PACKAGE CONTENTS

Please check the box for the following items:

- RYER Spot Cleaner Main Unit
- Flexible Hose with Integrated Spray Nozzle
- Tough Brush Attachment
- Flat Brush Attachment
- User Manual



Image: The RYER Spot Cleaner main unit, showing the clean and dirty water tanks, the handle, and the attached flexible hose with the cleaning nozzle.

4. PRODUCT FEATURES AND COMPONENTS

Familiarize yourself with the key components of your RYER Spot Cleaner:

- **Clean Water Tank (0.8L):** Holds clean water and cleaning solution.
- **Dirty Water Tank (0.5L):** Collects dirty water and debris.
- **Flexible Hose:** Connects the main unit to the cleaning nozzle.
- **Cleaning Nozzle:** Features a spray trigger and suction opening.
- **Tough Brush Attachment:** For scrubbing stubborn dirt on durable surfaces.

- **Flat Brush Attachment:** Ideal for cleaning hard-to-reach areas and delicate fabrics.
- **Power Button:** Turns the unit on/off.
- **Carry Handle:** For easy portability.

Dual Tank Technology

Fast and effective drying system



Image: The RYER Spot Cleaner highlighting its dual tank system, with labels for the 0.8L clean water tank and 0.5L dirty water tank.

Simply Clean

Complete set for precision cleaning



Image: Close-up view of the two included cleaning attachments: the Tough Brush for scrubbing and the Flat Brush for precision cleaning.

5. SETUP

- 1. Unpack the Unit:** Carefully remove all components from the packaging.
- 2. Attach the Hose:** Connect the flexible hose securely to the main unit's hose port. Ensure it clicks into place.
- 3. Fill the Clean Water Tank:**
 - Remove the clean water tank from the main unit.
 - Unscrew the cap and fill the tank with warm tap water (max 40°C).
 - Add a small amount of suitable carpet or upholstery cleaning solution, following the solution manufacturer's instructions. Do not overfill.
 - Securely replace the cap and reinsert the tank into the main unit until it clicks.
- 4. Prepare the Dirty Water Tank:** Ensure the dirty water tank is empty and properly seated in the unit.
- 5. Select Attachment:** Choose either the Tough Brush or Flat Brush attachment and securely connect it to the cleaning nozzle.

6. **Plug In:** Plug the power cord into a grounded electrical outlet.

6. OPERATING INSTRUCTIONS

Before cleaning, always test a small, inconspicuous area of the surface for colorfastness and material compatibility. Do not over-wet the area.

1. **Pre-treat (Optional):** For heavily soiled areas or stubborn stains, pre-treat the spot with a suitable stain remover according to its instructions. Allow it to sit for a few minutes.
2. **Turn On:** Press the power button on the main unit to turn on the RYER Spot Cleaner.
3. **Spray Solution:** Hold the cleaning nozzle about 1-2 inches above the stained area. Press the spray trigger on the nozzle to release the cleaning solution onto the spot.
4. **Scrub and Suction:**
 - For carpets and durable upholstery, gently scrub the stained area with the brush attachment while continuing to spray.
 - Release the spray trigger and slowly pull the nozzle across the wet area, applying downward pressure to suction up the dirty water.
 - Repeat spraying and suctioning passes until the stain is removed and the water being extracted appears clean.
5. **Drying:** Make additional suction-only passes over the cleaned area to remove as much moisture as possible. This will help the area dry faster.
6. **Empty Dirty Water Tank:** When the dirty water tank reaches its maximum fill line, or after each cleaning session, turn off the unit and empty the tank.
 - Remove the dirty water tank from the main unit.
 - Open the emptying cap and pour the dirty water into a sink or drain.
 - Rinse the tank thoroughly with clean water.
7. **Refill Clean Water Tank:** If needed, refill the clean water tank as described in the Setup section.

Multi-Surface Cleaning

Perfect for sofas, cars, carpets and more



The pictures always show the same carpet cleaner. In the light, the color looks different. Please use the first picture as a color reference.

Image: Demonstrates the RYER Spot Cleaner being used on different surfaces including car seats, fabrics, sofas, and carpets, highlighting its versatility.

Compact Cleaning Power

Top-Rated Cleaning Solution

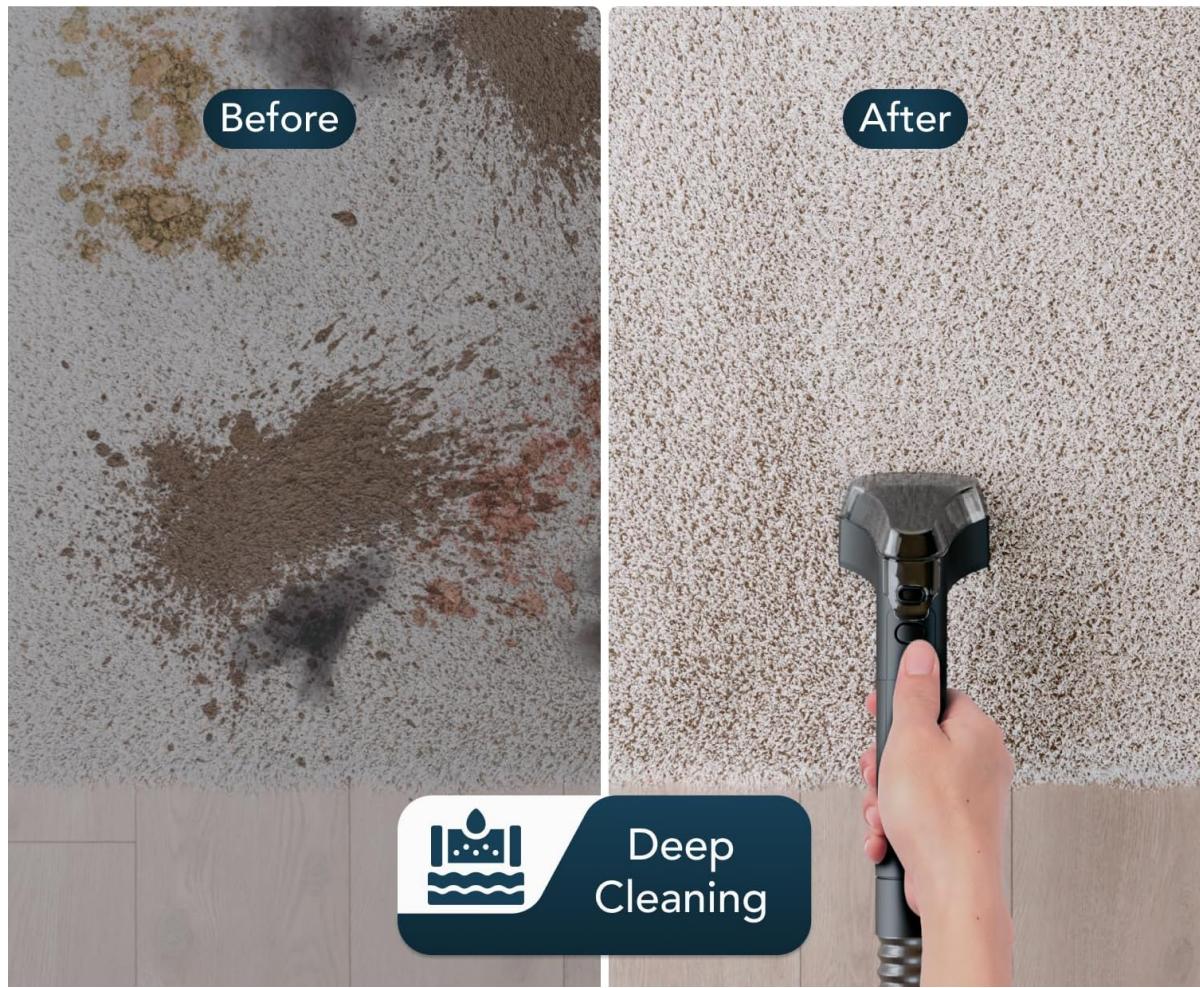


Image: A split image showing a stained carpet area before cleaning and the same area after cleaning with the RYER Spot Cleaner, demonstrating its effectiveness.

7. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your RYER Spot Cleaner.

- **After Each Use:**

- Empty and rinse both the clean and dirty water tanks thoroughly with clean water. Allow them to air dry before reassembling.
- Rinse the cleaning nozzle and brush attachments under running water to remove any debris or residue.
- Wipe down the exterior of the main unit with a soft, damp cloth.

- **Hose Cleaning:** If the hose becomes clogged or dirty, detach it and rinse it with warm water. You can run clean water through it while holding the nozzle to clear any blockages.

- **Storage:** Store the RYER Spot Cleaner in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure all tanks are empty and dry before storage. The compact design allows for convenient storage in small spaces.

Small, Compact, Portable

Lightweight, easy-to-use design for any space



Image: The RYER Spot Cleaner demonstrating its compact dimensions (14cm x 27cm x 26cm) for easy storage in a cabinet.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; Power outlet not working; Unit malfunction.	Ensure power cord is securely plugged into a working outlet. Check household fuse/circuit breaker. If problem persists, contact customer support.
No spray from nozzle.	Clean water tank empty; Tank not seated correctly; Spray nozzle clogged; Pump issue.	Refill clean water tank. Ensure tank is securely in place. Clean spray nozzle. Contact customer support if pump is suspected.
Poor suction.	Dirty water tank full; Dirty water tank not seated correctly; Hose/nozzle clogged; Suction opening blocked.	Empty dirty water tank. Ensure tank is securely in place. Clear any blockages from hose or nozzle. Check suction opening for obstructions.

Problem	Possible Cause	Solution
Water leakage.	Tanks not properly sealed; Hose not securely attached; Damaged tank/seal.	Ensure tank caps are tightly closed and tanks are correctly seated. Check hose connection. Inspect tanks and seals for damage; replace if necessary.

9. SPECIFICATIONS

- Brand:** RYER
- Model:** Portable Spot Cleaner
- Colour:** Black
- Product Dimensions:** 14D x 27W x 26H cm
- Clean Water Tank Capacity:** 0.8 Litres
- Dirty Water Tank Capacity:** 0.5 Litres
- Item Weight:** 3.18 kg

10. WARRANTY AND SUPPORT

RYER products are manufactured to the highest quality standards. In the unlikely event of a defect in materials or workmanship, please contact our customer support team.

For assistance, troubleshooting, or to inquire about warranty coverage, please refer to the contact information provided on your purchase receipt or visit the official RYER website.

Please have your product model and purchase date ready when contacting support.